- Clean Carefully The Water Pipes Before Installing Th - Installation Performed By Qualified Personnel Only!

WARNING required.

7

and turn the boiler off and non return valves are not shut off the incoming mains combination boilers are fitted it is only necessary to

hot and cold pipes as dose as possible to the tap. turn valves are fitted on both

supplied from a tank and cold from the mains, non rewhere the hot water is

These taps are double flow. Water bylaws require that

Preparation and bylaw requirements

5412:1996 where applicable.

These are not supplied. Where

Water Bylaws Scheme and comply with requirements of British Standard All products are manufactured using materials tested and approved under the

installation process, incorrect maintenance or misuse and as a result not be Defects notified after fitting may be regarded as damage resulting from the

Approvals claimable under the warranty.

- On receipt of this product the chrome finish must be checked for blemishes. product may not correctly work or not work at all.

- if the above mentioned conditions (see points 1,2,3,4) are not observed, the 5. Warning:

4. We recommend installing filters to this product.

Standard specifications thoroughly after installation to avoid damaging the ceramic disc.


valves on both hot and cold feeds. It is very important that all pipe work is flushed then the tap will not function correctly. It will also be necessary to fit non-return combination boiler for example). If the taps are not supplied at balanced pressures water at balanced pressures, both from the tank or both from the mains (via a cold water are separated) and should therefore be supplied with hot and cold contained in their bylaws. All of the taps in this range are double flow (the hot and The installation must comply with regulations of the Local Water Authority as

General Installation Requirements

reference.

Please read these instructions carefully and keep in a safe place for future

INTRODUCTION

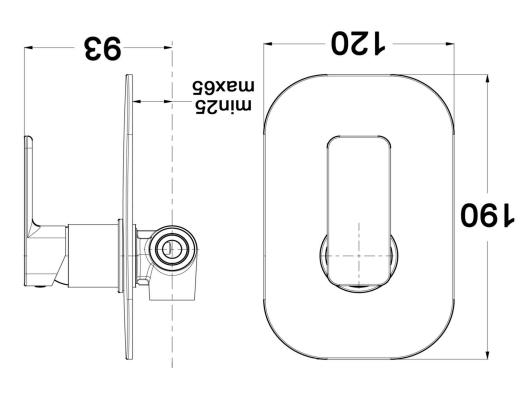

AT0004RC

DIWENSIONS

This product should only be fitted by a qualified plumber to NVQ (National Vocational Qualification) or SNVQ (Scottish National Vocational Qualification) Level 3. Should the installation be completed by a non-qualified person then the guarantee may be considered invalid.

For a claim made under our warranty written certification of your installers credentials can be required. For further information or to find a qualified installer in your area please visit the Institute of Plumbers website - www.iphe.org.uk.

THE QUALIFICATIONS

At present, to be a plumber you need to follow the National Vocational Qualification (NVQ) route (Scottish National Vocational Qualification - SNVQ - in Scotland). These qualifications are made up of theory and practical work in the classroom/purpose built training facility and work based experience with a working plumber. Colleges should help students find a work placement, although many students organise it themselves.

The S/NVQ qualification works in levels. All recently qualified plumbers should hold S/NVQ Level 2 as basic with Level 3 as the preferred level. Level 2 will give you the foundation you need for a career in plumbing and teach you domestic plumbing to a satisfactory level. Level 3 is more comprehensive and deals with domestic, commercial and industrial plumbing along with aspects such as gas - if you want to one day set up

your own business, this is the level to reach. The Institute of Plumbing and Heating Engineering, and the industry as a whole recommends that all plumbers reach a minimum of Level 3.


Reaching Level 3 has other advantages. The Institute runs a Master Plumber Certificate, which only those attaining Level 3 or equivalent can reach as long as they have the relevant experience as well. Those with S/NVQ Level 3 can (once in membership with the Institute for five years as a Member MIPHE) gain Engineering Technician EngTech status with the Engineering Council (UK).

For any further information please contact Crosswater on: 0845 873 8840 Or visit our web-site at www.crosswater.co.uk The manufacturer reserves the right to make technical modifications without prior notice.



BUILT-IN SHOWER MIXER


AT0004RC

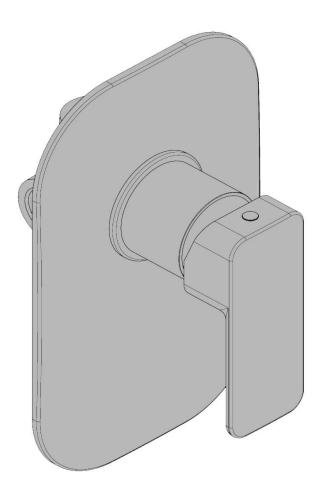






piping with plenty of water prior to installation.


maintenance.

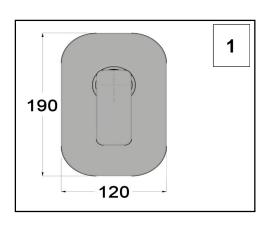

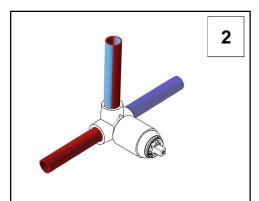

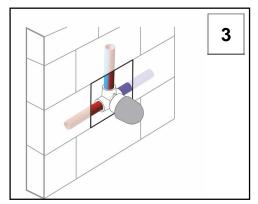

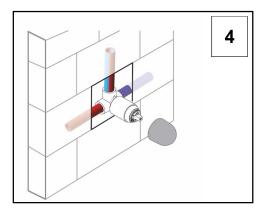

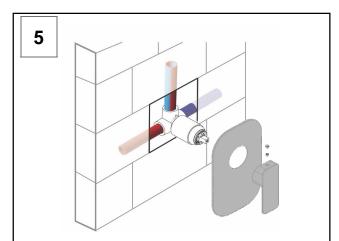

"Decide on a suitable position for the Mixer where all users can operate, determine the route for the incoming cold/hot supply pipe work and the outlet pipe work. Mark an opening sufficient to accommodate the Mixer body, whose dimension is to be smaller than concealing plate (1).

Remember to turn off the mains water supply before connecting to any existing pipe work. Flush the

First shut off your water heating system then, with you remains stop cock closed, open the Lowest hot and cold taps in the house and allow to run until the cold storage tank and pipes

Where combination boilers are fitted it is only necessary to turn off the boiler and shut off

the incoming mains. Fitting isolating valves to the inlet feeds is recommended for ease of

are empty (the hot water storage cylinder airways remains full).

"Install the Hot and Cold Supply (2). Use the upper outlet way for head shower.


"Keep the Plastic Shroud (3) on the Built-in Mixer till the wall is not completed finished. When Tiles have set, remove the Shroud (4), insert the concealing plate (5) smooth side against the wall. Fit the Lever Assembly in place hand tighten it to secure the concealing plate.

crosswater^X

5

MAINTENANCE

AT0004RC

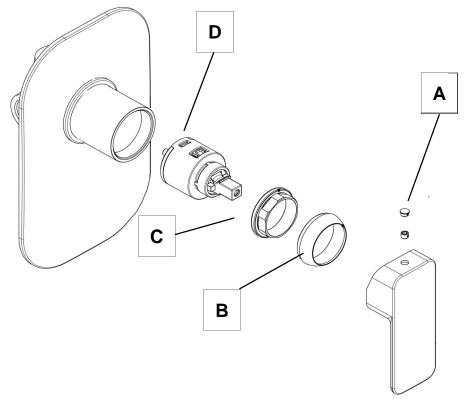

CLEANING THE CARTRIDGE

The concealed cartridge should give trouble free service, but in the event of any problems, servicing is straight forward.

First shut off the water supply to the tap. Pull out the cap (A) from the handle and with an allen key loosen the grub screw in handle, but do not remove it. Take off the handle, unscrew the cartridge cover (B) and carefully using a correct size spanner unscrew the retaining nut (C) and remove the cartridge (D). Wash the cartridge with clean running water and make sure that any trapped debris have been removed. Dry and lightly grease the seals (only use silicone grease) and replace the cartridge, retaining nut, cartridge cover followed by the handle.

CLEANING

The chrome plate we use on our taps is very durable, nevertheless care should be taken when cleaning them. They should be cleaned only with warm soapy water followed by rinsing with clean water and drying with a soft cloth. All finishes are vulnerable to acid attack and some strong substances such as household cleaners, disinfectants, denture cleaners, hair dyes, wine making and photographic chemicals can cause the surface to go black or peel.