


MILLENIUM SMALL BOTTLE TRAP--400MM PIP

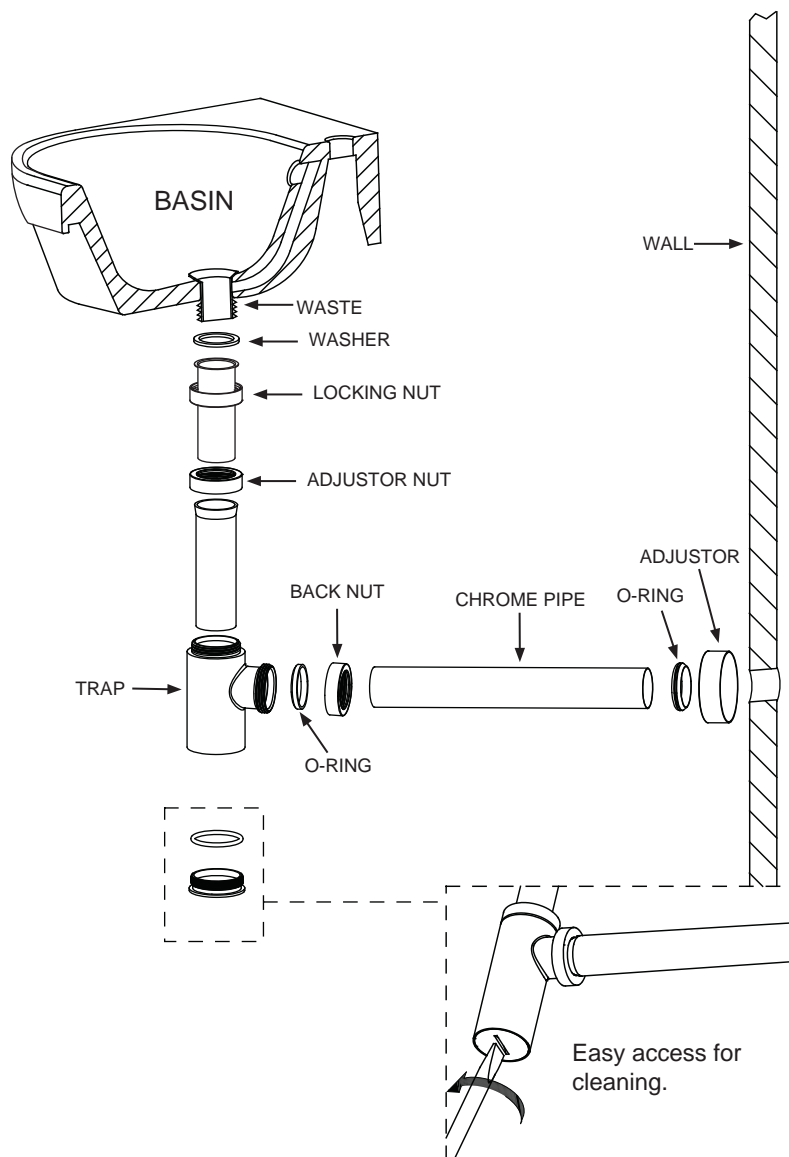

Installation

1. Lubricate the o-rings of adaptor with silicon based grease.
2. Cut the tube not supplied protruding through the wall to length required for adaptor to finish against wall.
3. Slide adaptor over the tube.
4. Place basin trap under basin waste and tighten locking nut to basin waste.
5. Loosen adjustor nut and adjust height of trap so that the back water exit is in position to allow for around 5 degree fall back to the wall , then tighten locking nut.
6. Cut chrome pipe to length required to fit between the back of the basin trap and the adaptor.
7. Remove basin trap from basin waste.
8. Push and twist chrome pipe fully into adaptor.
9. Loosen back nut and remove the o-ring. Then place this nut and o-ring over the end of chrome pipe.
10. Slide the back water exit of the basin trap over the chrome pipe, then slide back nut and o-ring into position and tighten.
11. Place the locking nut to the basin waste and tighten.

For any further information please contact
Crosswater on: **0845 873 8840**

Or visit our web-site at www.crosswater.co.uk

The manufacturer reserves the right to make technical
modifications without prior notice.

INSTALLATION INSTRUCTIONS