


ASURA

Sliding Door & Side Panel

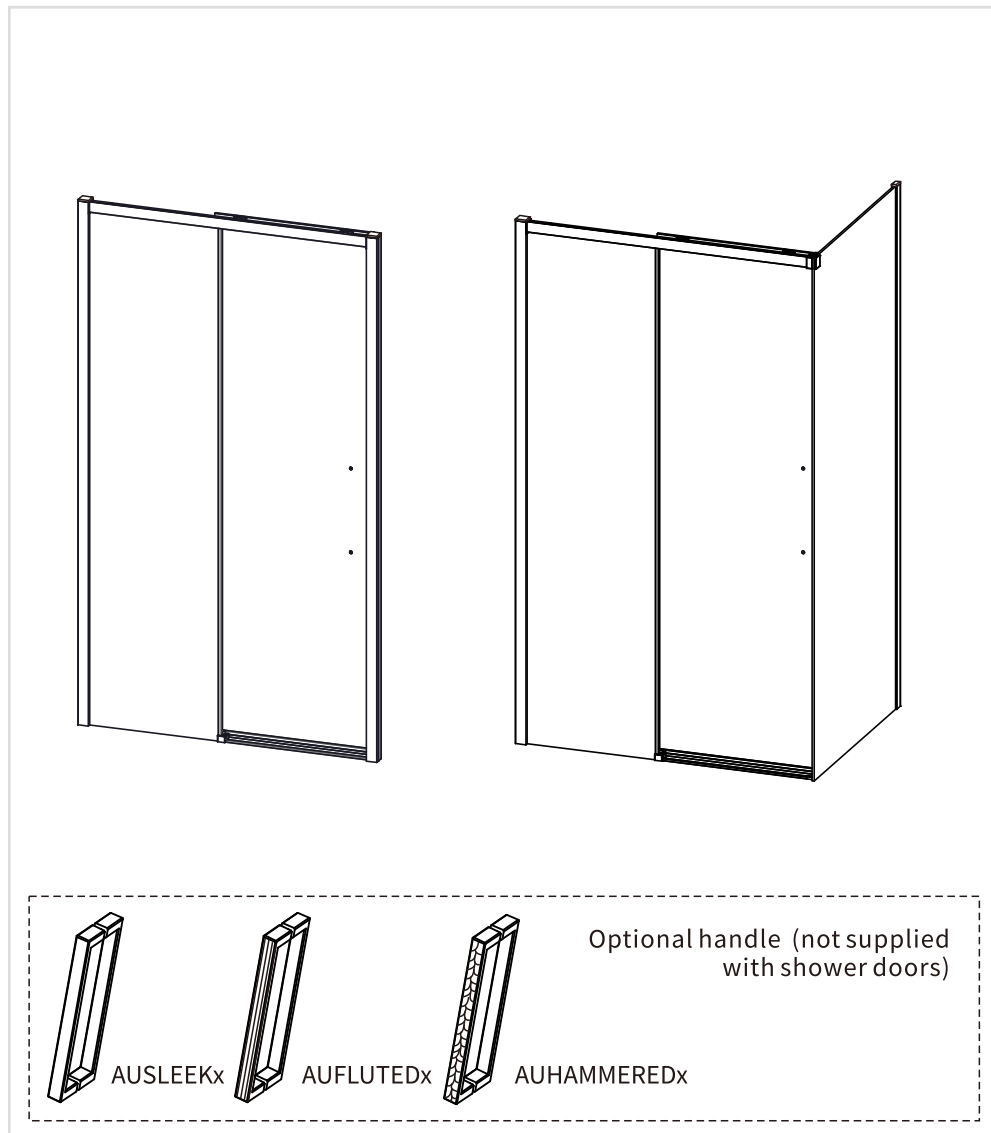

PRODUCT CODES:

AUSLSC1200	AUSLBZC1200
AUSLSC1400	AUSLBZC1400
AUSLSC1500	AUSLBZC1500
AUSLSC1700	AUSLBZC1700
AUSLBC1200	AUSLTC1200
AUSLBC1400	AUSLTC1400
AUSLBC1500	AUSLTC1500
AUSLBC1700	AUSLTC1700
AUSLFC1200	
AUSLFC1400	
AUSLFC1500	
AUSLFC1700	
AUSLVC1200	
AUSLVC1400	
AUSLVC1500	
AUSLVC1700	
AUSLSPSC0800	
AUSLSPSC0900	
AUSLSPBC0800	
AUSLSPBC0900	
AUSLSPFC800	
AUSLSPFC900	
AUSLSPVC0800	
AUSLSPVC0900	
AUSLSPBZC0800	
AUSLSPBZC0900	
AUSLSPTC0800	
AUSLSPTC0900	



IMPORTANT INFORMATION

Please read carefully and keep this information for further reference.

BEFORE STARTING THE INSTALLATION ENSURE ALL THE DOOR SIZE MEASUREMENTS CORRESPOND WITH THE INSTALLATION AREA INCLUDING THE FINISHED TILED/PANELLED WALLS. RETURNS DUE TO INCORRECT SIZING WILL NOT BE ACCEPTED.

Check the contents of the pack carefully before installation. Crosswater will not be held responsible for any de-fit / re-fit costs where faulty product has been fitted. If any fault is found with materials or workmanship, it must be reported immediately to the manufacturer. Remedial action will be taken, based on information received, on condition that:

1.Full details are supplied to the manufacturer;


2.The enclosure has not been modified or tampered with;

3.The manufacturer is informed of any damage/shortages prior to installation.

VERY IMPORTANT

You must complete all tiling and grouting, and the shower tray **MUST** be level and fully sealed to the tiles before installation. If you do not fit the enclosure onto a tiled surface, or seal the tiles to the tray before installation, water may soak into the wall behind the wall profiles.

ORIENTATION

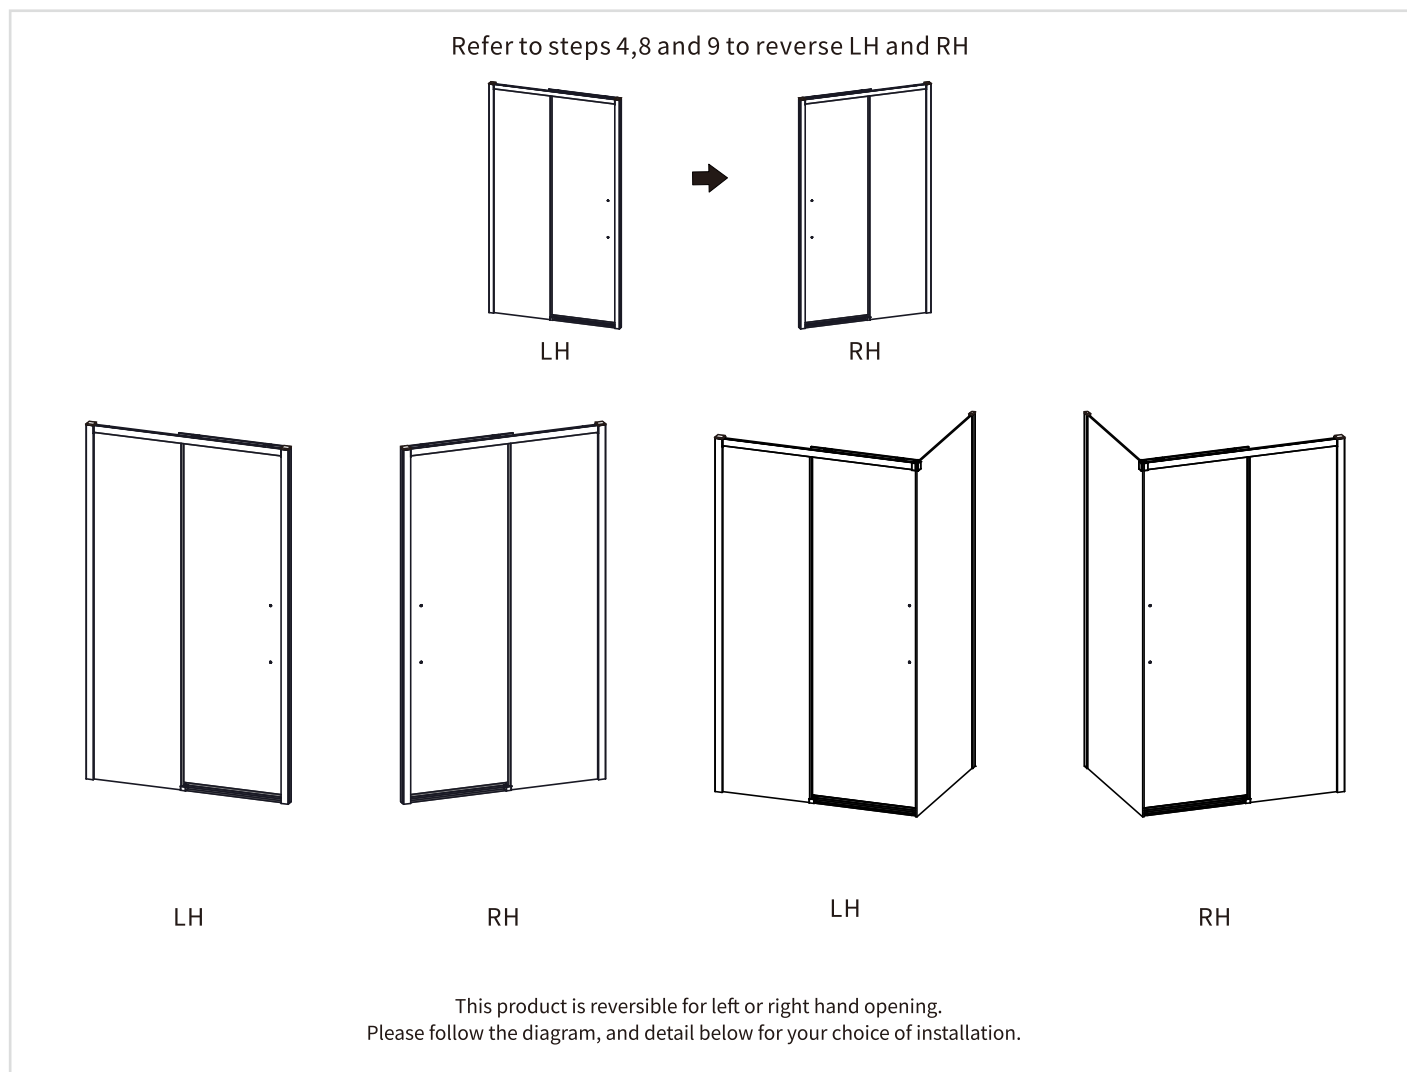

IMPORTANT INFORMATION

Please read carefully and keep this information for further reference.

The installation instructions are based on typical use and conditions. All doors are designed to open to the left or right. These hints have been prepared for your guidance, you must exercise due care at all times. For Health and Safety 2 people must carry out the installation of this shower enclosure. Handle glass with care. Although the glass supplied is toughened safety glass (EN12150), impacts can damage both the glass and the frame.

BEFORE YOU START

Warning!










Please check for any hidden pipes or cables before drilling holes in the wall.

When using power tools always follow the manufacturers user instructions.


If the Framework is sealed to the tray on the inside, any water that may get into the framework will not be able to drain back into the tray, this may cause the enclosure to leak.









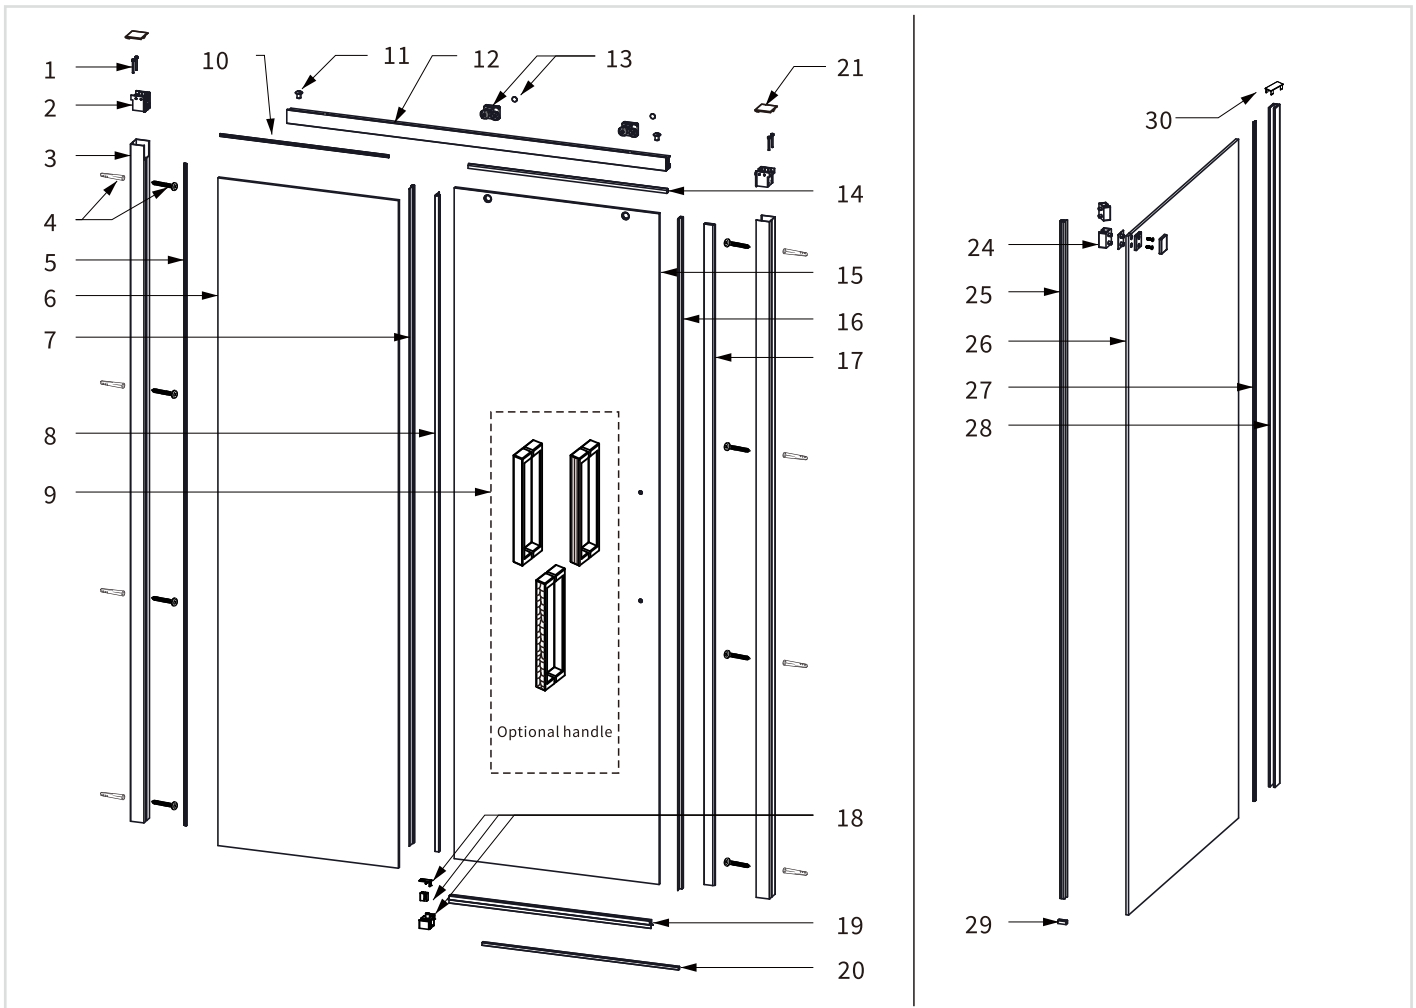






















Leave the silicone sealant to dry for 24 hours before using the enclosure.

Tools Required (not supplied):



Spirit Level		Torque Screw Driver	
Pencil		Snips	
Drill		6mm Drill Bit	
Silicone		Measuring Tape	
Knife			

COMPONENTS





1		4*35 mm Screw x4
2		Connector L x1 R x1
3		Wall Profile L x1 R x1
4		Wall Plug and 4x50mm Screw x8
5		Wedge Seal x1
6		Fixed Panel x1
7		Moving Panel Seal x1
8		Fixed Panel Seal x1
9		Optional handle (not supplied with shower door) x1
10		Wedge Seal x1
11		6*8 mm Screw x2
12		Top Rail x1
13		Top Roller x2
14		Top Rail Cover x1
15		Moving Panel x1
16		Moving Panel Seal x1
17		Wall Profile Cover x1
18		Bottom Guide x1
19		Bottom Seal x1
20		Bottom Profile x1
21		Wall profile cap x2
22		Allen Key 2.5mm x1 3mm x1 4mm x1
23		Wedge gasket tool x1
24		Fixed Bracket L x1 R x1
25		Side Panel Seal x1
26		Side Panel x1
27		Wedge Seal x1
28		Wall Profile x1
29		Bottom connector x1
30		Wall profile cap x1
31		Panel tool x1

INSTALLATION

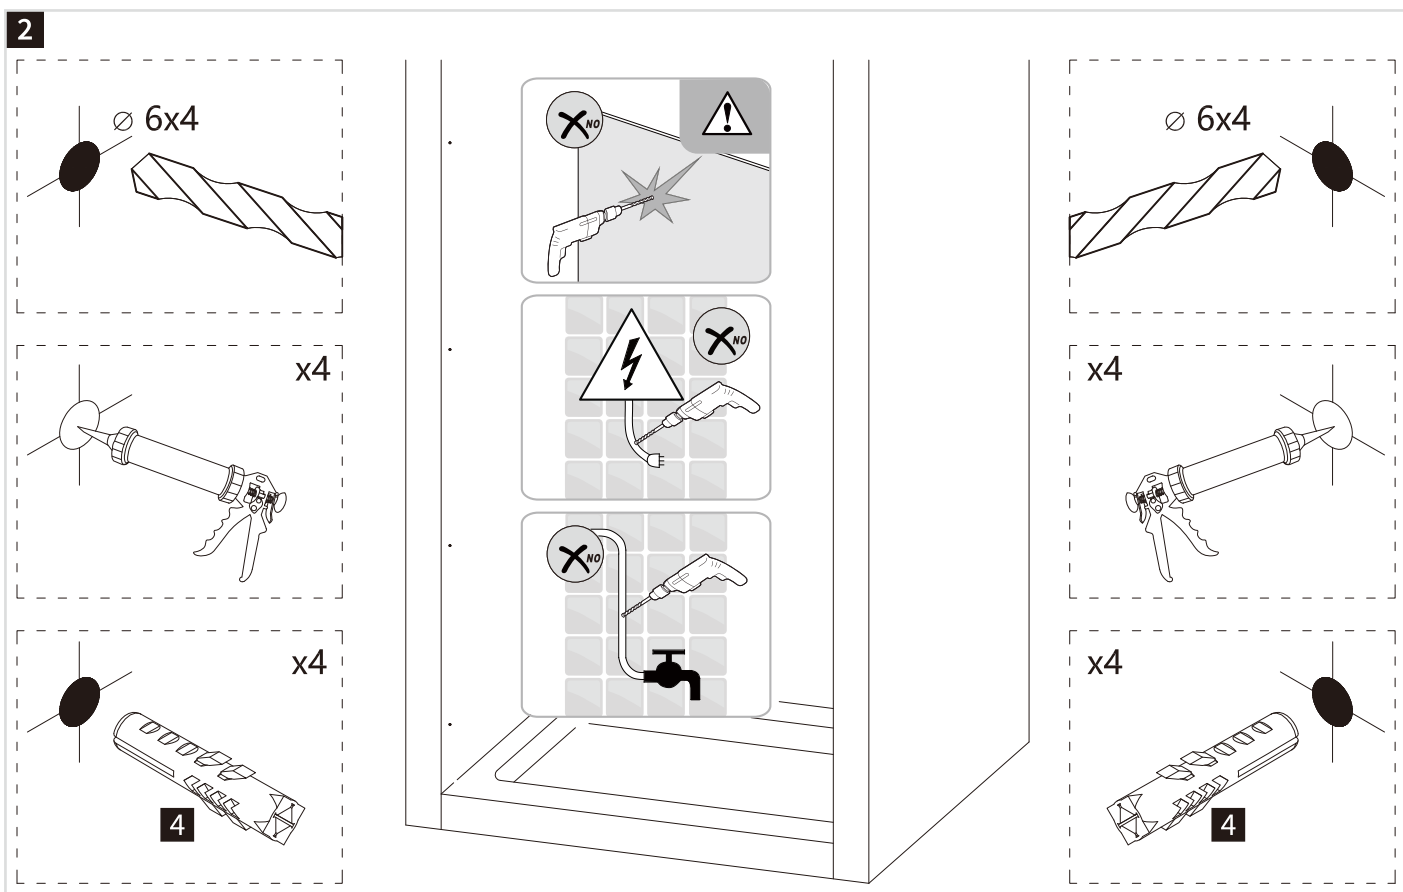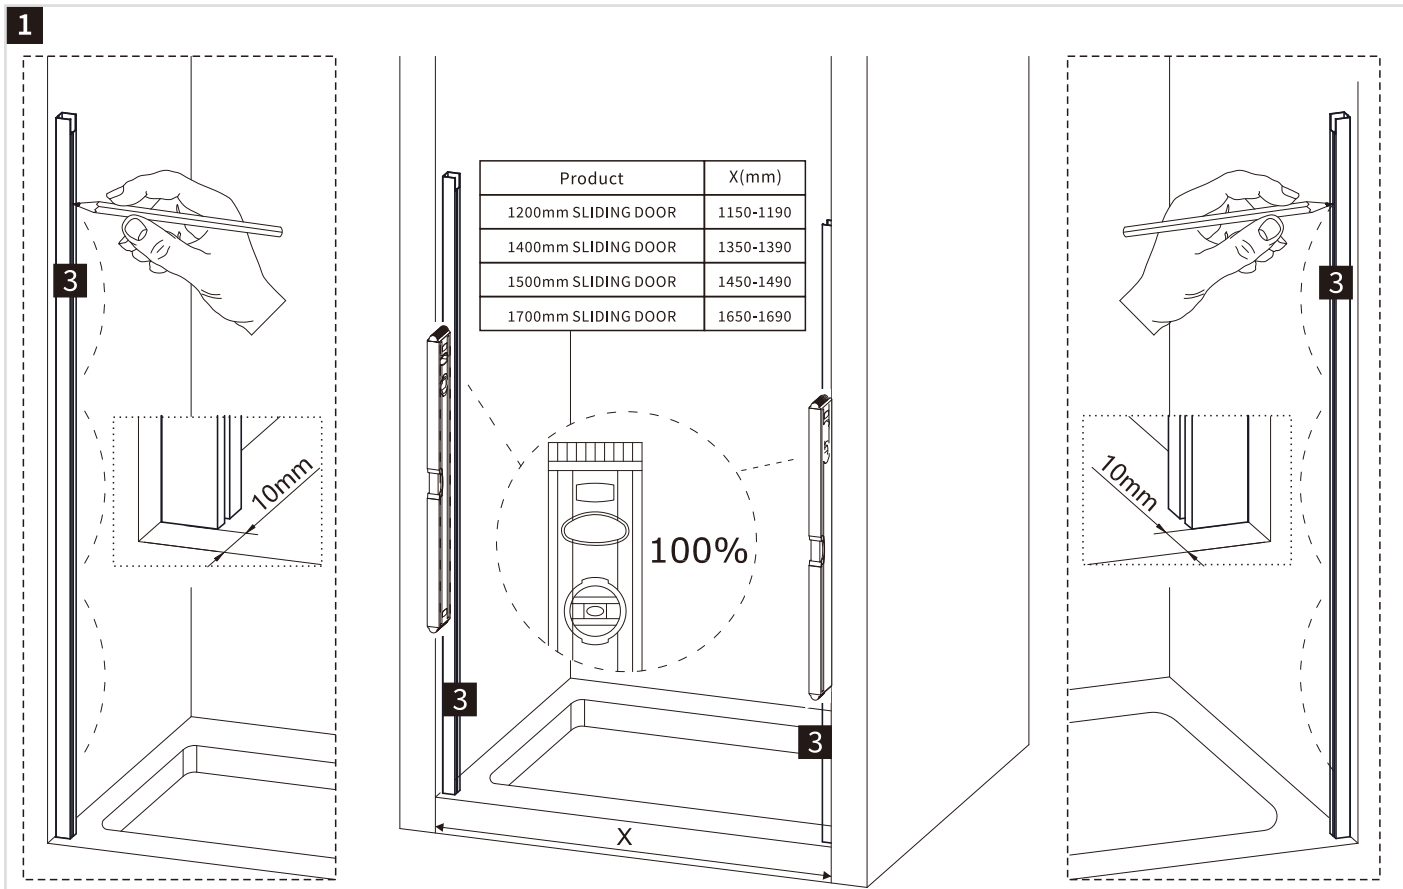


INSTALLATION

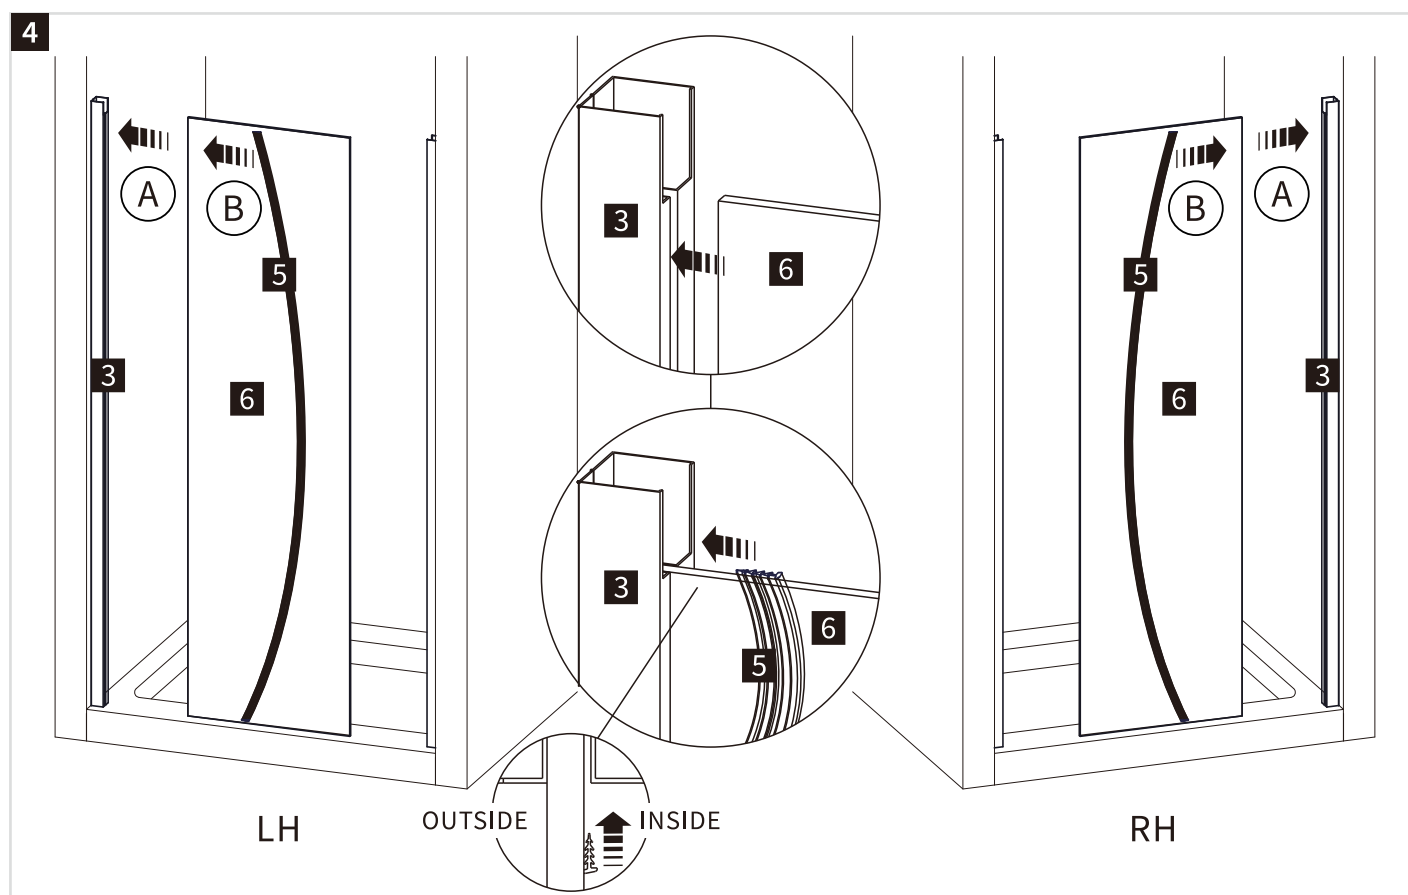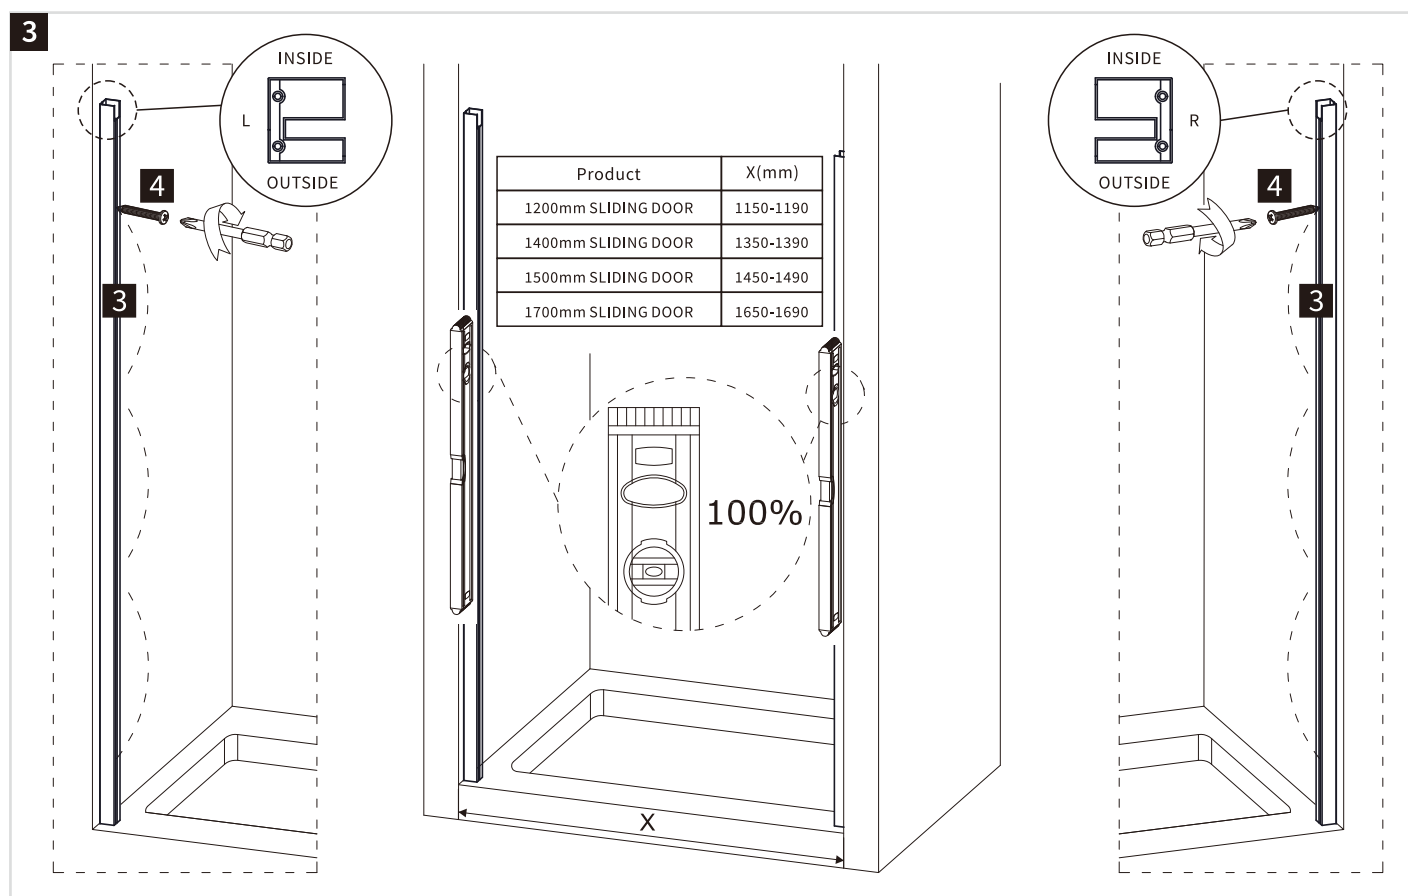


INSTALLATION

5

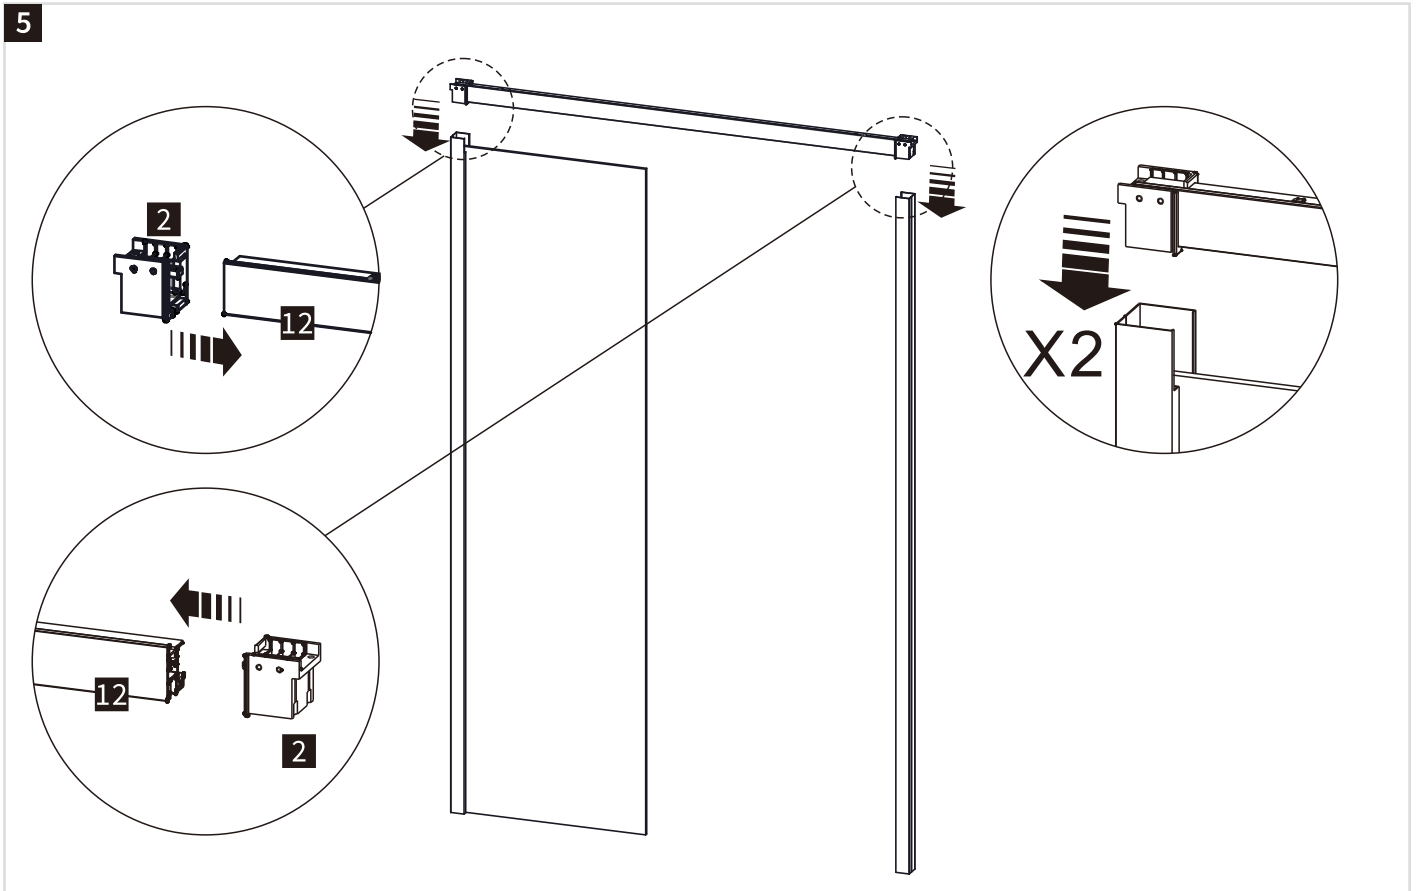


6

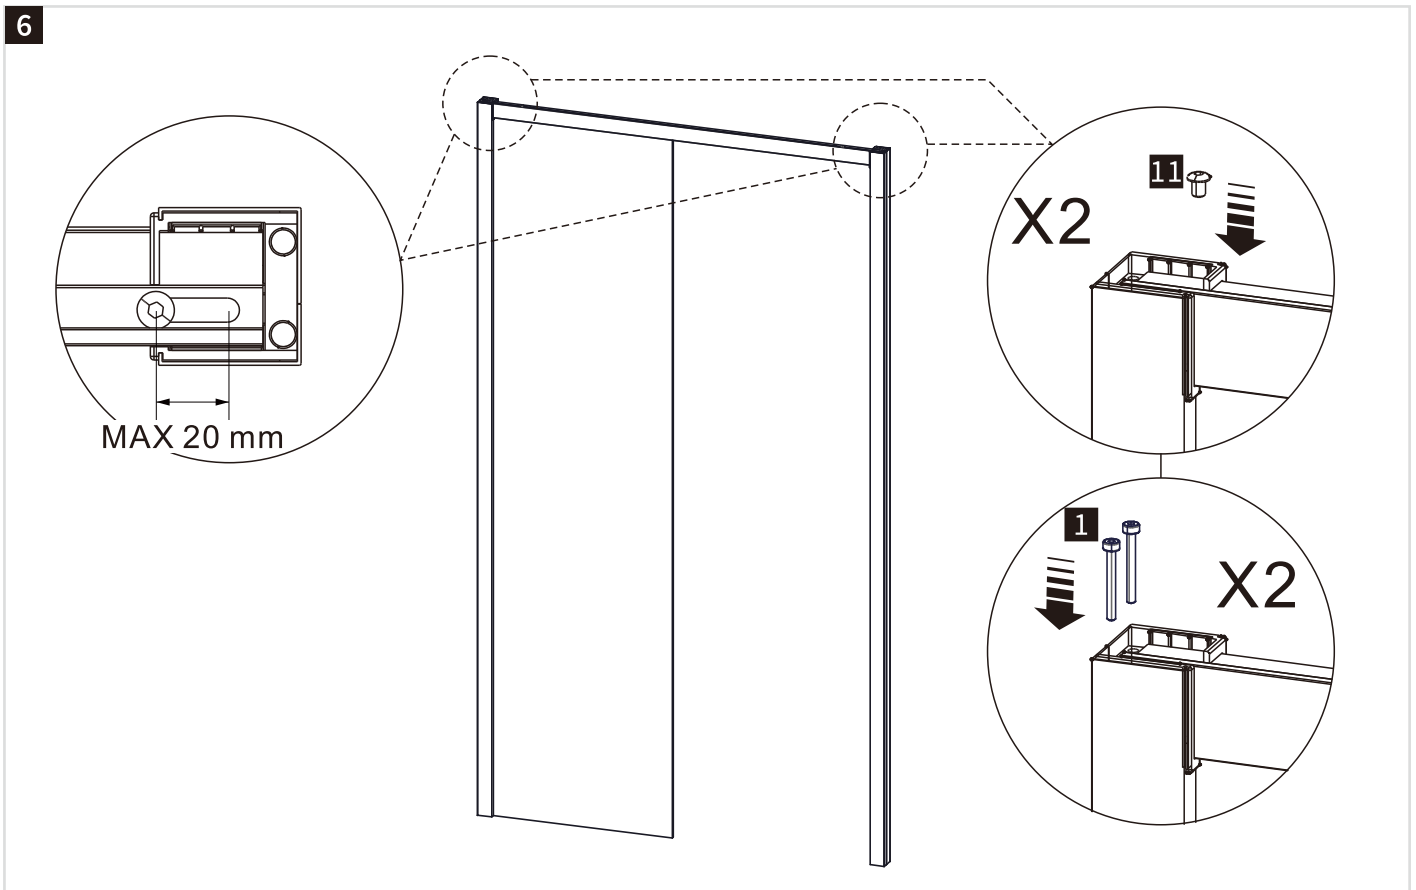


INSTALLATION

7

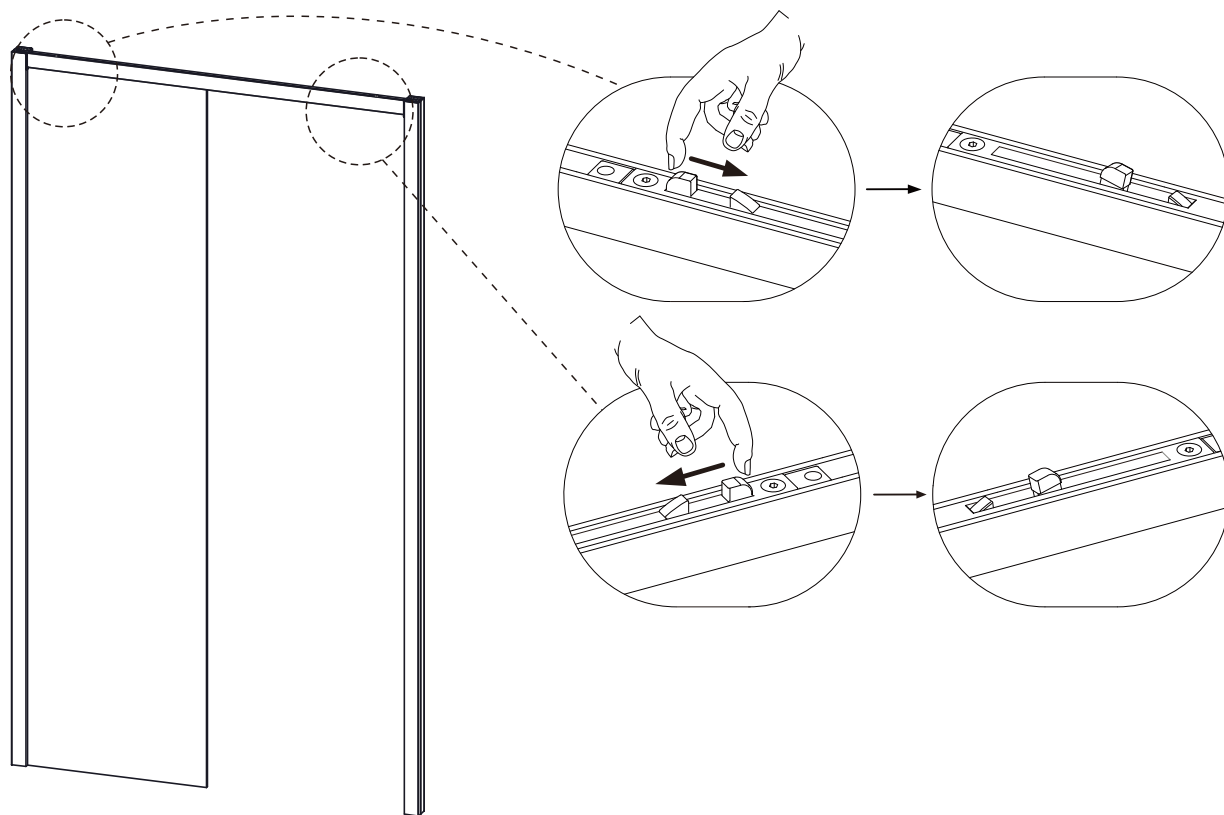


8

Insert the rollers into the top rail first, then fix the rollers and moving glass.

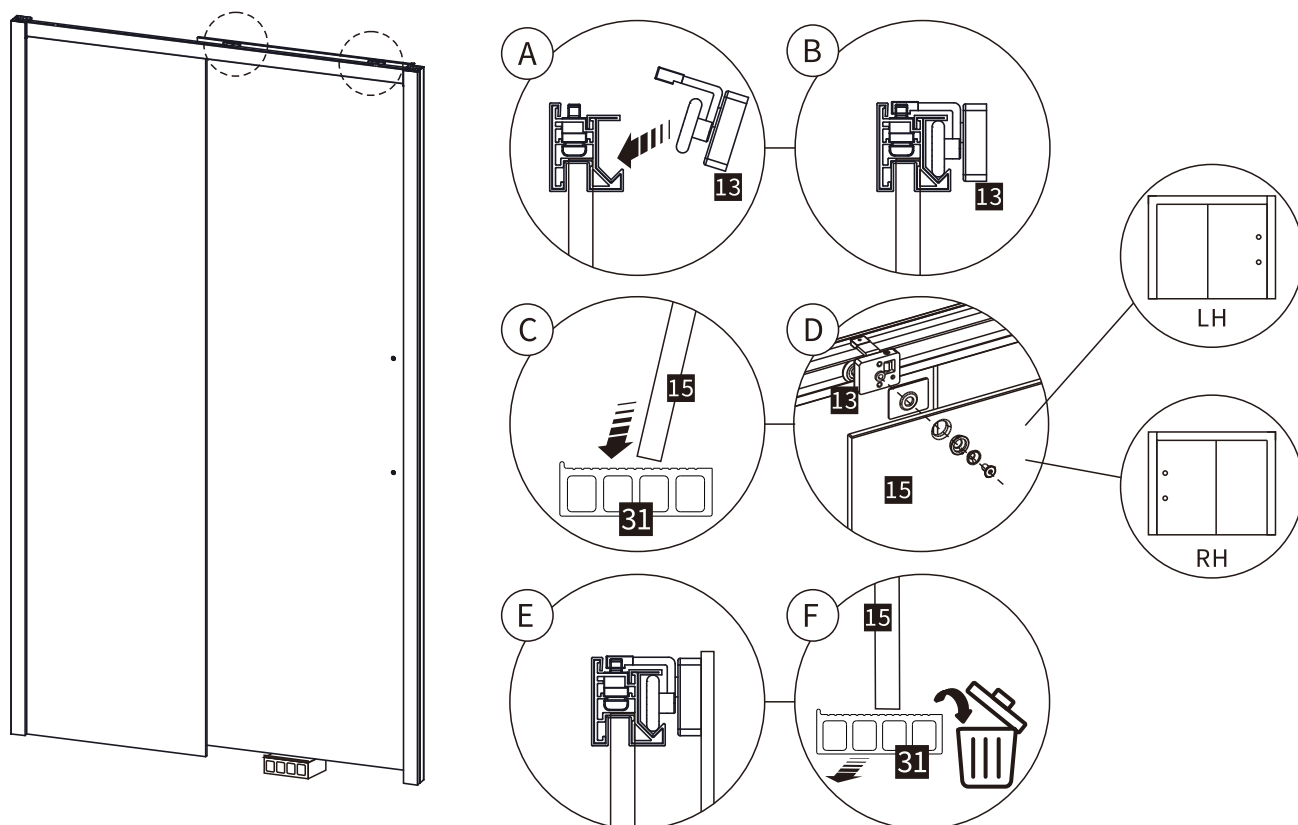


INSTALLATION

9

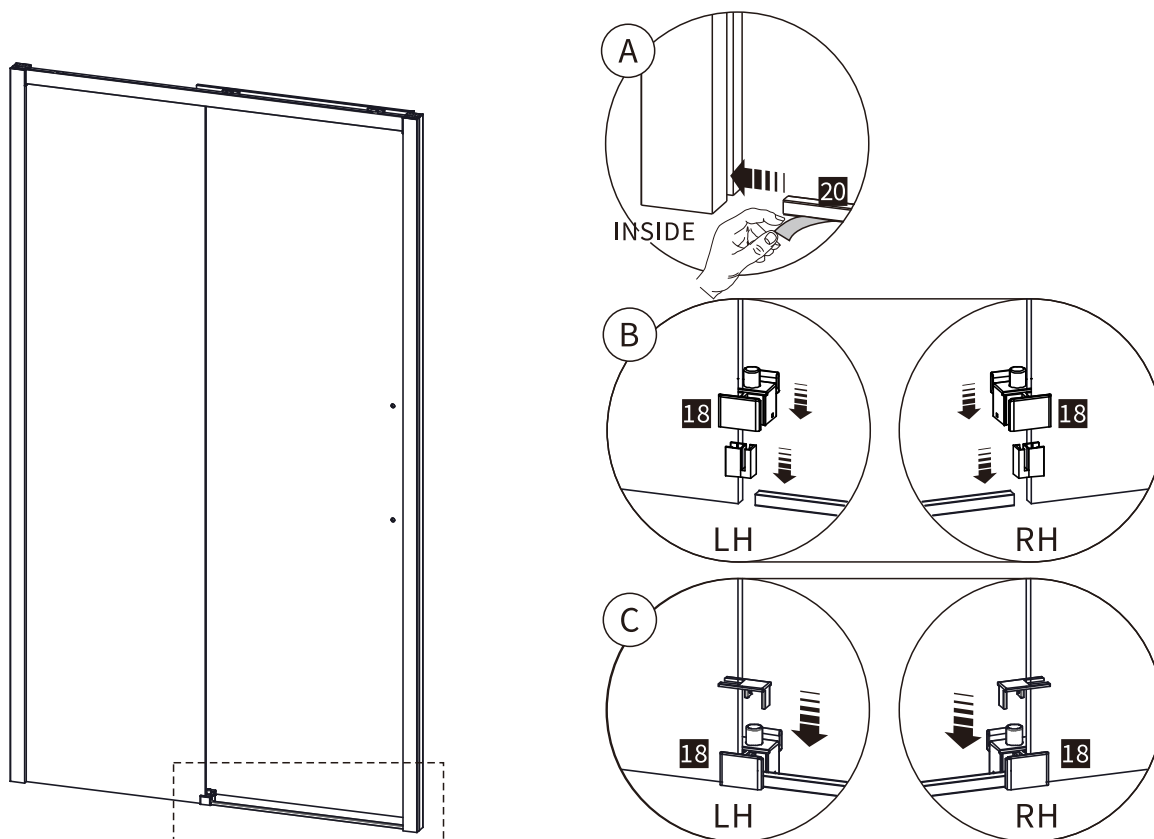


10

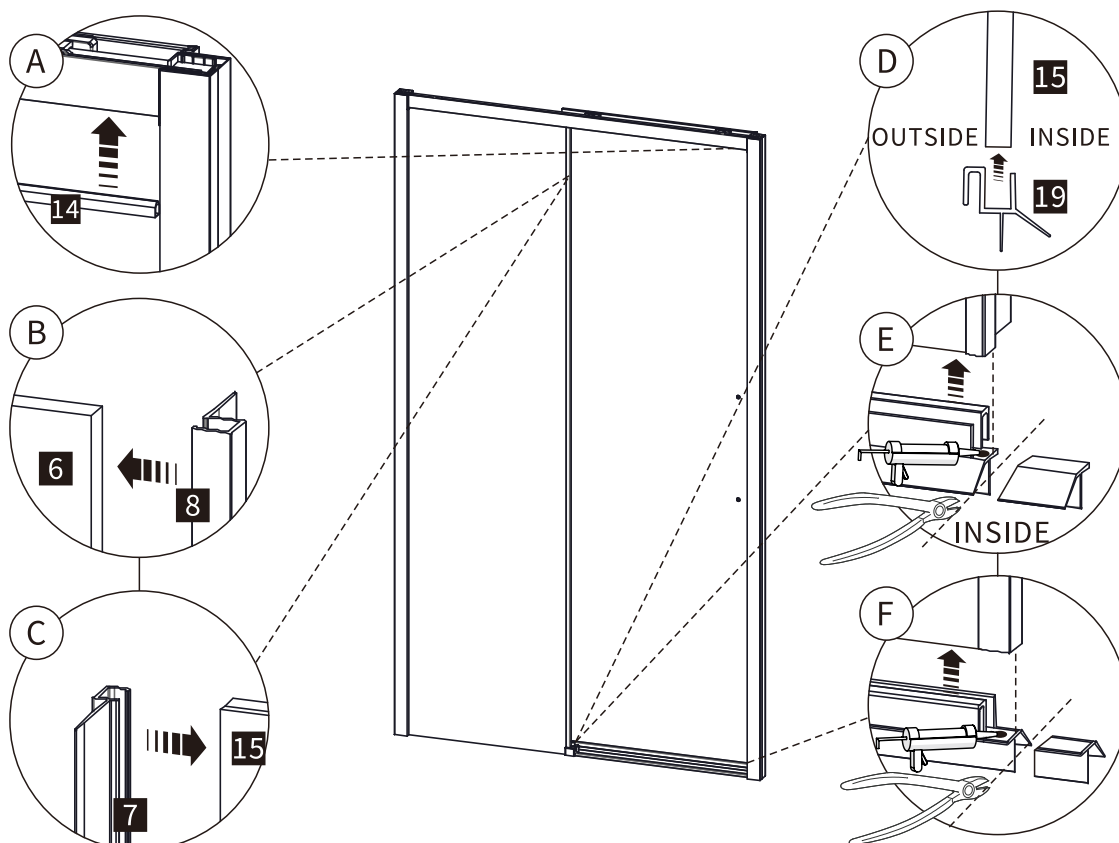


INSTALLATION

11

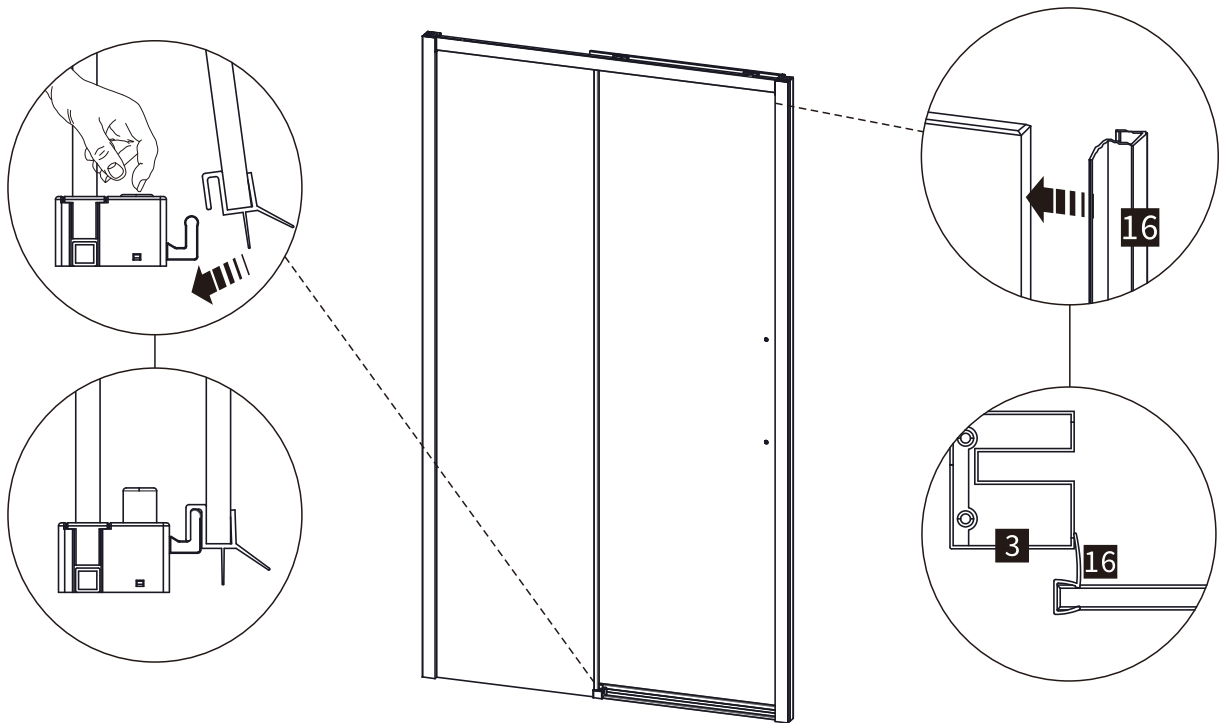


12

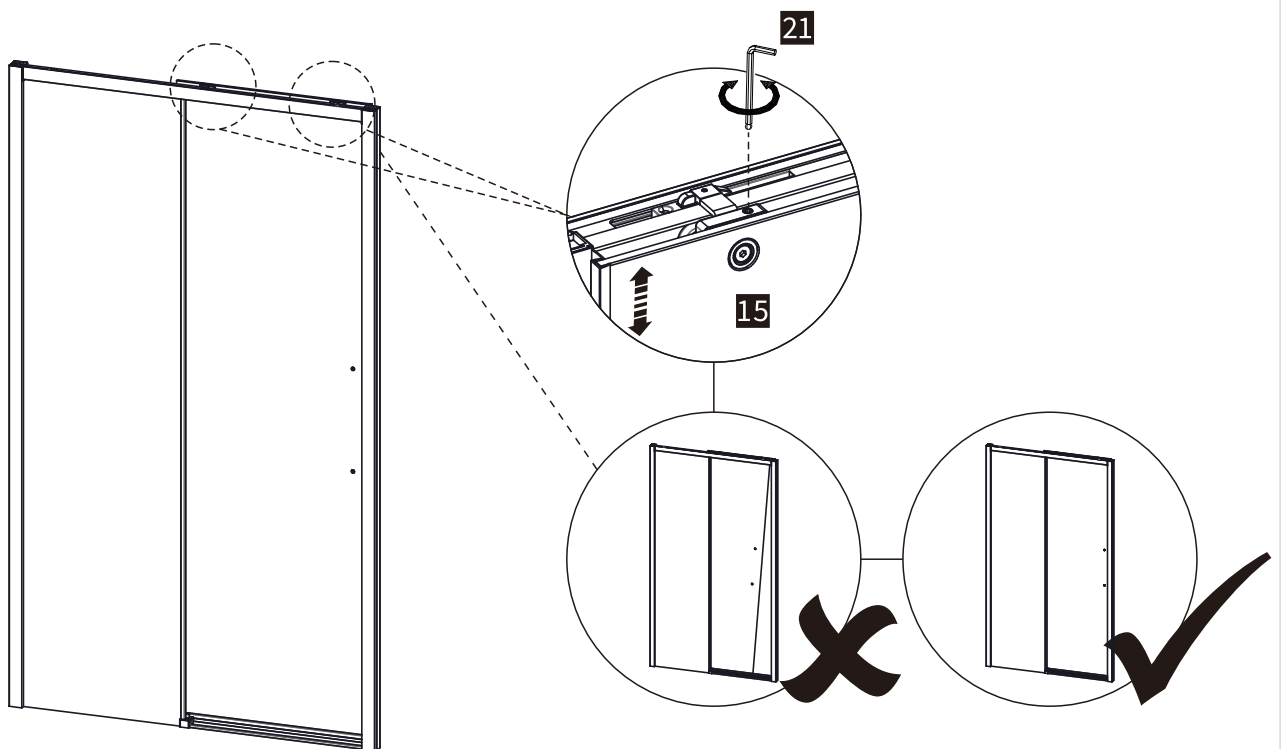


INSTALLATION

13

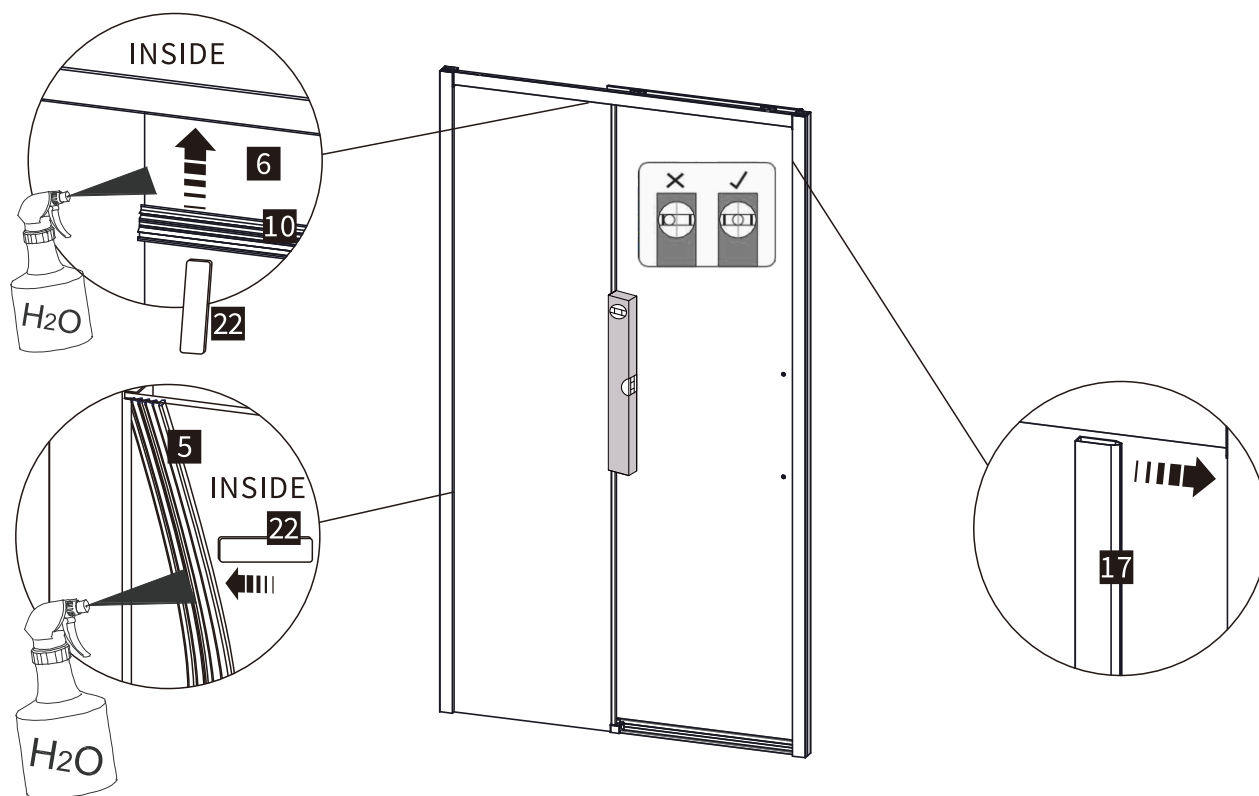


14

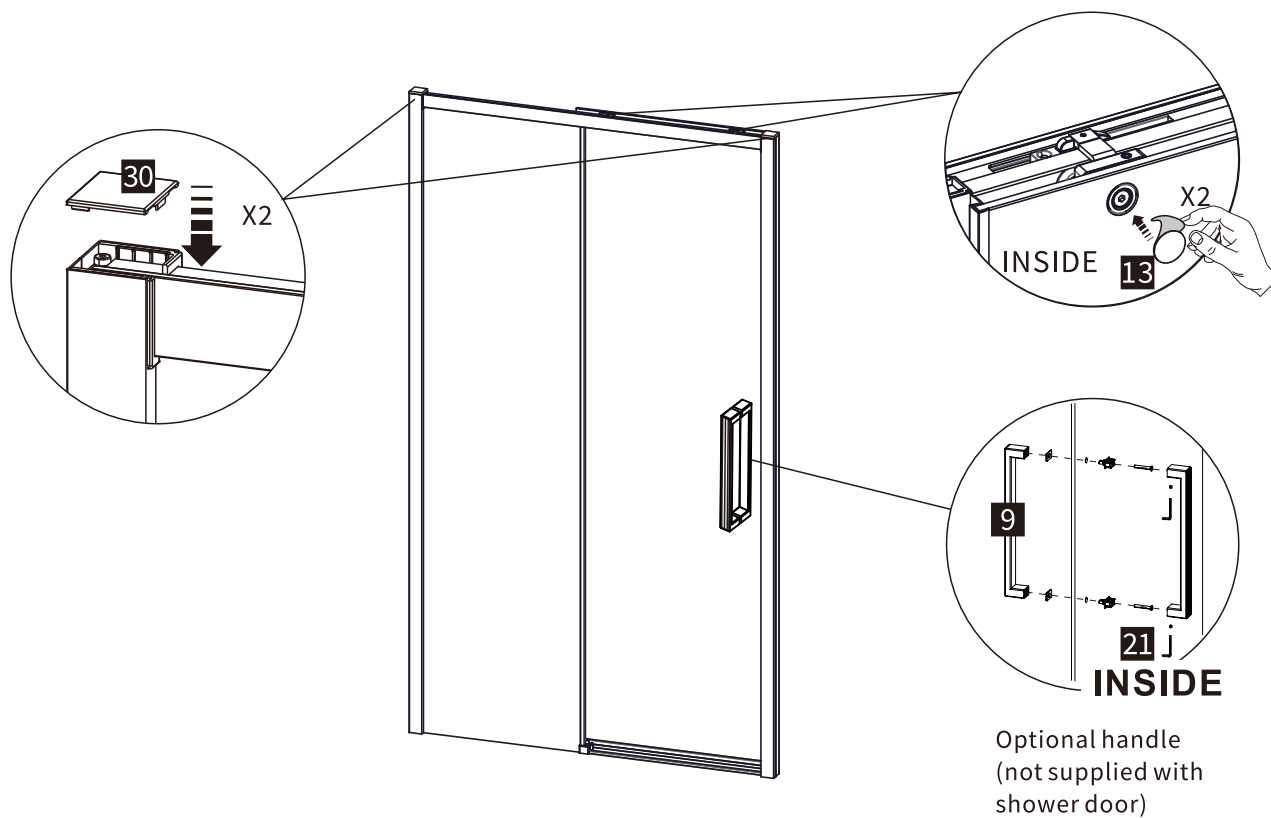


INSTALLATION

15

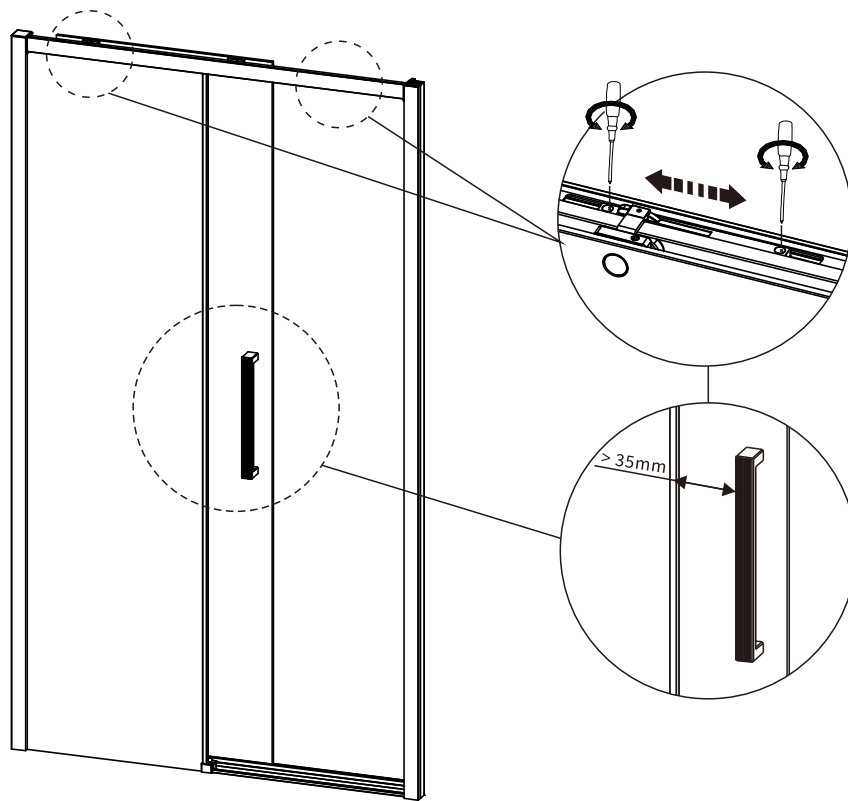

16


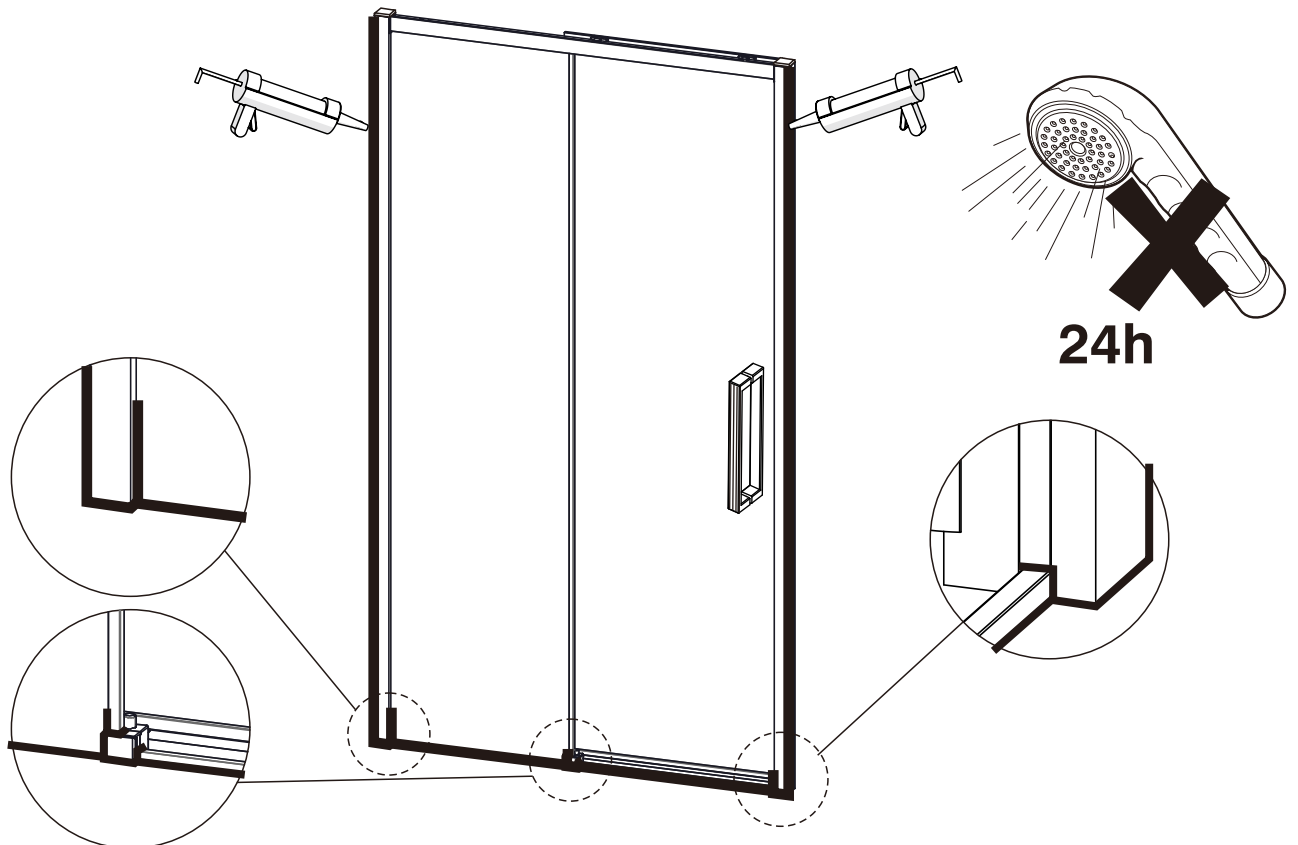


INSTALLATION






17

Product	X(mm)
1200mm SLIDING DOOR	1156-1176
1400mm SLIDING DOOR	1356-1376
1500mm SLIDING DOOR	1456-1476
1700mm SLIDING DOOR	1656-1676

Product	Y(mm)
800mm SIDE PANEL	770-790
900mm SIDE PANEL	870-890

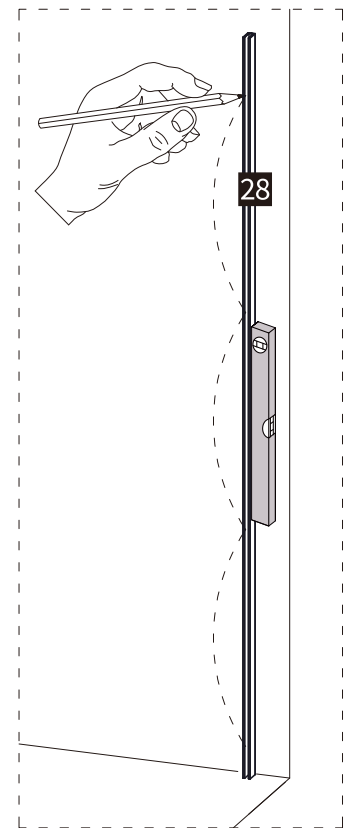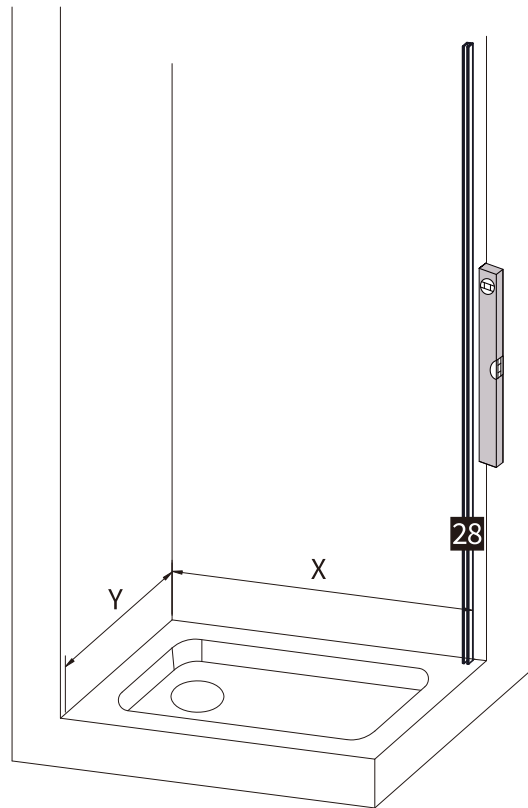


18

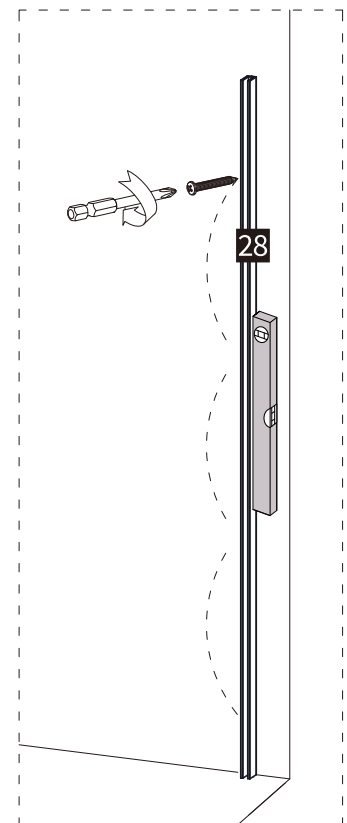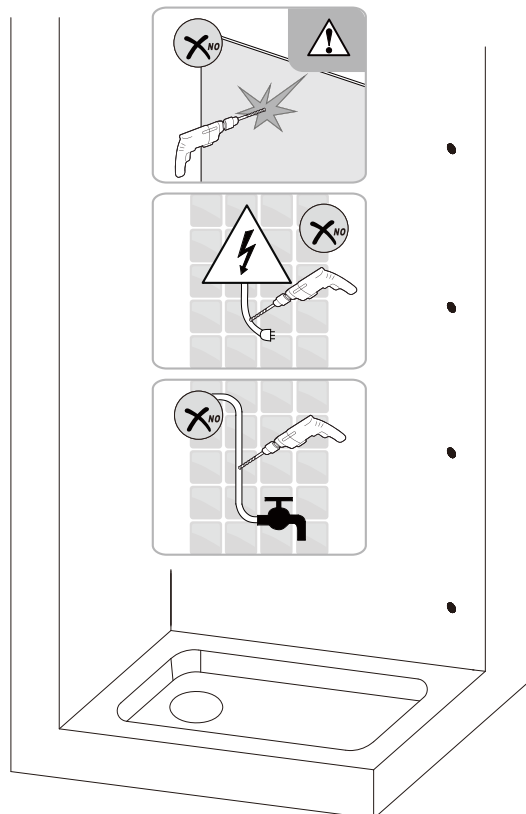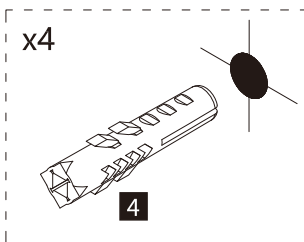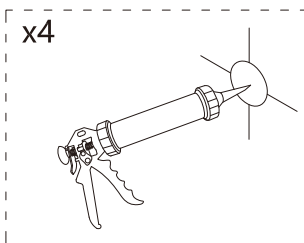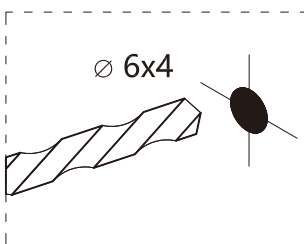


INSTALLATION

19

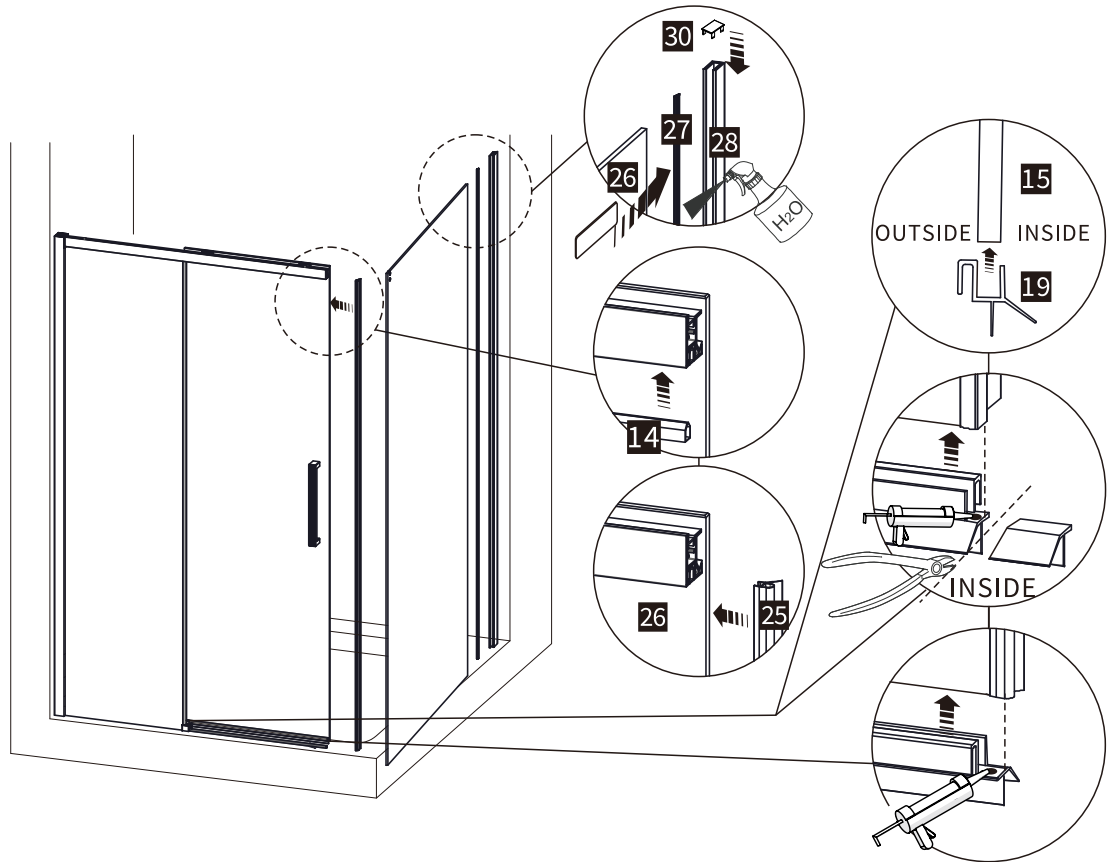


20

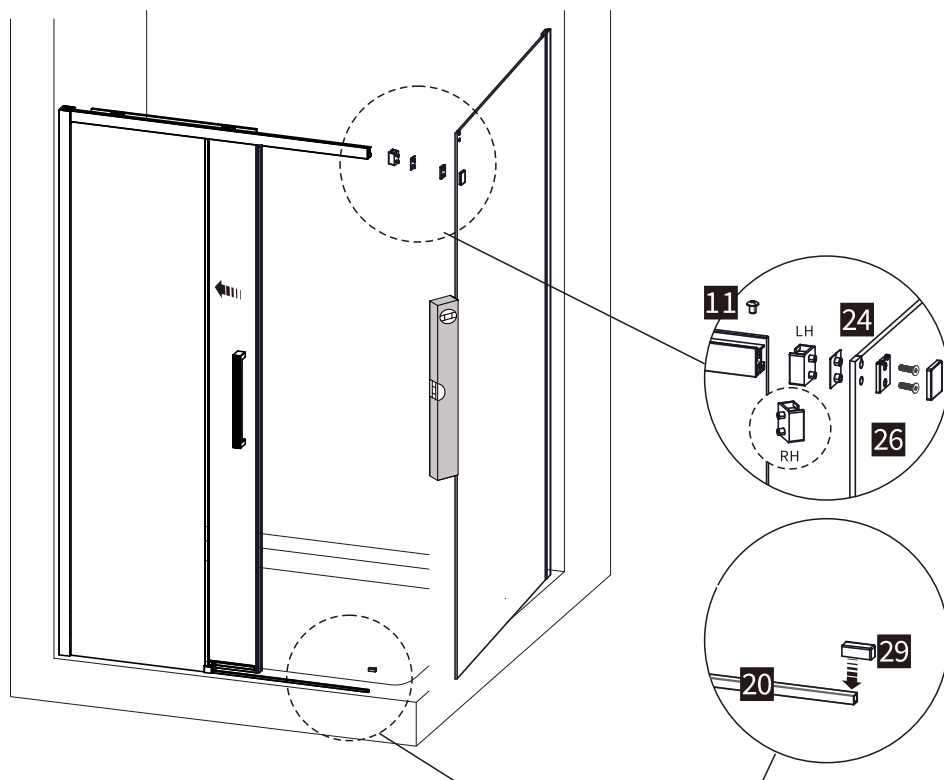

INSTALLATION

21

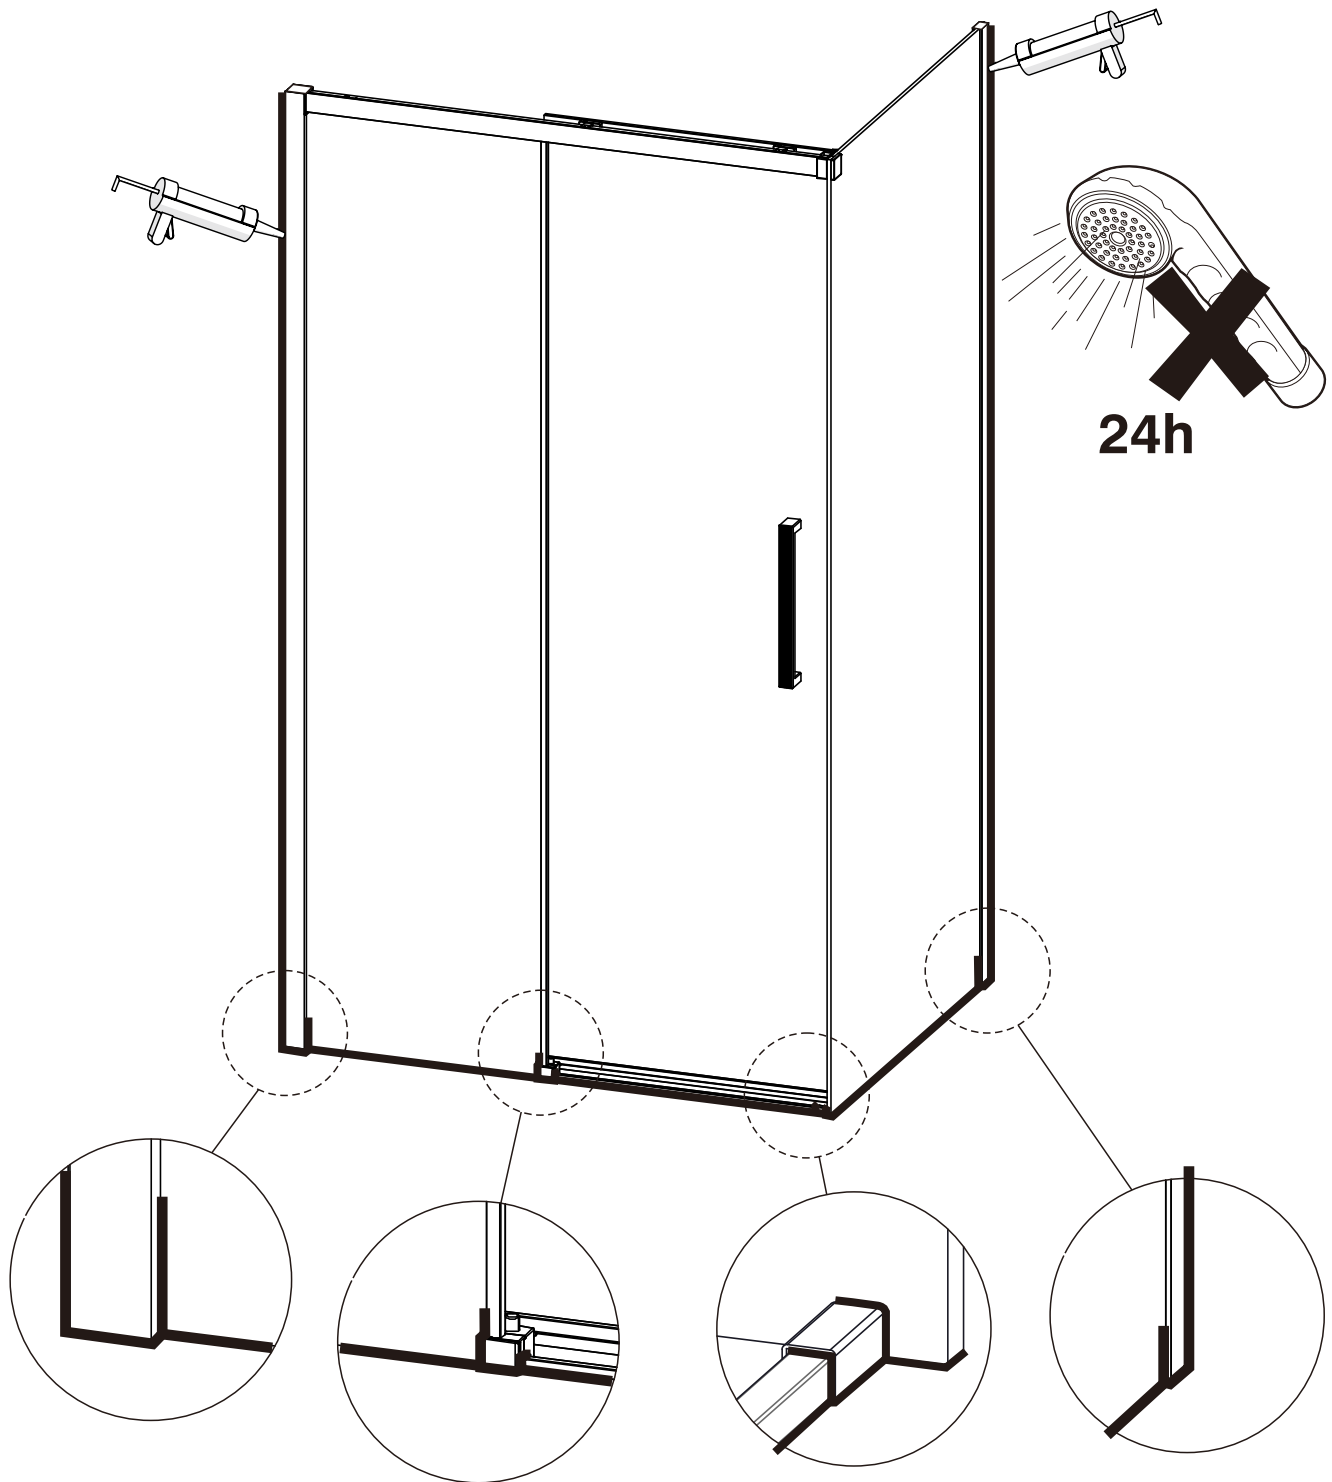

CARE & MAINTENANCE

Do not use solvents or abrasive materials or chemicals to clean shower doors.

PH < 6.8, PH > 7.2

Only use soapy water and soft cloth, rinse thoroughly afterwards.

PH = 6.8 - 7.2

