


ASURA

Fully Folding Bath Screen

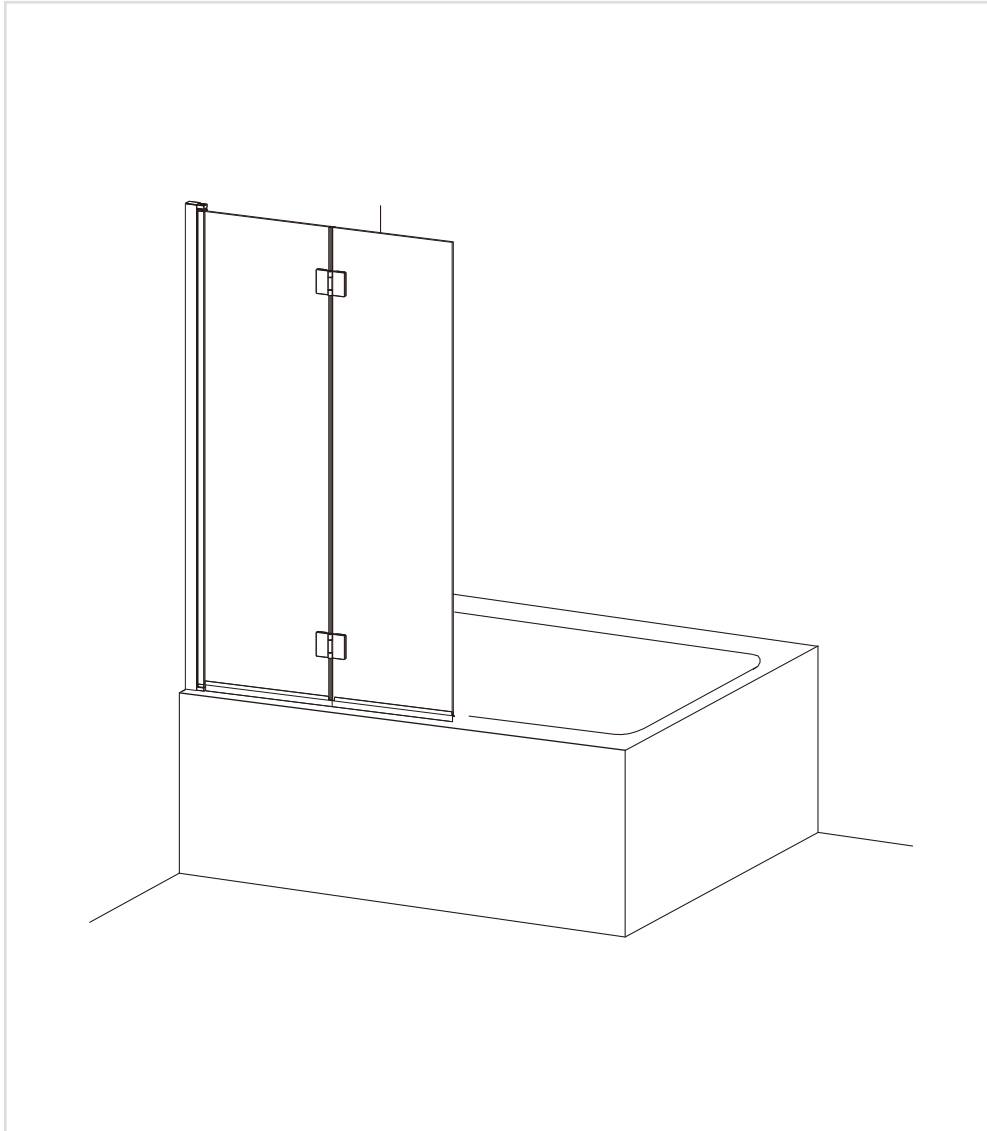

PRODUCT CODES:

AUSFFBSC
AUSFFBSMB
AUSFFBSF
AUSFFBSV
AUSFFBSBZ
AUSFFBST

1. Pre-Installation Checklist

☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Bathtub **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

⚠ Safety Notes:

- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

2. Unpacking & Components

Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

Missing/Damaged Parts?

Contact Crosswater immediately: ☎0345 873 8840.

3. Step-by-Step Installation

A. Frame Assembly

1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×3 total).
- Cover ends with profile caps if any.

B. Door Installation

3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

C. Final Checks

5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

4. Care & Maintenance







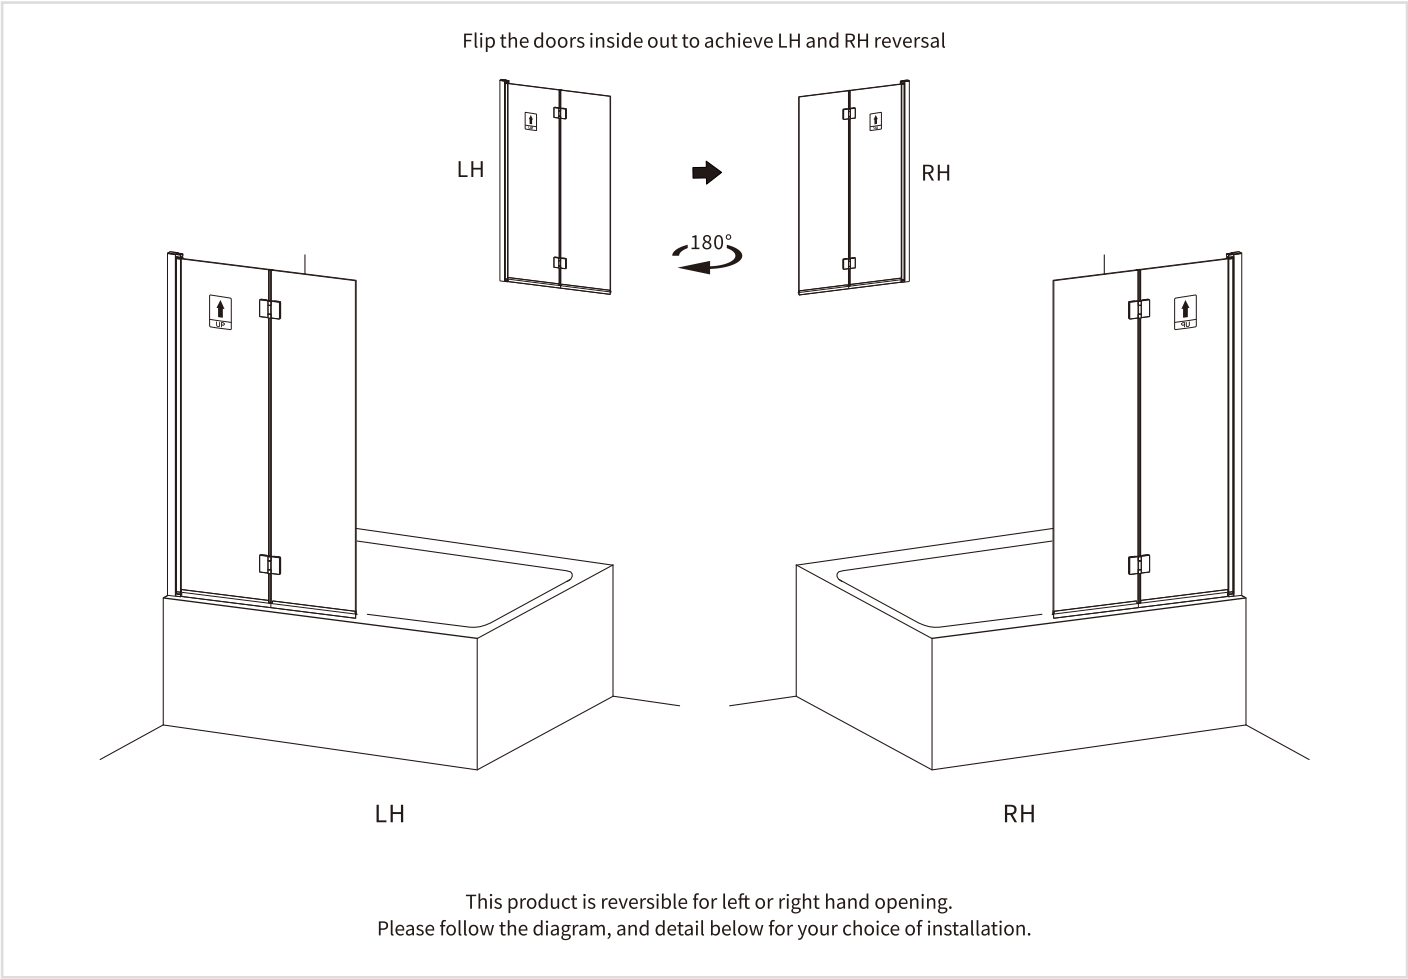


- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.


Ensure seals are flush to prevent leaks.









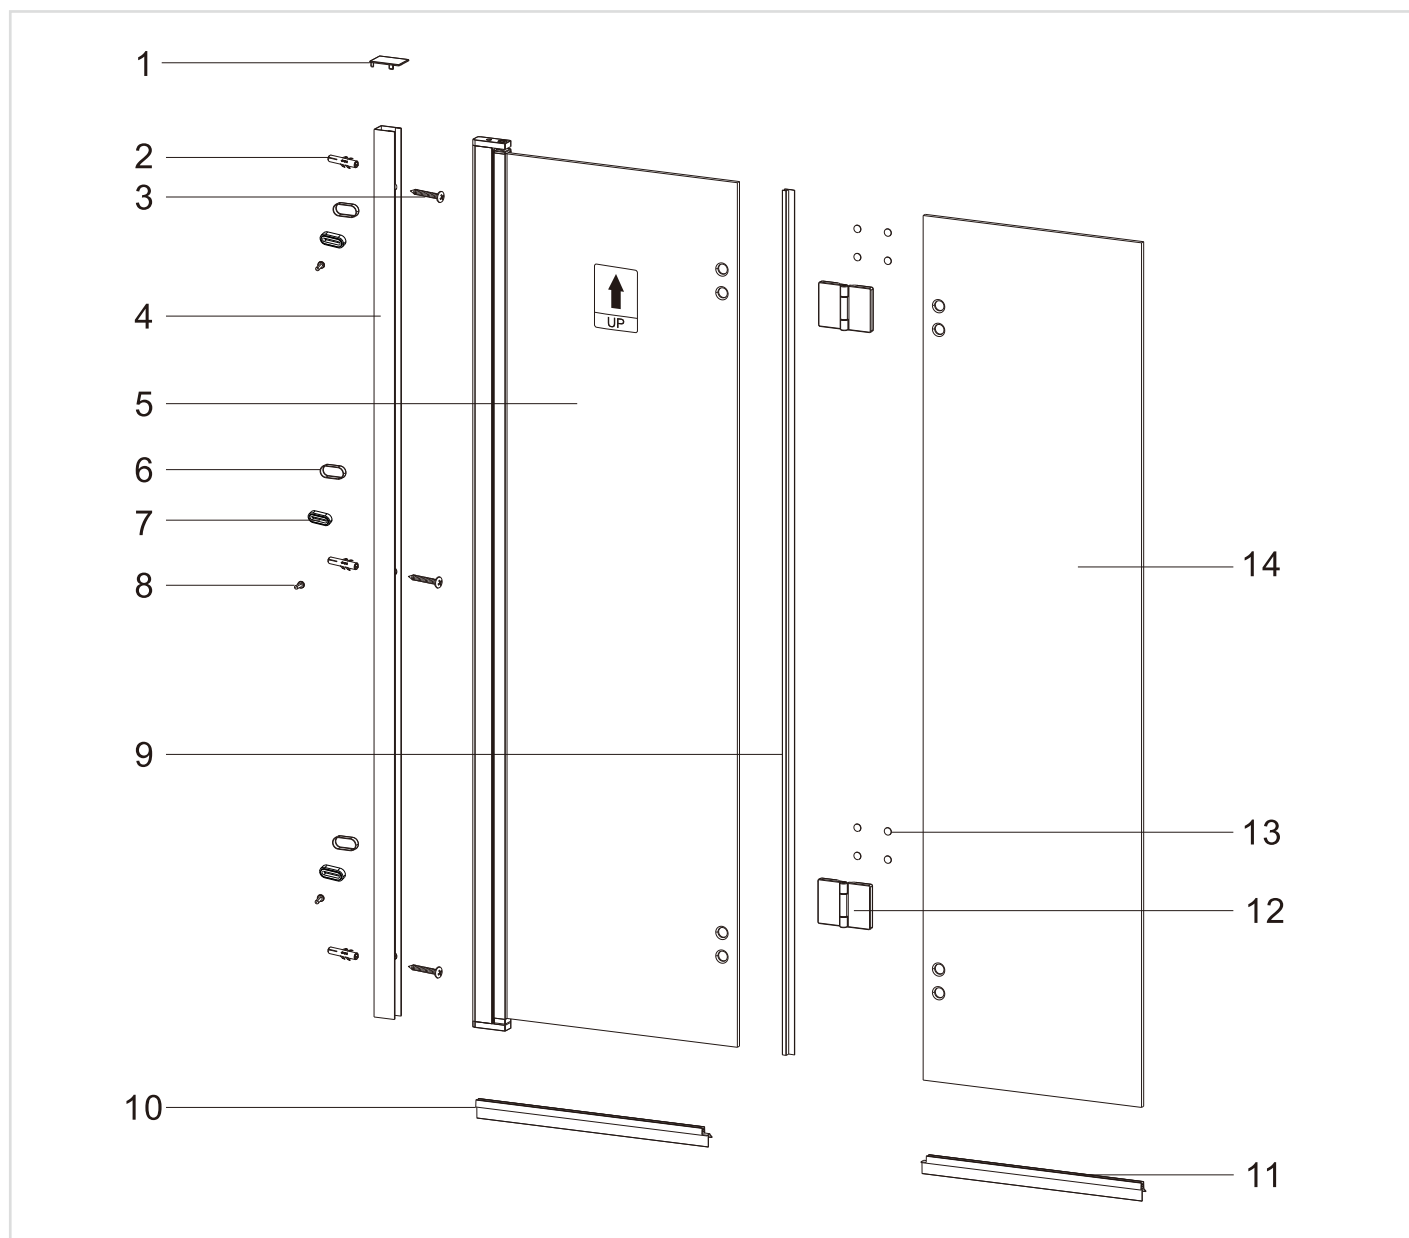







ORIENTATION




Tools Required (not supplied):

Spirit Level		Torque Screw Driver	
Pencil		Snips	
Drill		6mm Drill Bit	
Silicone		Measuring Tape	
Knife			





1	Wall Profile Cap		x1
2	Wall Plug		x3
3	Screw ST4*50		x3
4	Wall Profile		x1
5	Moving Panel With Profile		x1
6	Screw Cover		x3
7	Screw Gasket		x3
8	Screw ST4*16		x3
9	Vertical Seal		x1
10	Bottom Seal A L=527mm		x1
11	Bottom Seal B L=513mm		x1
12	Hinge		x2
13	Hinge Cover		x8
14	Moving Panel W/O Profile		x1
15	Allen Key 4mm		x1
16	Tool		x2

INSTALLATION


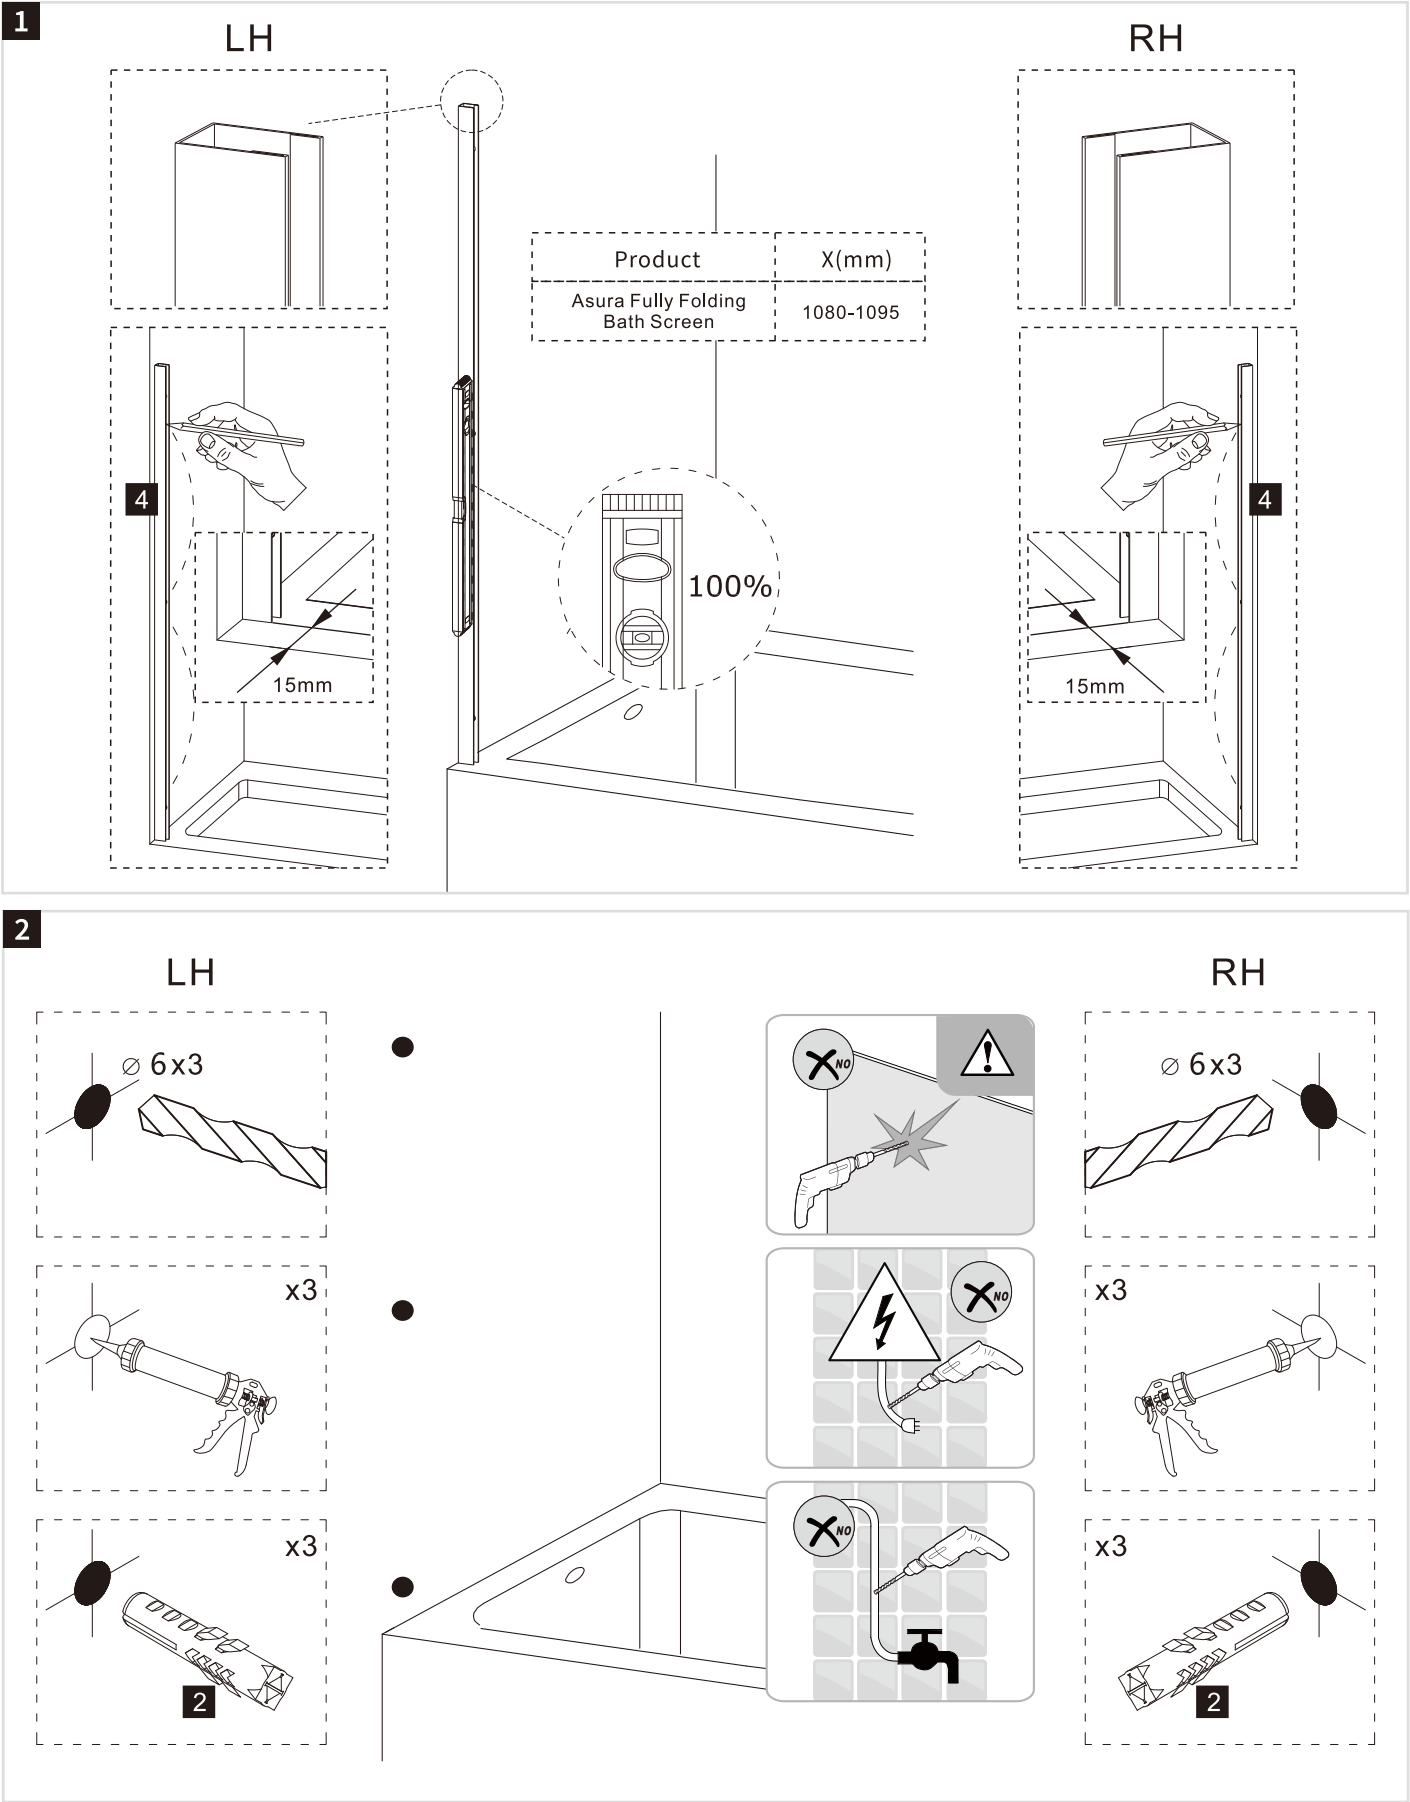


INSTALLATION

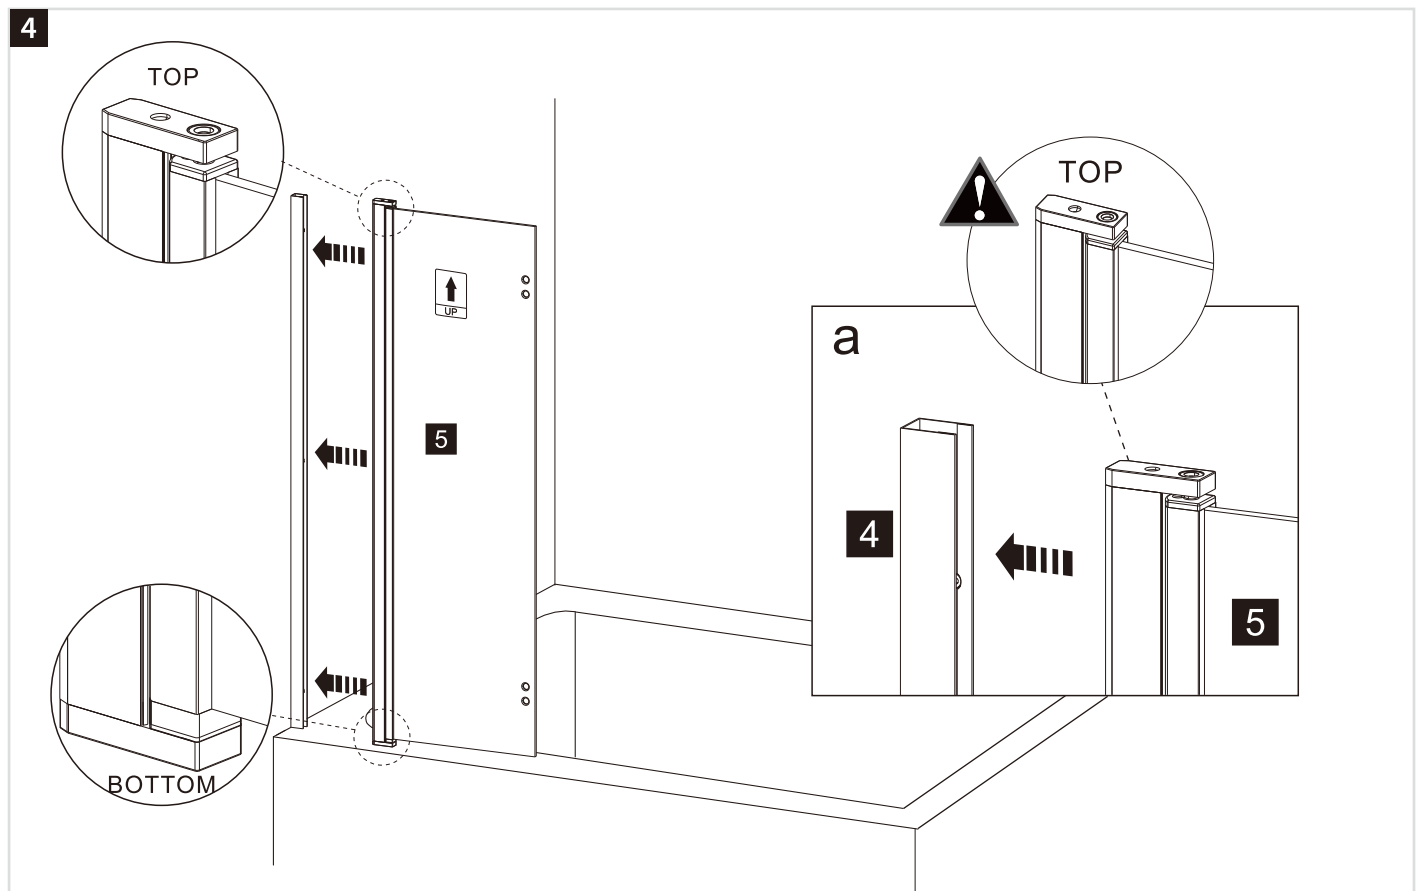
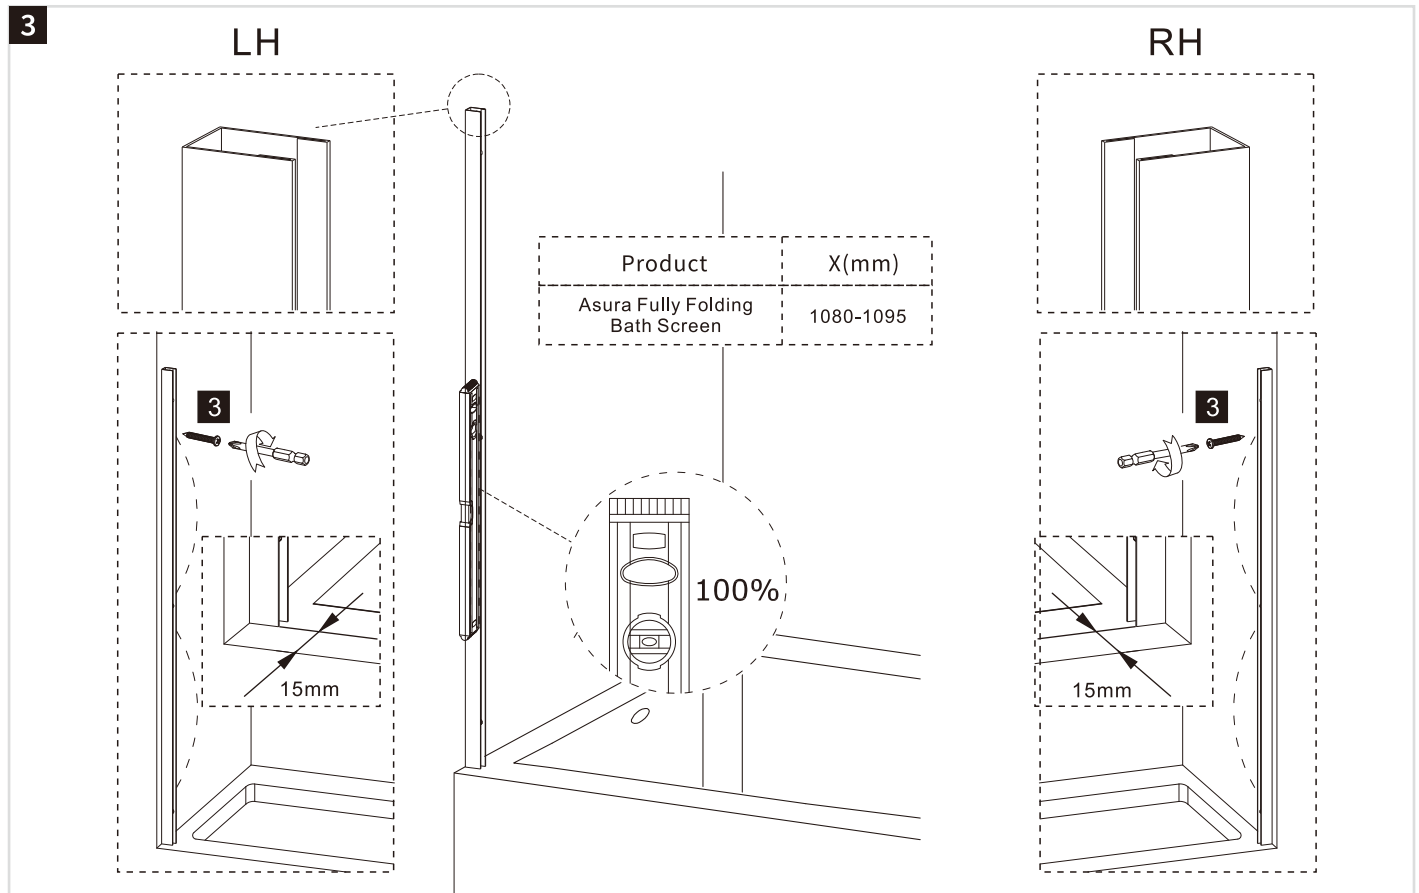


INSTALLATION

5



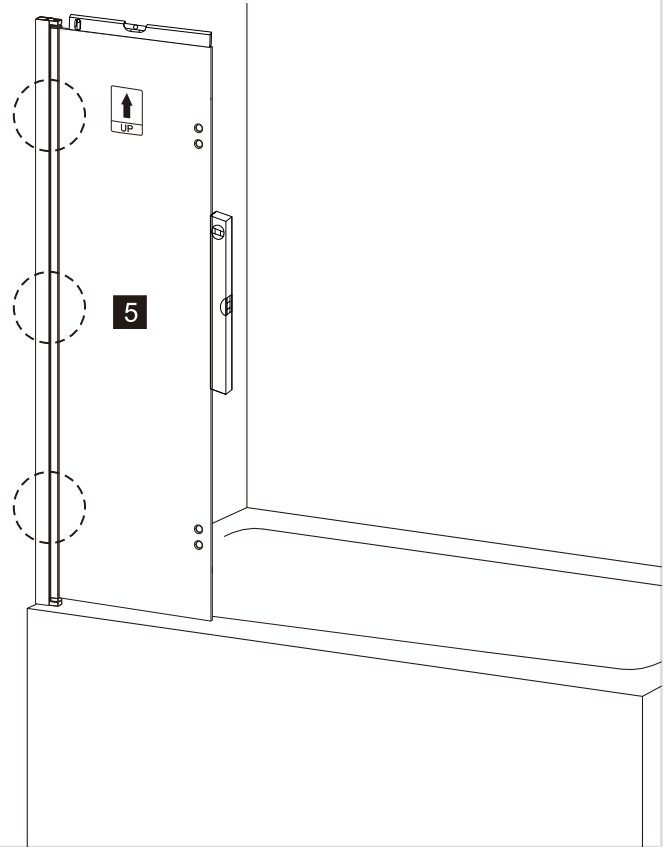
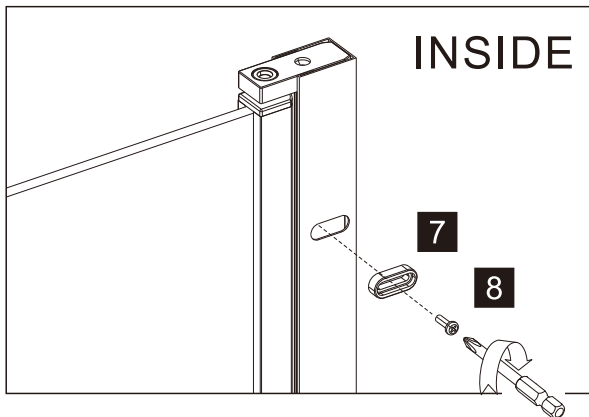


6

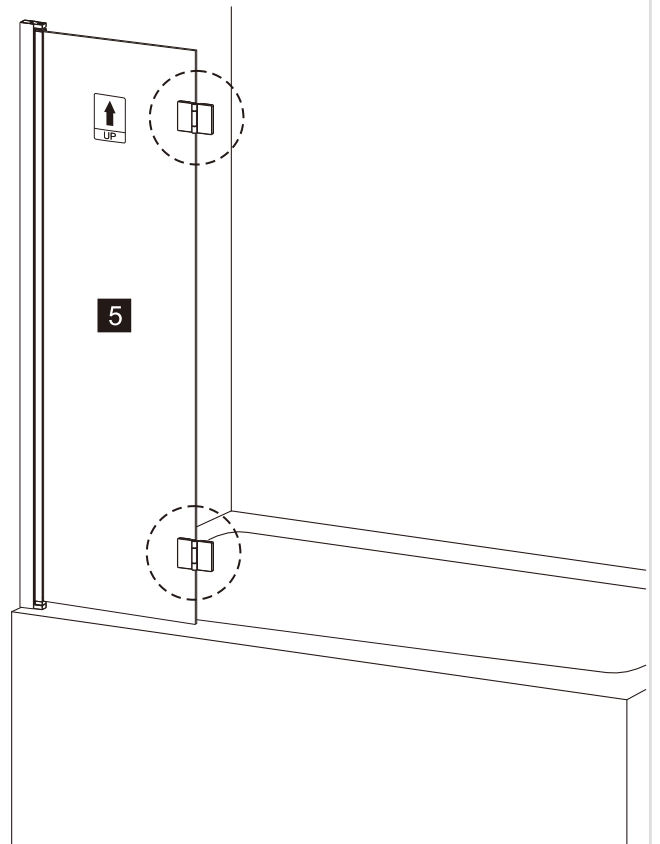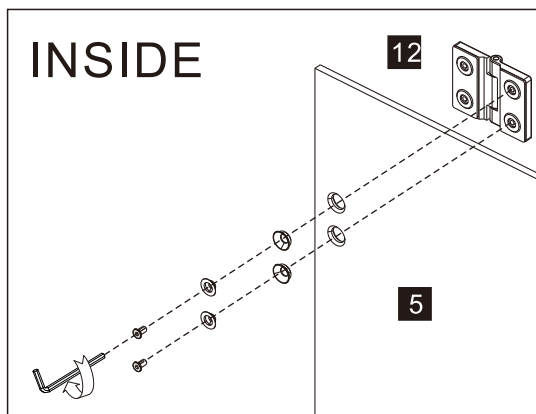









INSTALLATION

7

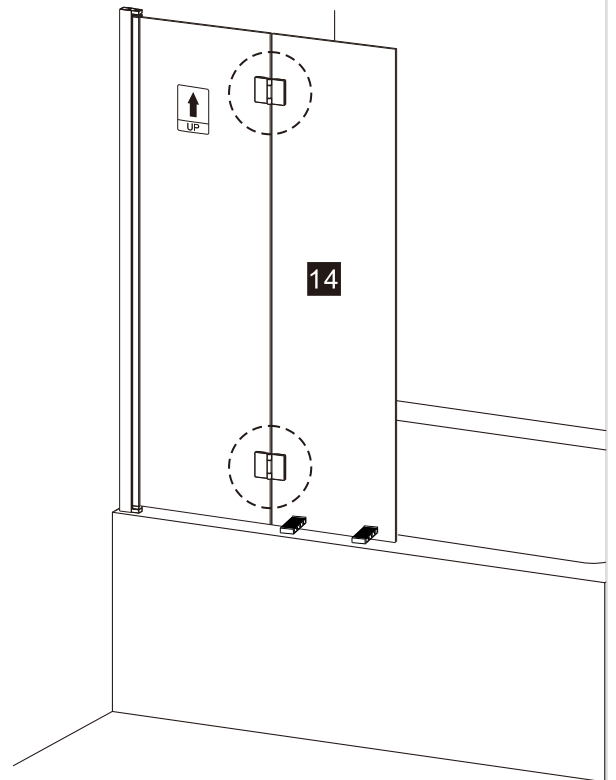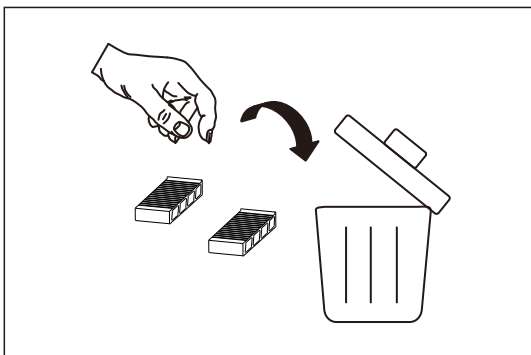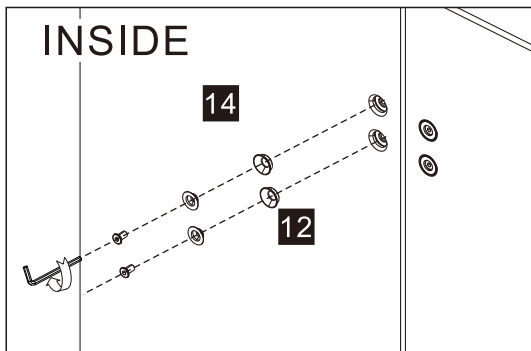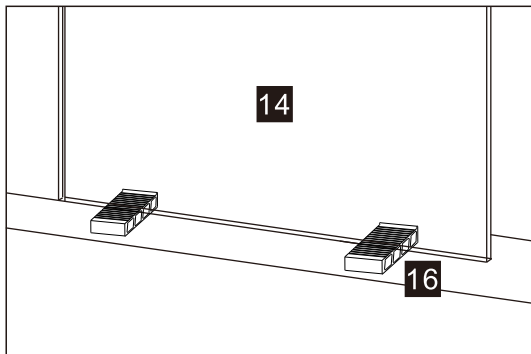


INSTALLATION

8

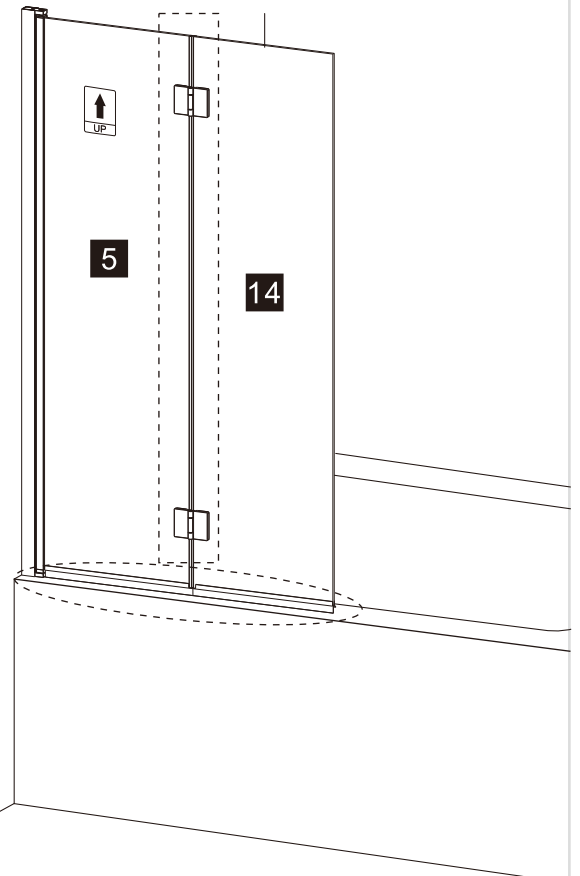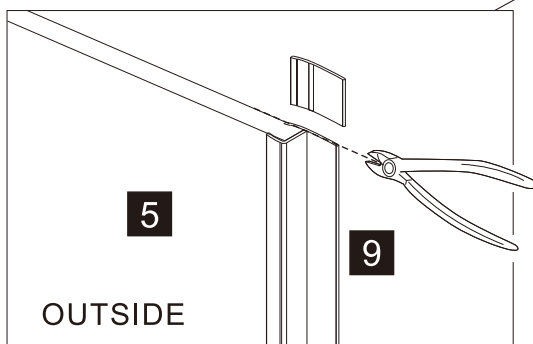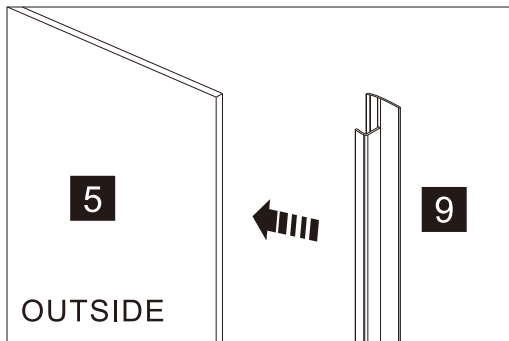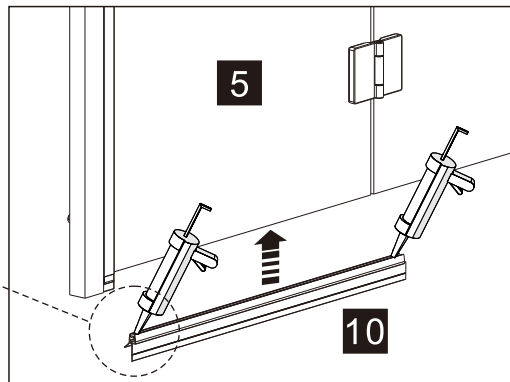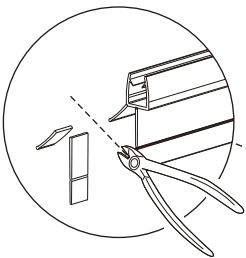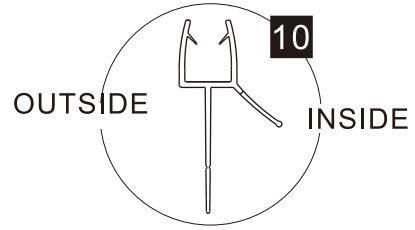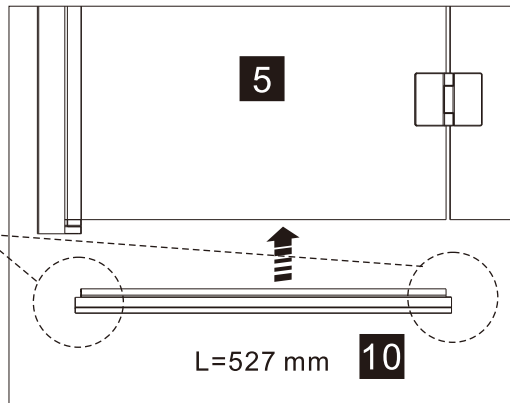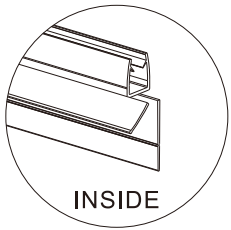


INSTALLATION

9

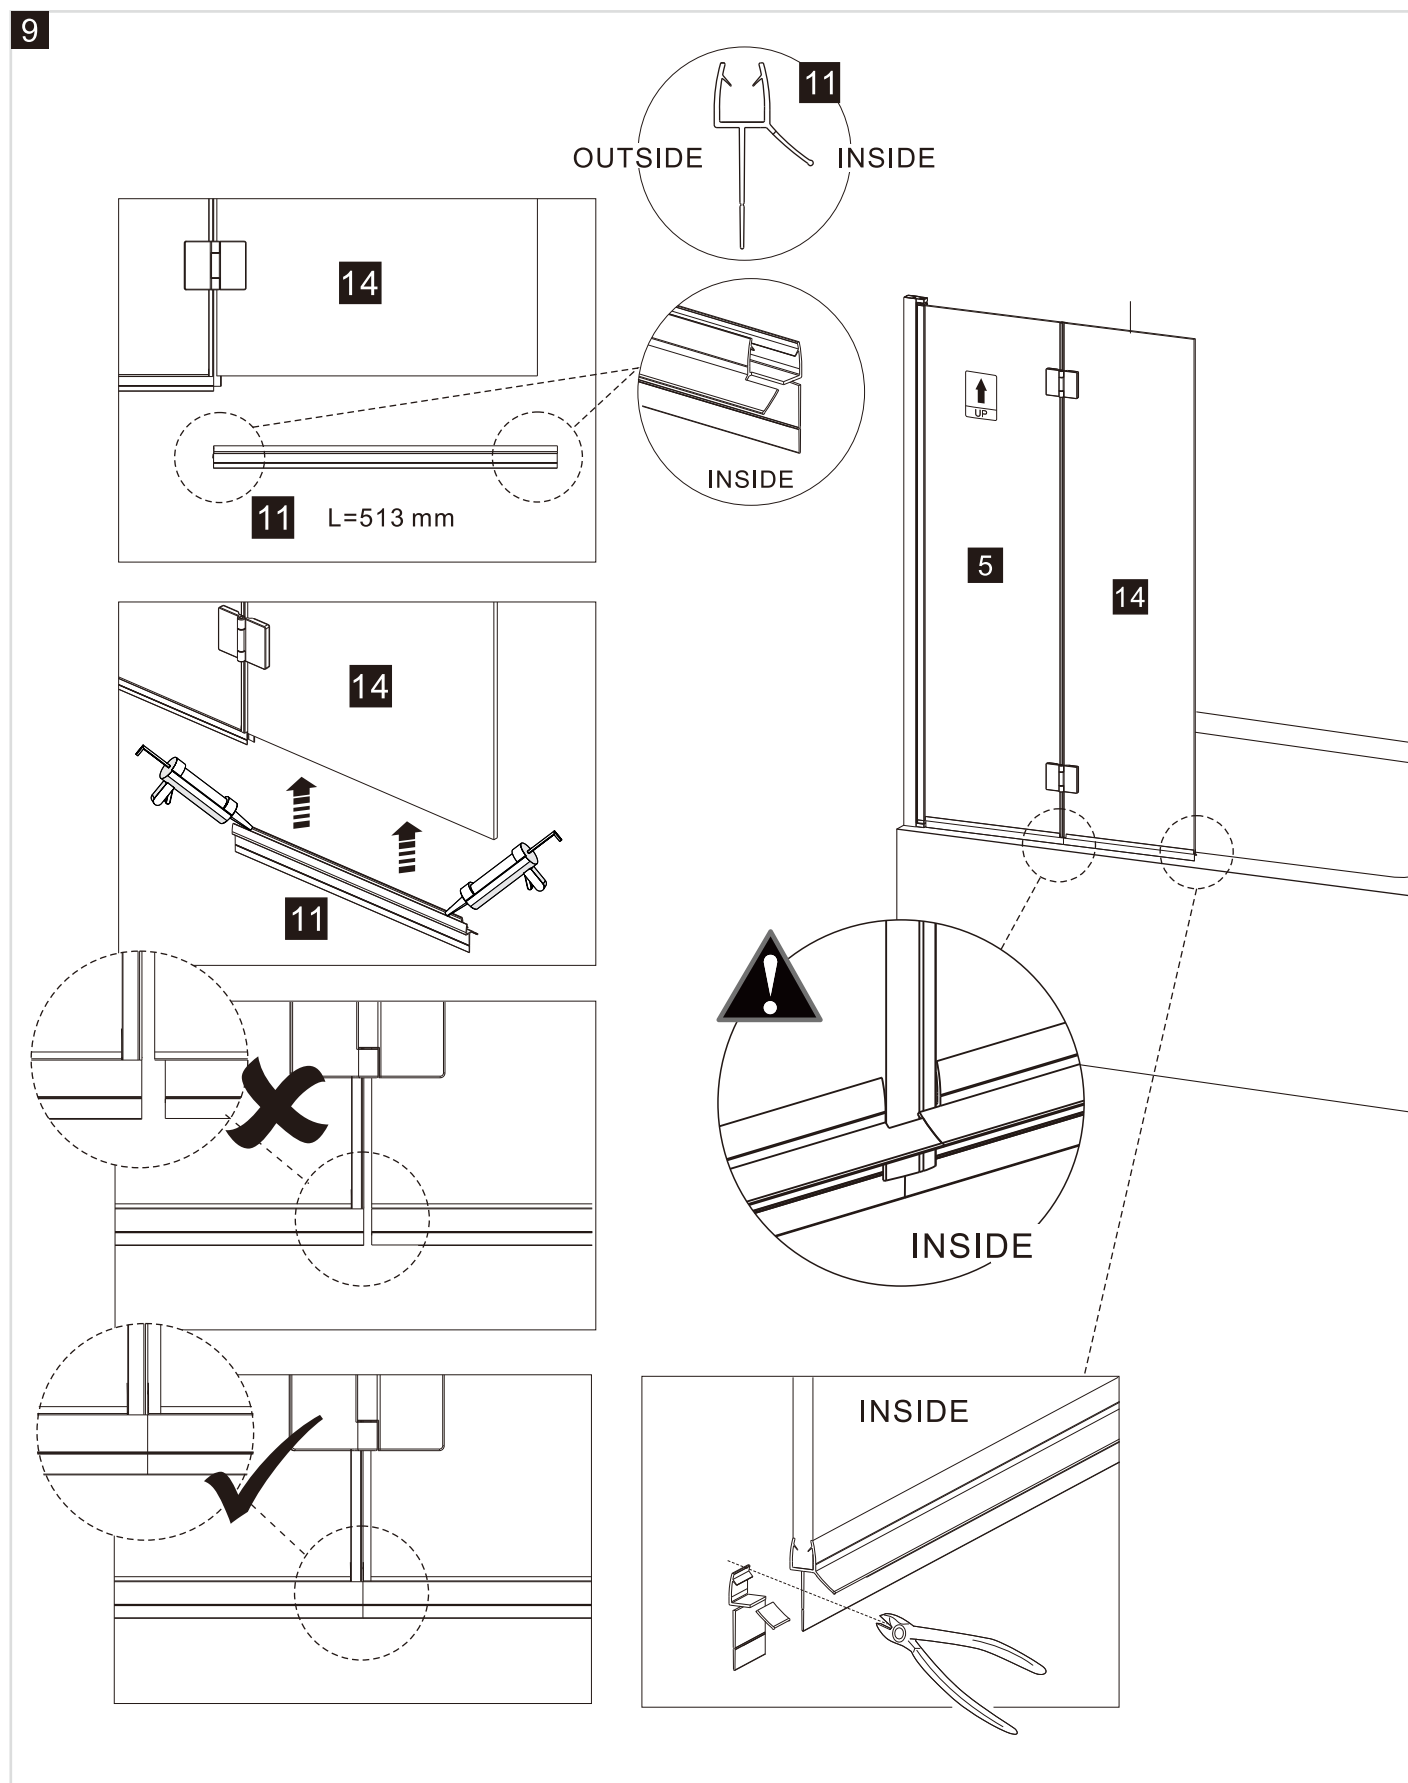

INSTALLATION

10

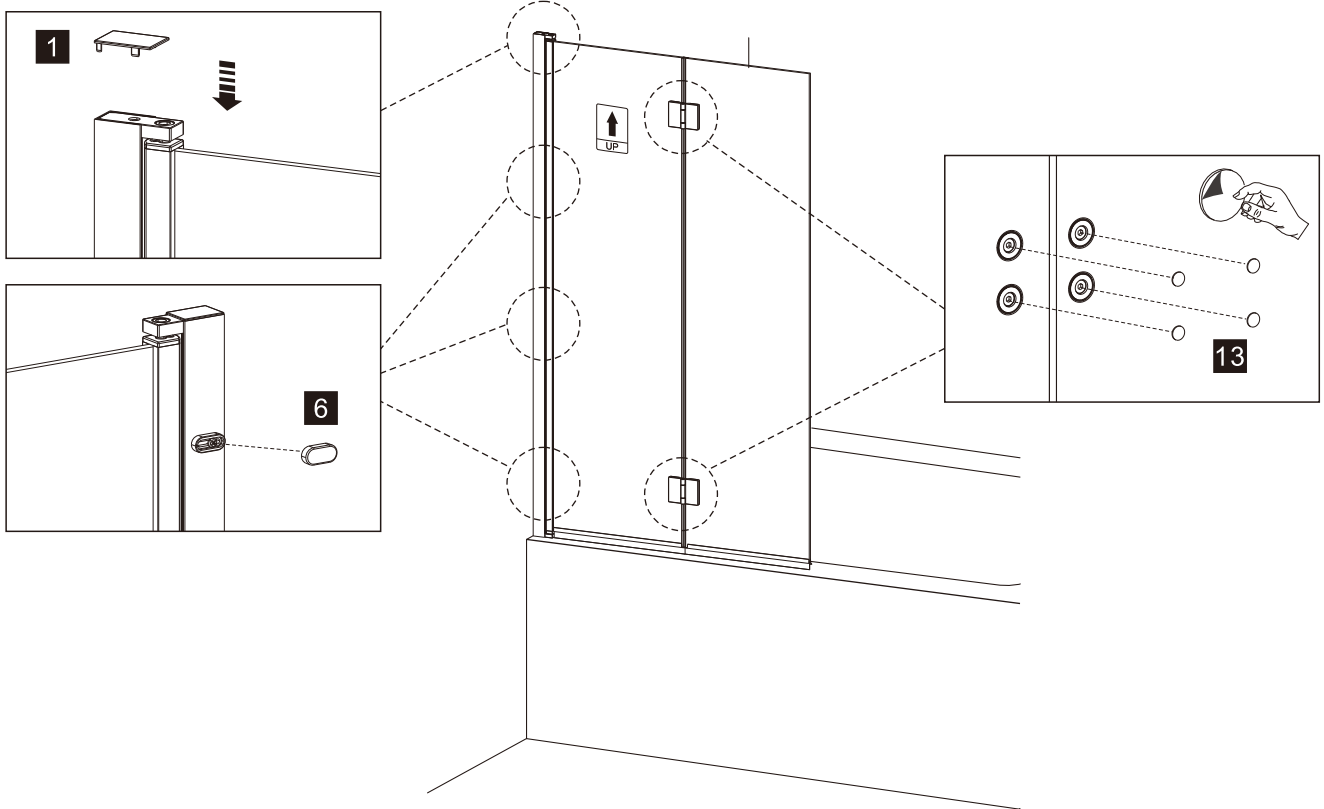

11

