


# Double Bath Screen

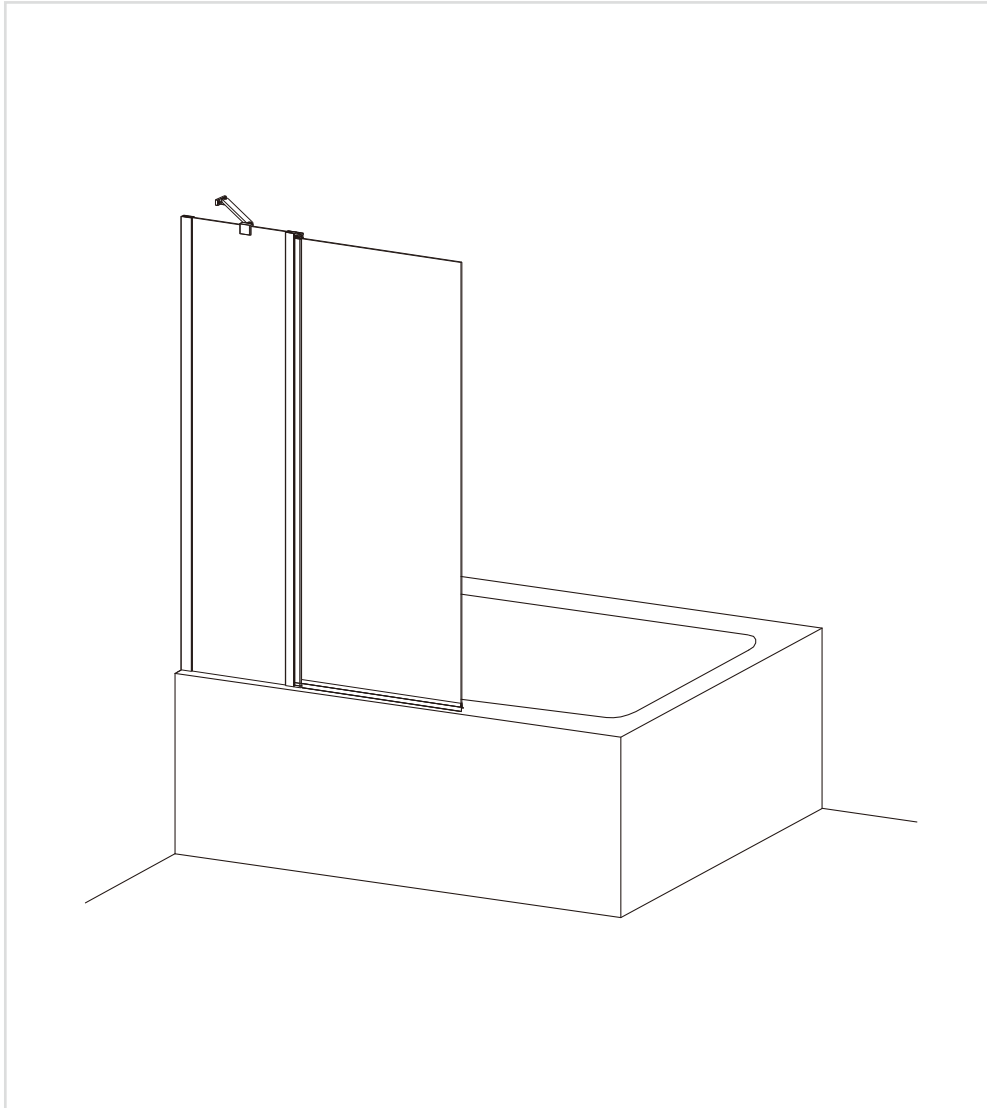

## PRODUCT CODES:

CABDSC1150\_V2  
CABDSB1150  
CABDFB1150  
CABDVB1150  
CABDBZB1150  
CABDTB1150  
HXBDSC1150  
HXBDSB1150  
HXBDFB1150

## 1. Pre-Installation Checklist

### ☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Bathtub **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

### ⚠ Safety Notes:

- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

## 2. Unpacking & Components

### Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

### Missing/Damaged Parts?

Contact Bathroom Brands immediately: ☎0345 873 8840.

## 3. Step-by-Step Installation

### A. Frame Assembly

#### 1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

#### 2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×4 total).
- Cover ends with profile caps if any.

### B. Door Installation

#### 3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

#### 4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

### C. Final Checks

#### 5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

## 4. Care & Maintenance







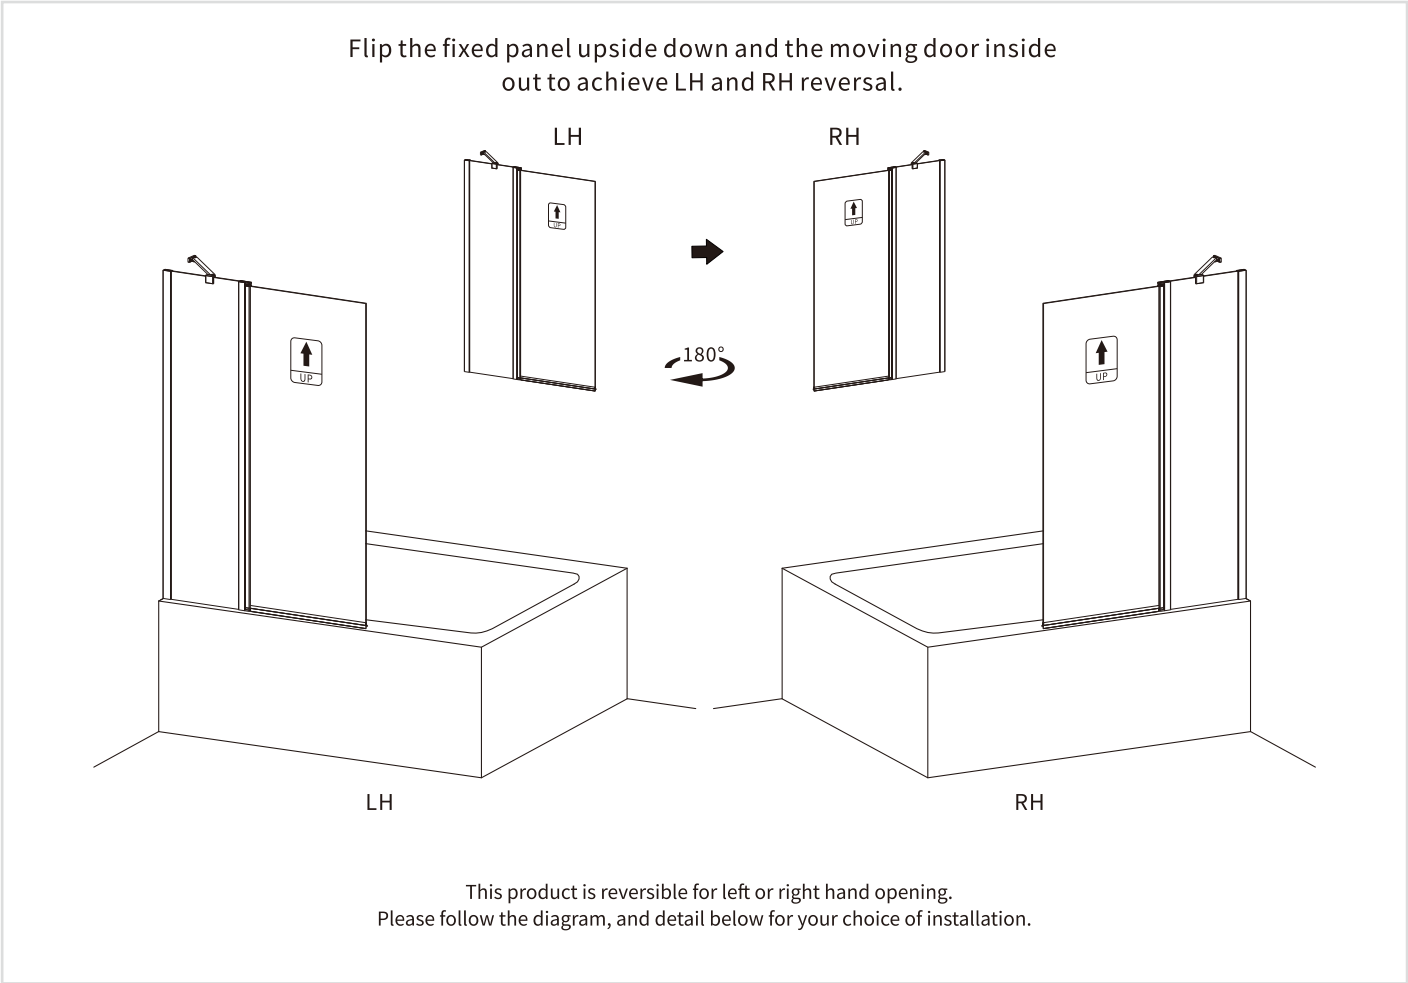


- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.

Ensure seals are flush to prevent leaks.


ORIENTATION














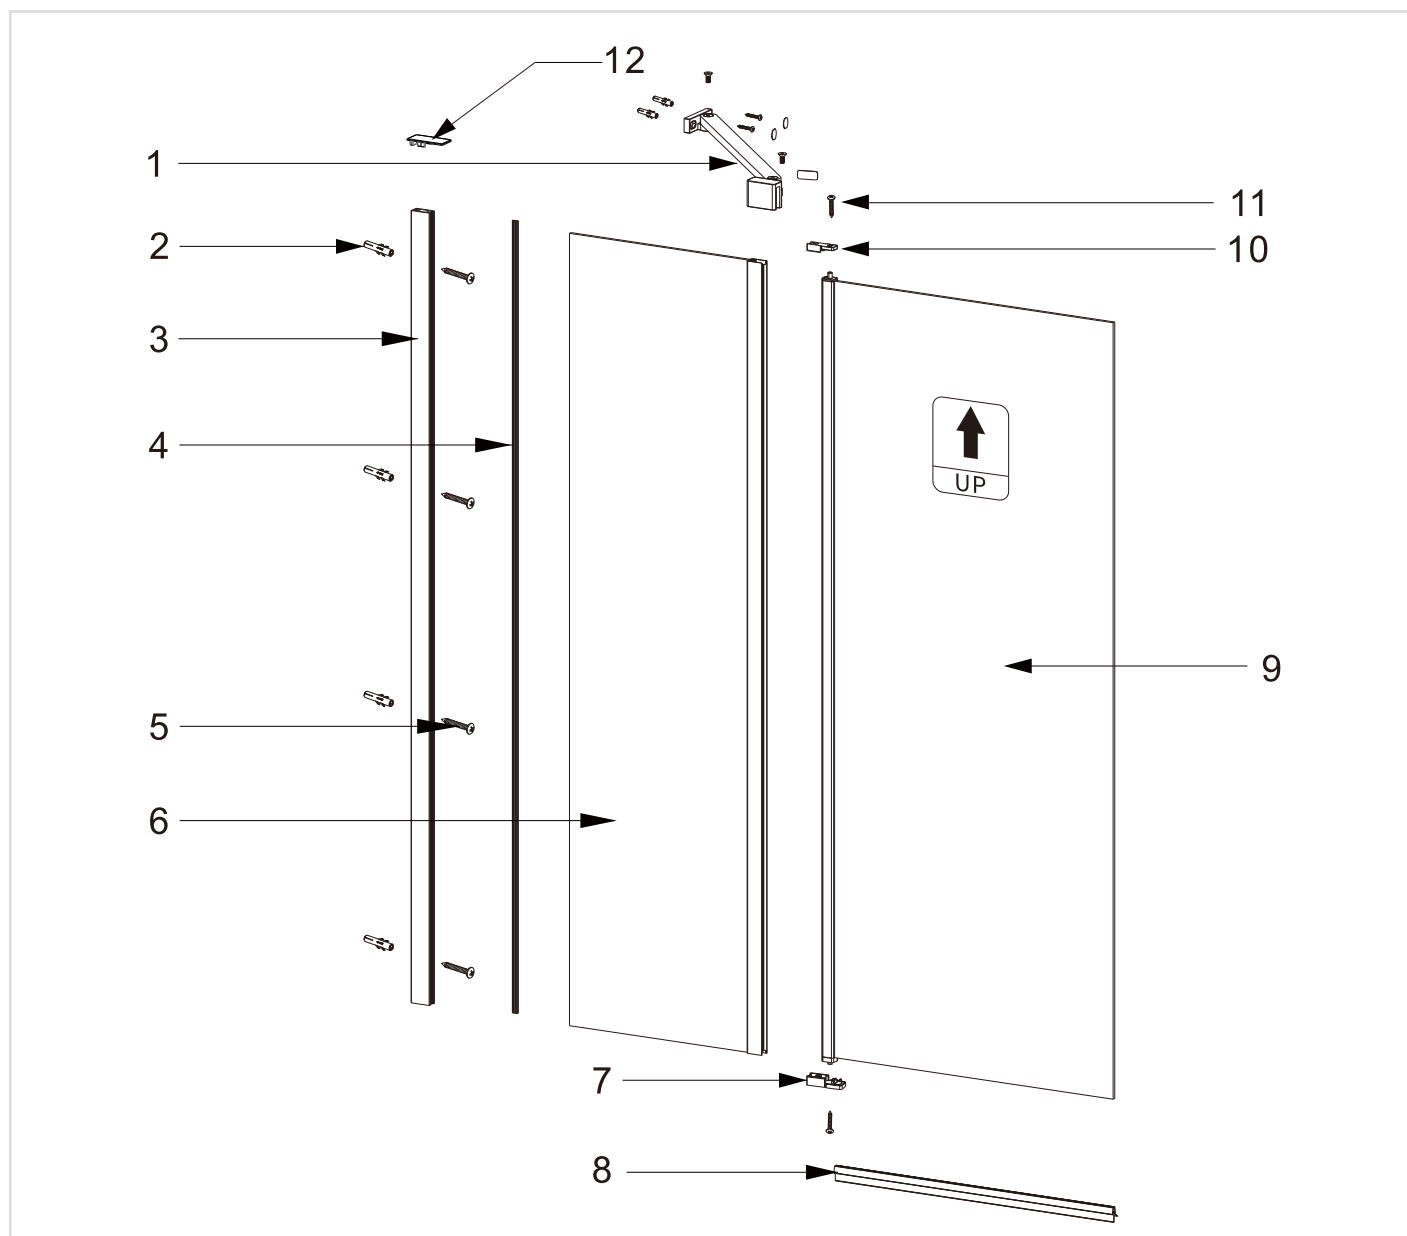


Tools Required (not supplied):



Spirit Level		Torque Screw Driver	
Pencil		Snips	
Drill		6mm Drill Bit	
Silicone		Measuring Tape	
Knife			

## COMPONENTS




<b>1</b> Bracing Bar  x1	<b>2</b> Wall Plug  x4	<b>3</b> Wall Profile  x1	<b>4</b> Wedge Seal  x1
<b>5</b> Screw ST4*50  x4	<b>6</b> Fixed Panel  x1	<b>7</b> Bottom pivot seat  x1	<b>8</b> Bottom seal  x1
<b>9</b> Moving Panel  x1	<b>10</b> Top pivot seat  x1	<b>11</b> Screw ST4*30  x2	<b>12</b> Wall Profile Cap  x1
<b>13</b> Allen Key  4mm	<b>14</b> Wedge Gasket Tool  x1		

INSTALLATION

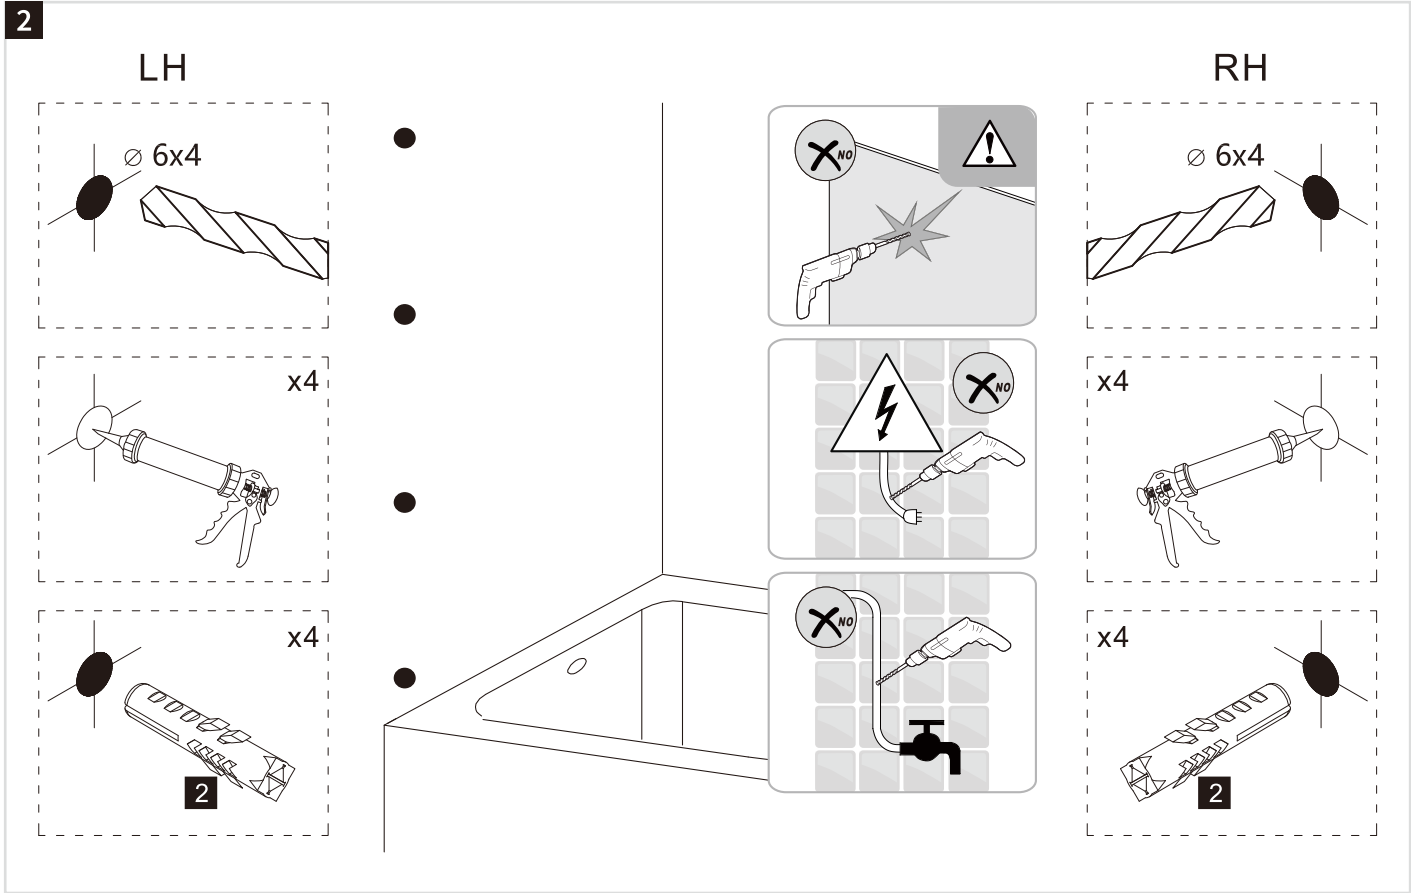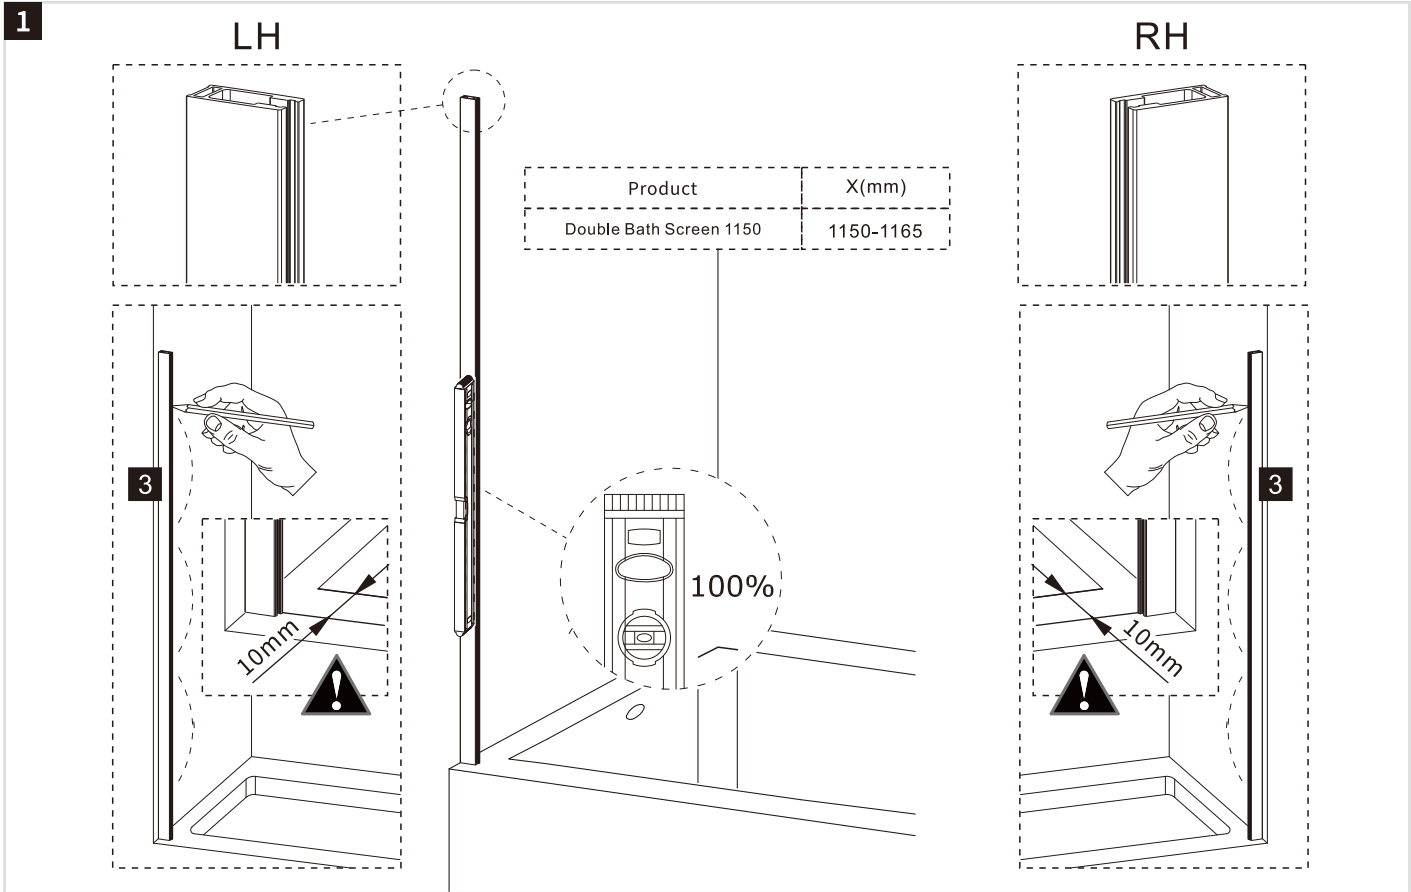


## INSTALLATION

3


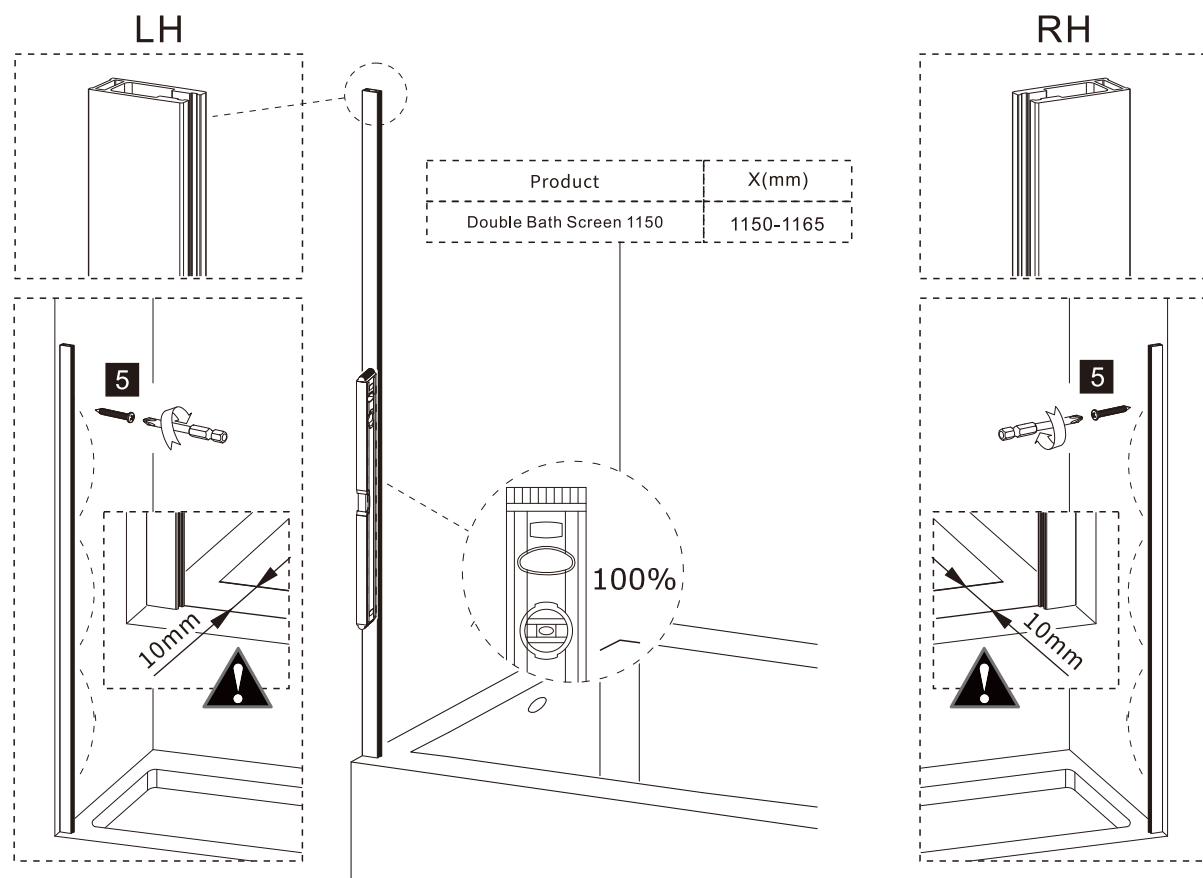


4




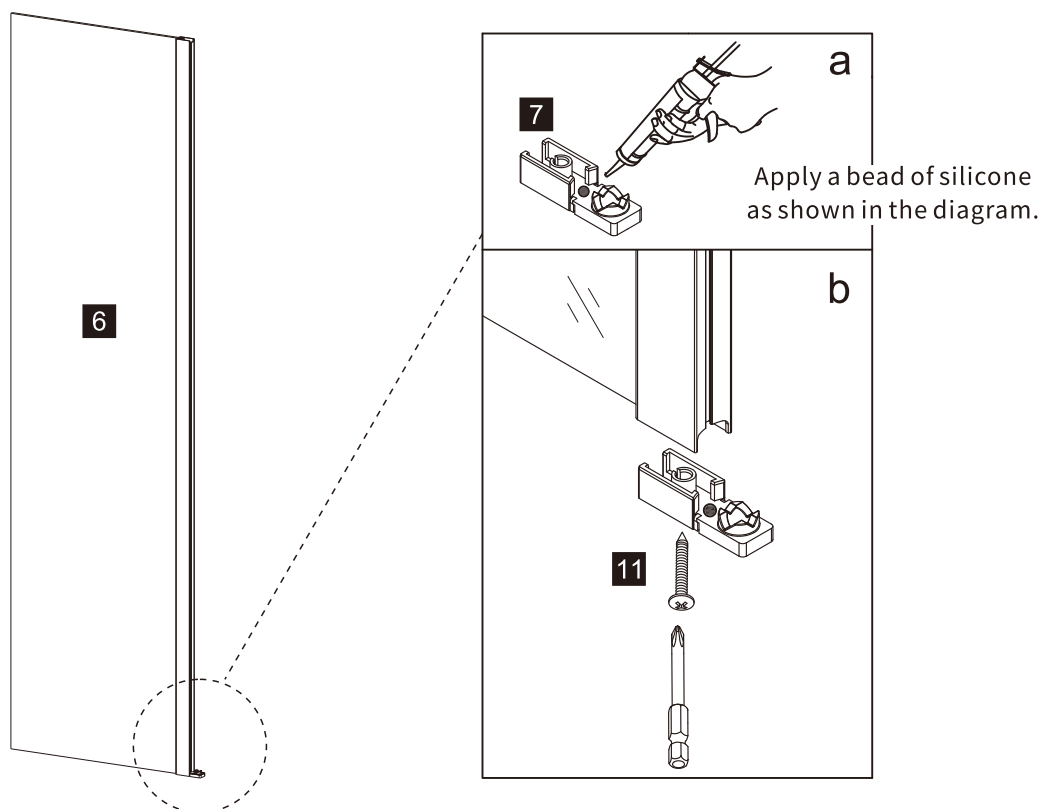


## INSTALLATION



5

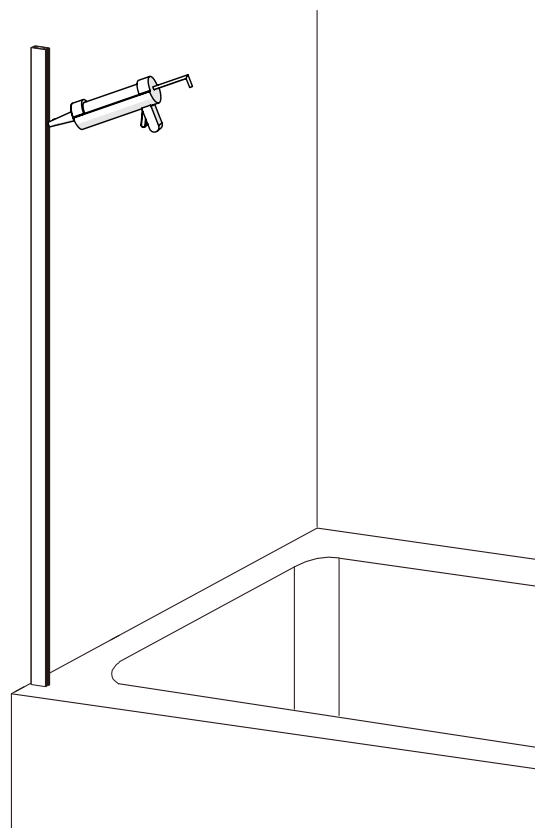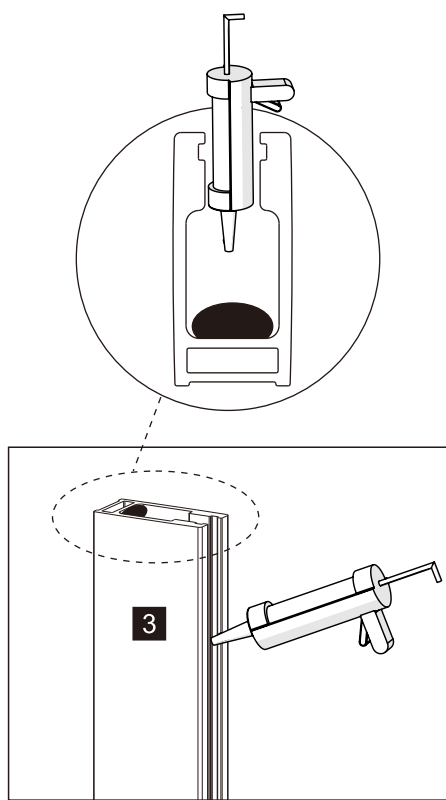

6

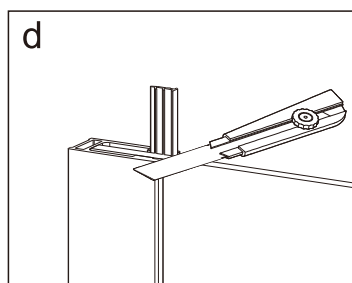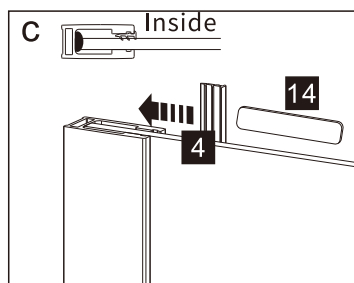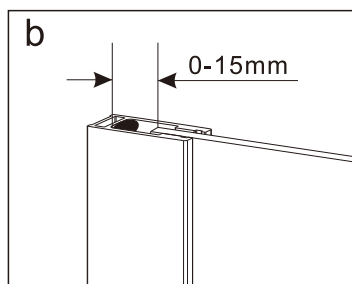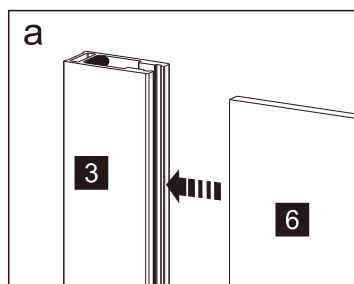


## INSTALLATION

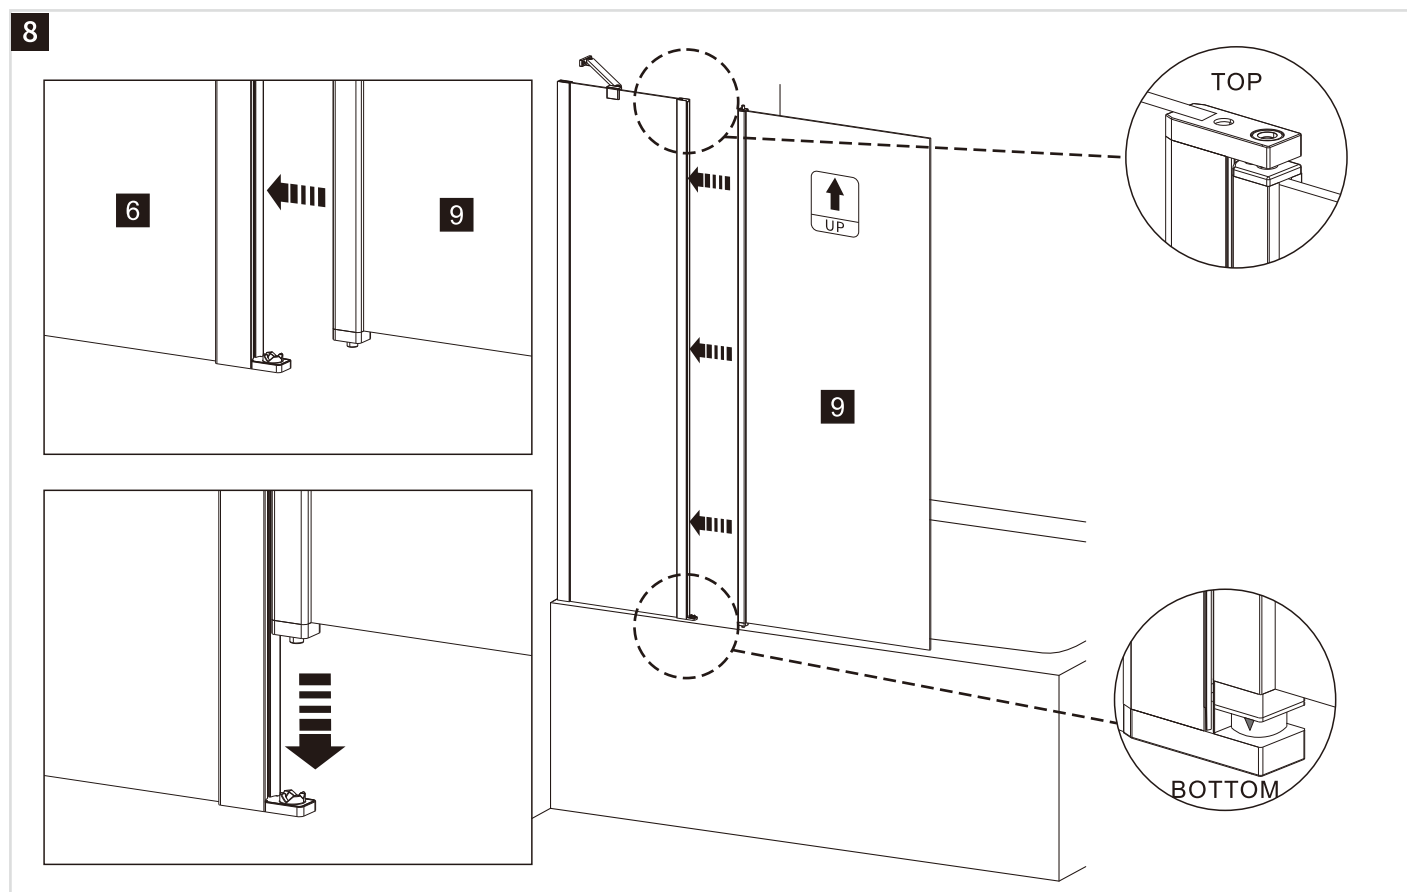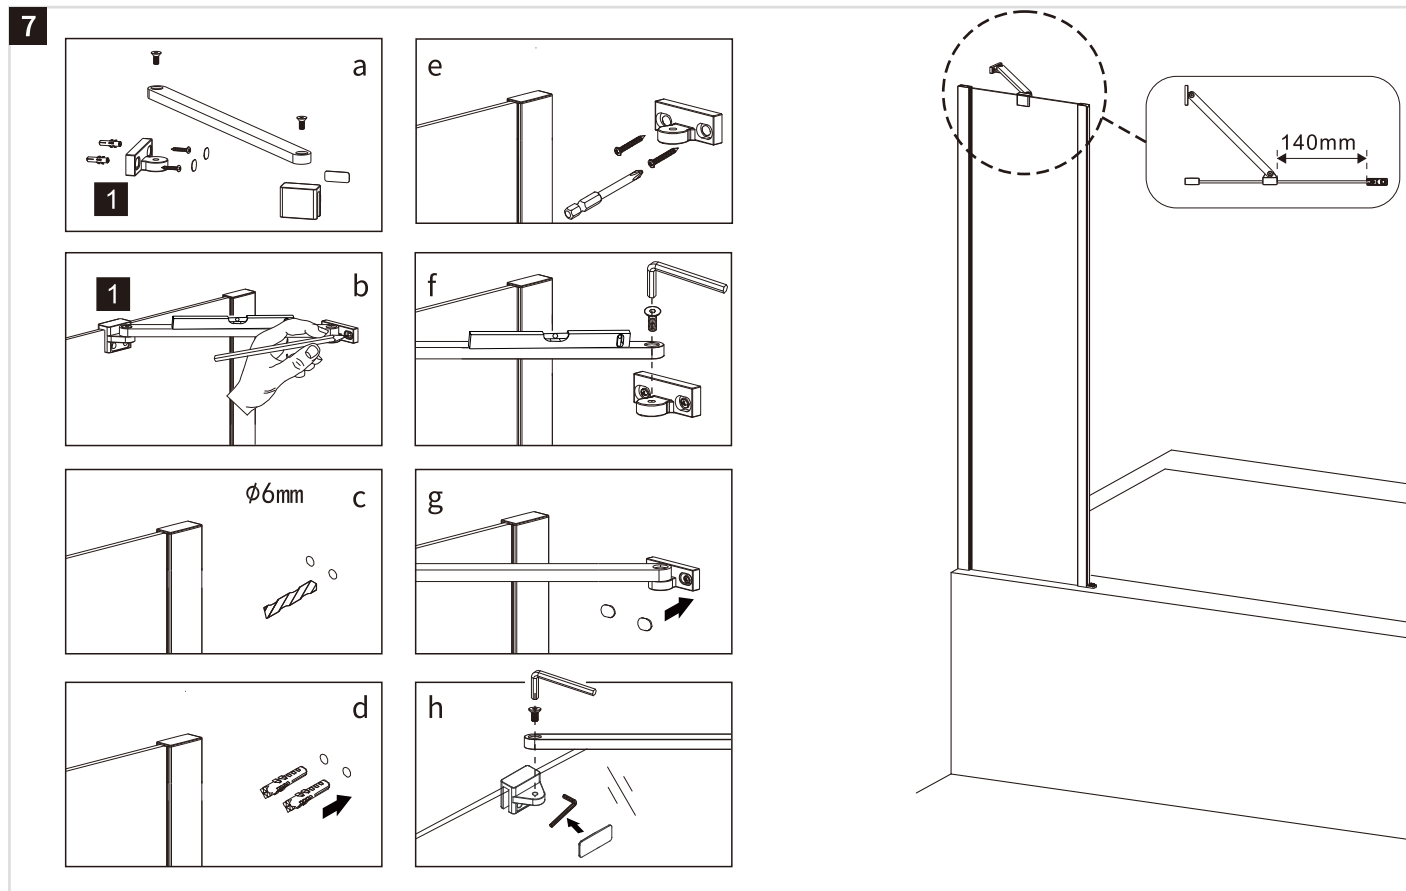

## INSTALLATION

9

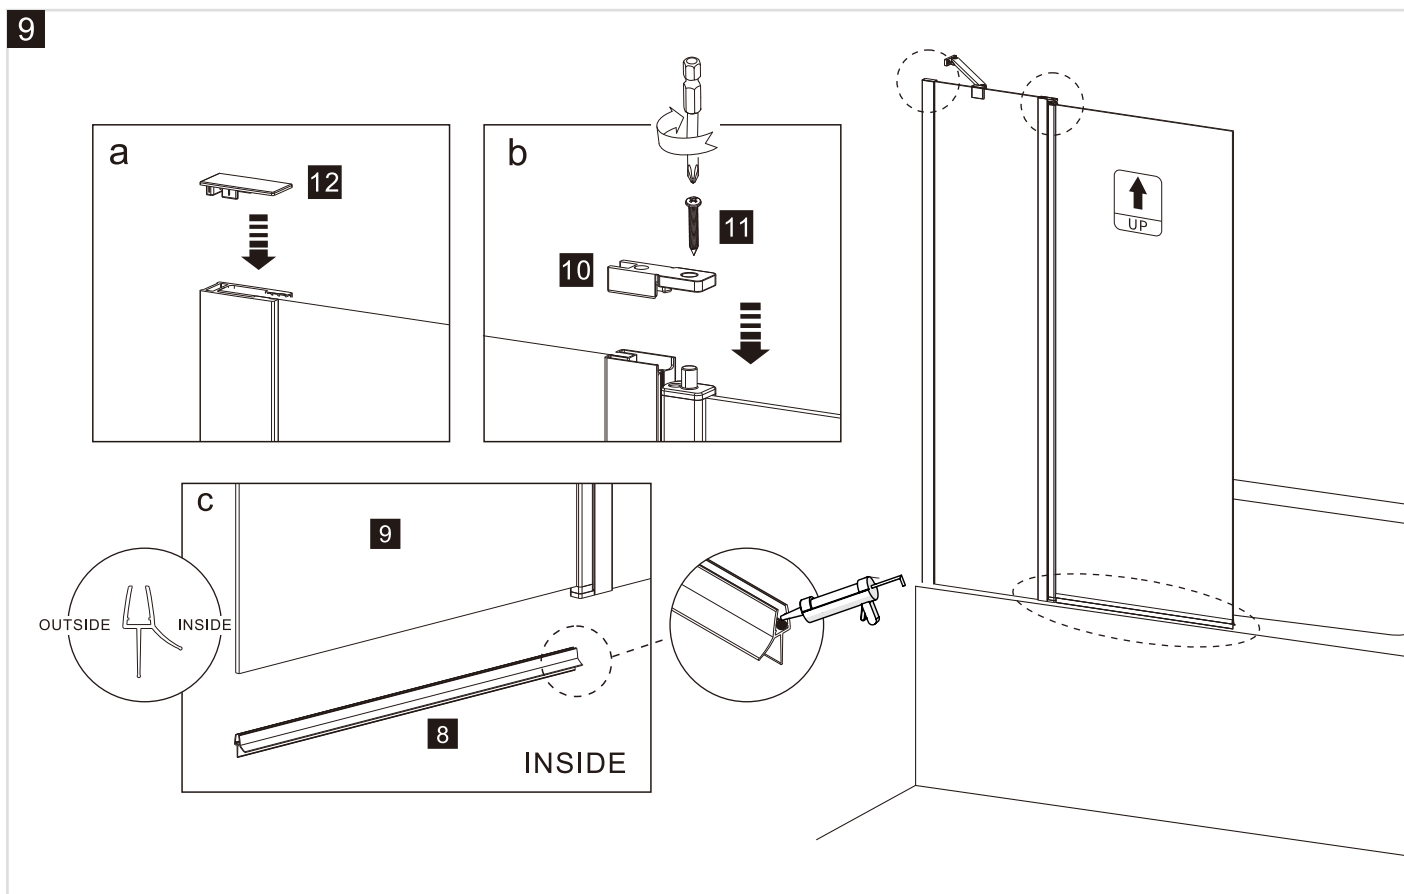

10

