


Infold Door & Side Panel

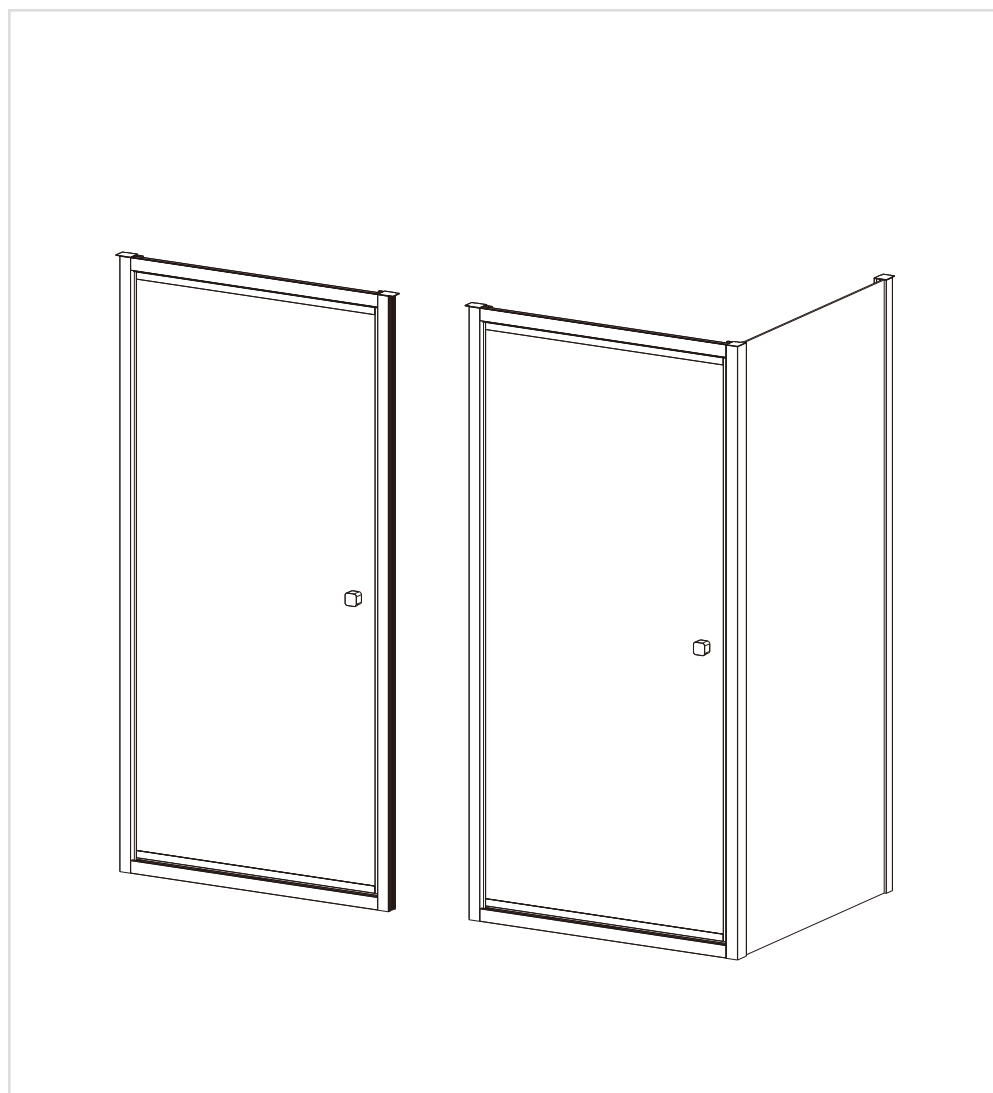

PRODUCT CODES:

CAIDSC0700_V2	CASPSC0700_V2
CAIDSC0760_V2	CASPSC0760_V2
CAIDSC0800_V2	CASPSC0800_V2
CAIDSC0900_V2	CASPSC0900_V2
CAIDSC1000_V2	CASPBC0700_V2
CAIDBC0700	CASPBC0760_V2
CAIDBC0760_V2	CASPBC0800_V2
CAIDBC0800_V2	CASPBC0900_V2
CAIDBC0900_V2	CASFBC0700
CAIDBC1000_V2	CASFBC0760_V2
CAIDFC0700	CASFBC0800_V2
CAIDFC0760_V2	CASFBC0900_V2
CAIDFC0800_V2	CASPVC0700
CAIDFC0900_V2	CASPVC0760
CAIDFC1000_V2	CASPVC0800
CAIDVC0700	CASPVC0900
CAIDVC0760	CASPBZC0700
CAIDVC0800	CASPBZC0760
CAIDVC0900	CASPBZC0800
CAIDVC1000	CASPBZC0900
CAIDBZC0700	CASPTC0700
CAIDBZC0760	CASPTC0760
CAIDBZC0800	CASPTC0800
CAIDBZC0900	CASPTC0900
CAIDBZC1000	HXSPSC0700
CAIDTC0700	HXSPSC0760
CAIDTC0760	HXSPSC0800
CAIDTC0800	HXSPSC0900
CAIDTC0900	HXSPBC0700
CAIDTC1000	HXSPBC0760
HXIDSC0700	HXSPBC0800
HXIDSC0760	HXSPBC0900
HXIDSC0800	HXSFCB0700
HXIDSC0900	HXSFCB0760
HXIDSC1000	HXSFCB0800
HXIDBC0700	HXSFCB0900
HXIDBC0760	
HXIDBC0800	
HXIDBC0900	
HXIDBC1000	
HXIDFC0700	
HXIDFC0760	
HXIDFC0800	
HXIDFC0900	
HXIDFC1000	

1. Pre-Installation Checklist

☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Shower tray **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

⚠ Safety Notes:

- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

2. Unpacking & Components

Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

Missing/Damaged Parts?

Contact Bathroom Brands immediately: ☎0345 873 8840.

3. Step-by-Step Installation

A. Frame Assembly

1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×8 total).
- Cover ends with profile caps if any.

B. Door Installation

3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

C. Final Checks

5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

4. Care & Maintenance

- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.

Ensure seals are flush to prevent leaks.


ORIENTATION

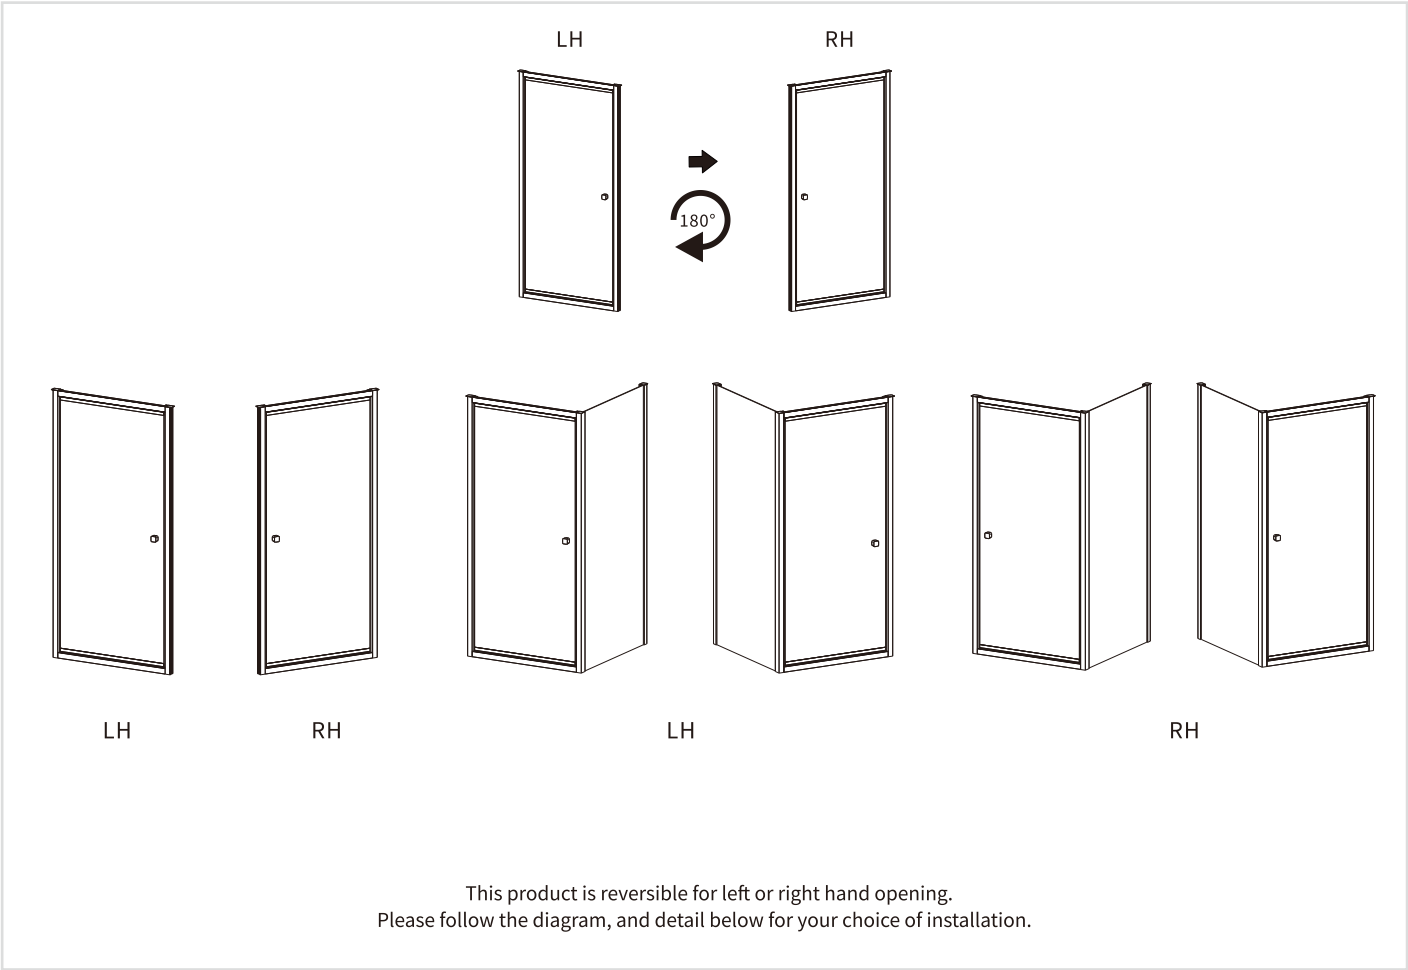

Tools Required (not supplied):

Spirit Level		Torque Screw Driver	
Pencil		Snips	
Drill		6mm Drill Bit	
Silicone		Measuring Tape	
Knife			

COMPONENTS

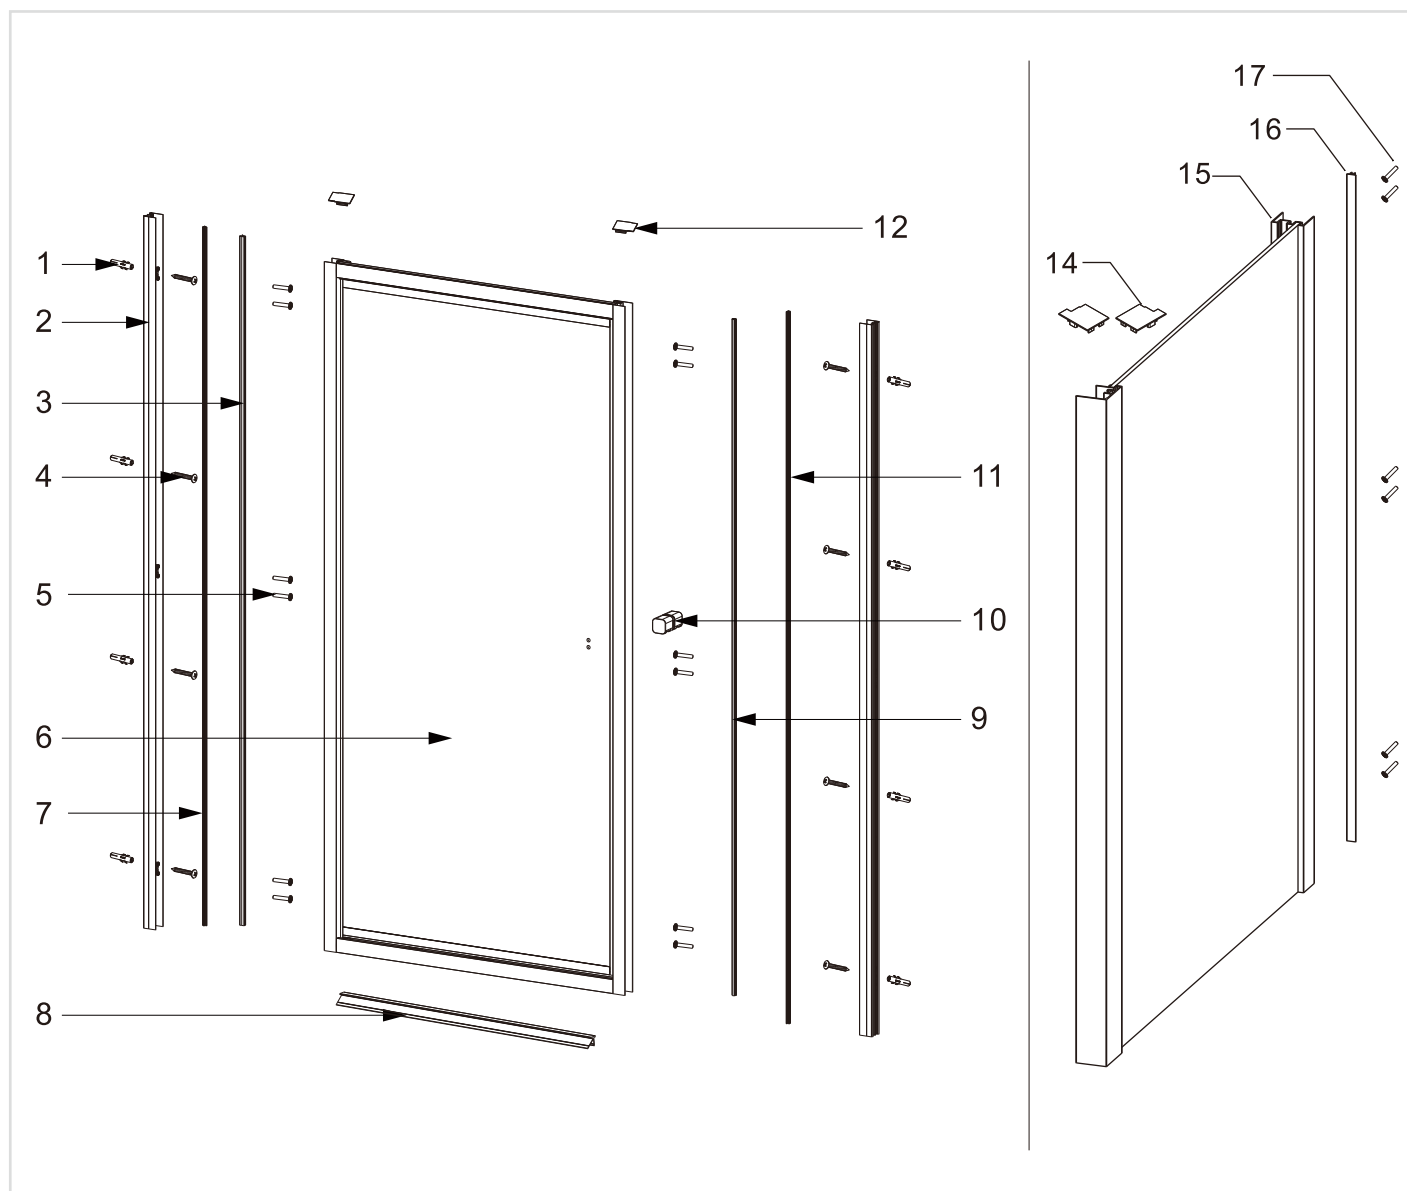

1 Wall Plug  x8	2 Wall Profile  x2	3 Moving panel seal  x1	14 Corner profile cap  RH LH x1
4 Screw ST4*50  x8	5 Screw M5*25  x12	6 Moving panel  x1	15 Side Panel  x1
7 Wall Profile Cover Strip  1880mm x1	8 Bottom seal  x1	9 Moving panel magnetic seal  x1	16 Wall Profile Cover Strip  1950mm x1
10 Handle  x1	11 Wall Profile Cover Strip  1950mm x1	12 Wall Profile Cap  x2	17 Screw M5*25  x6
13 Allen Key  3mm 4mm			

INSTALLATION

1

L

INSIDE

R

OUTSIDE

X

Product	X(mm)
Infold Door 700	650-680
Infold Door 760	710-740
Infold Door 800	750-780
Infold Door 900	850-880
Infold Door 1000	950-980

2

100%

10mm

2

LH

Ø 6x4

x4

x4

1

RH

Ø 6x4

x4


x4

1


5

INSTALLATION

3


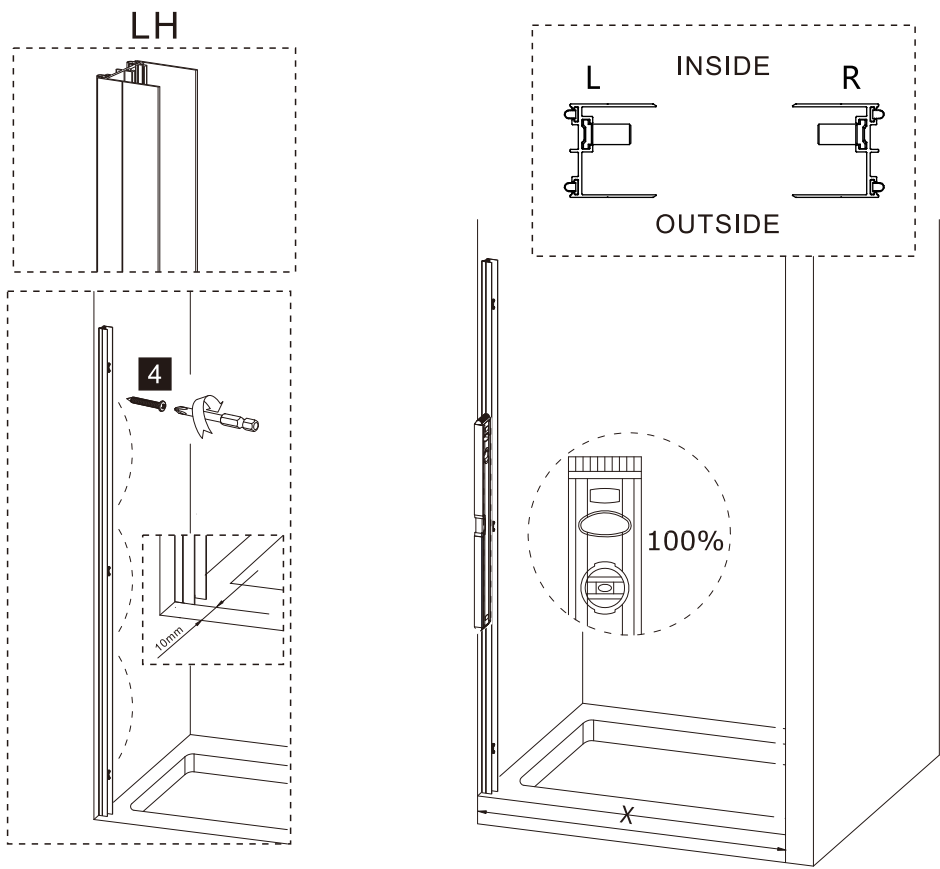


4


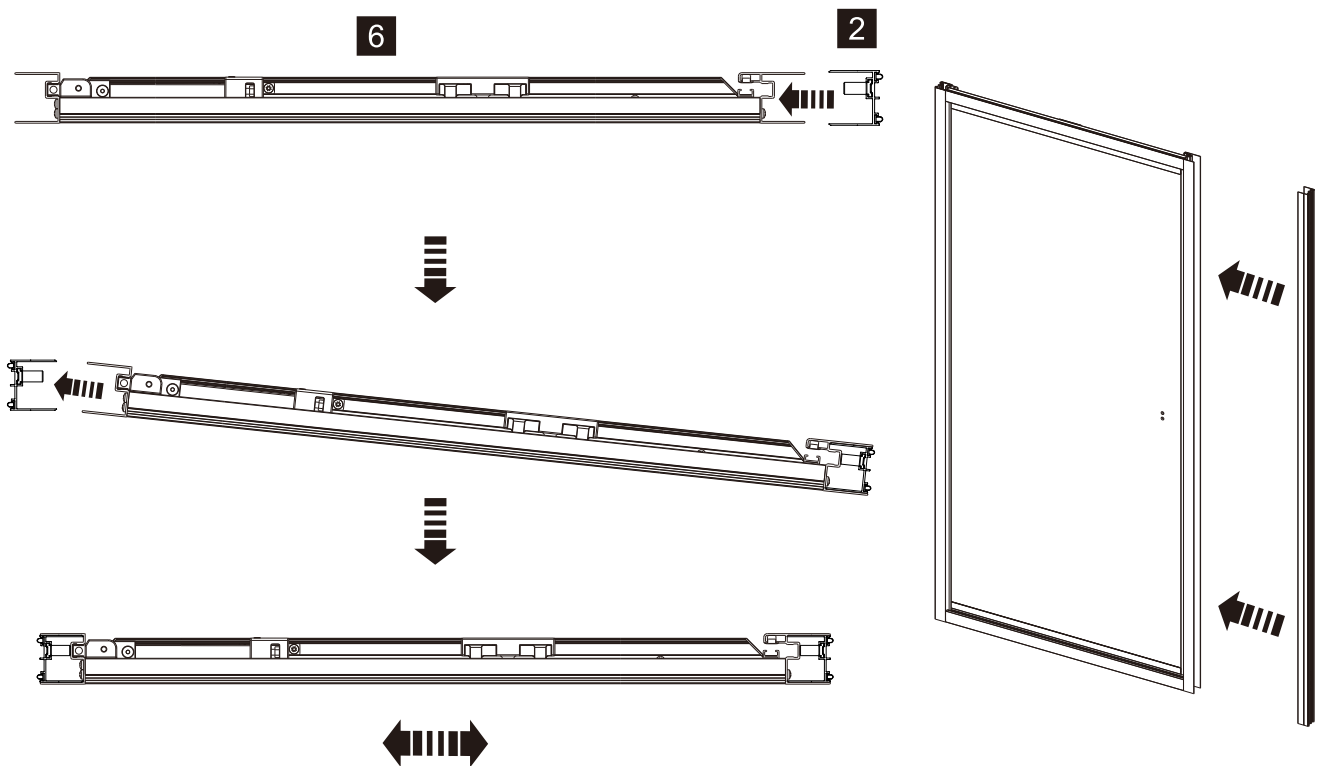


INSTALLATION

5

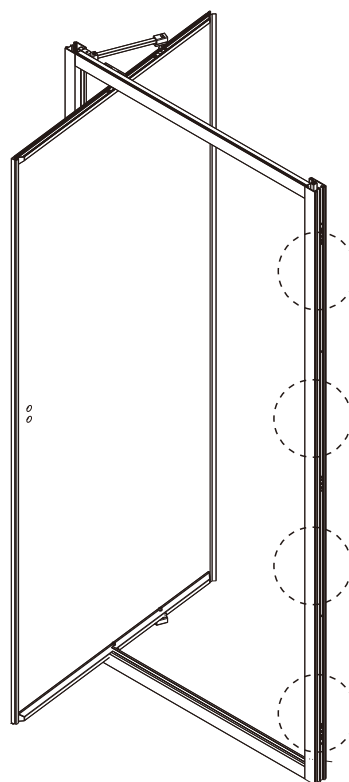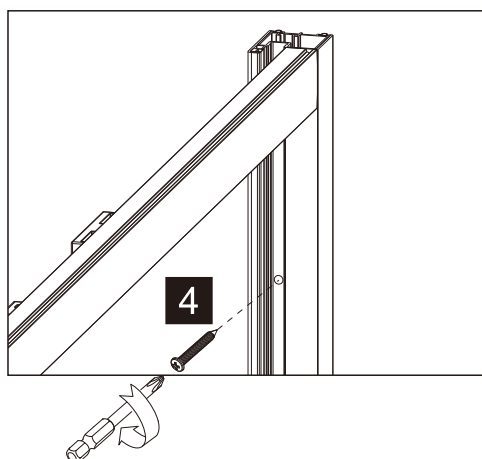

6

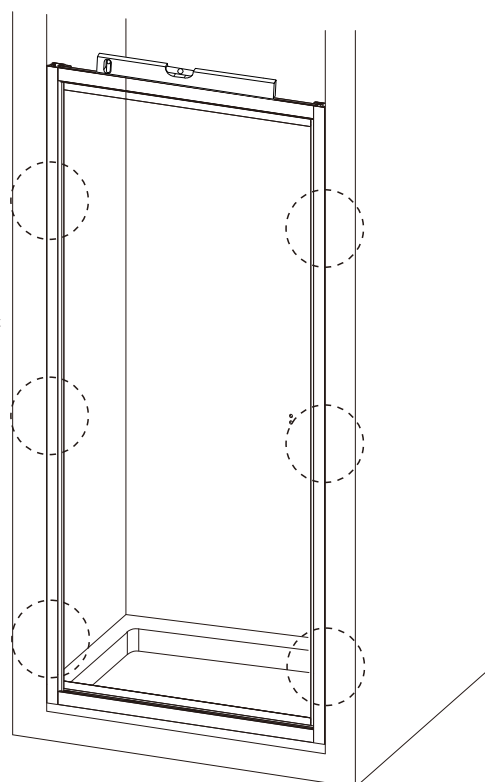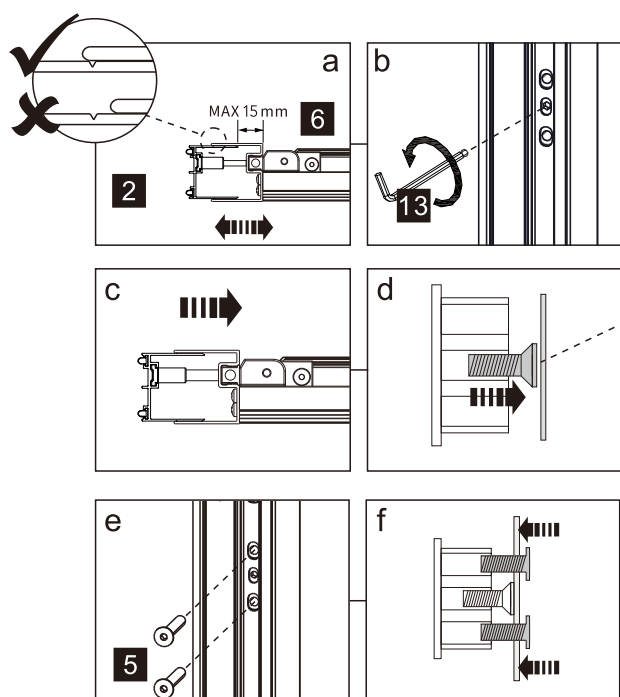

7

7



Wall Profile Cover Strip 1950MM


8




Tear off the extended part of the bottom seal if necessary.

INSTALLATION

9

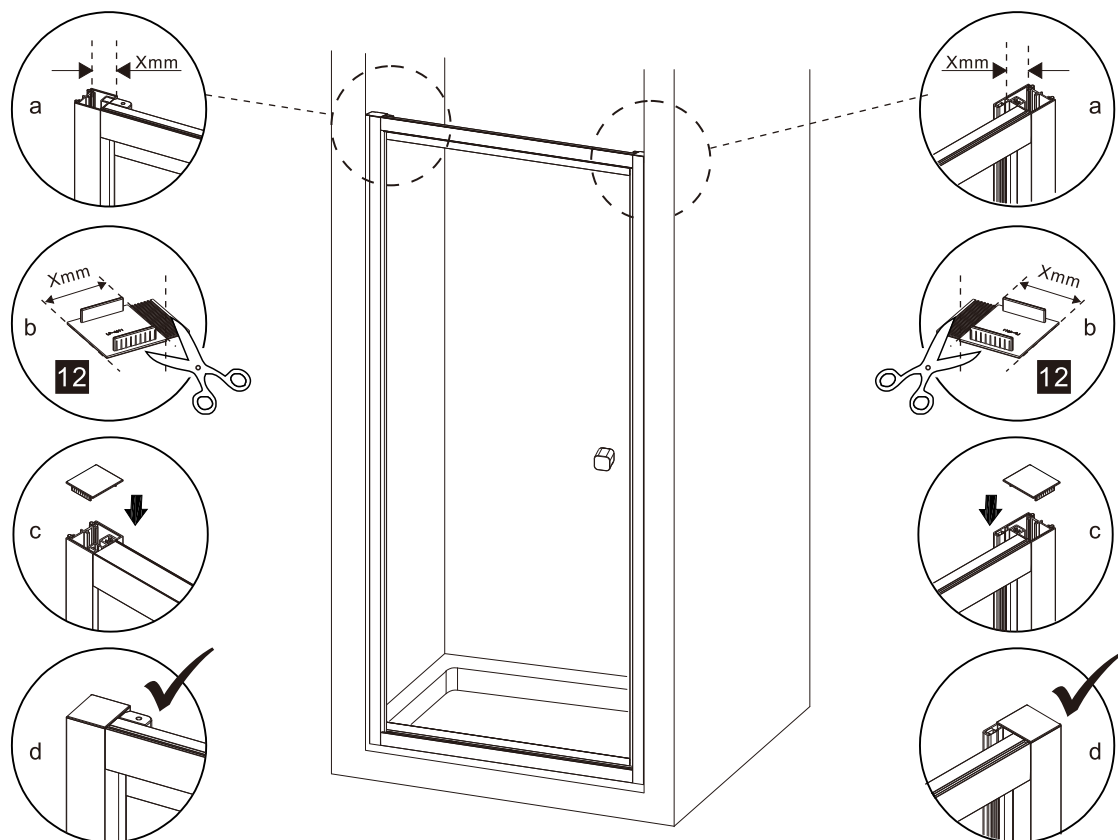


10

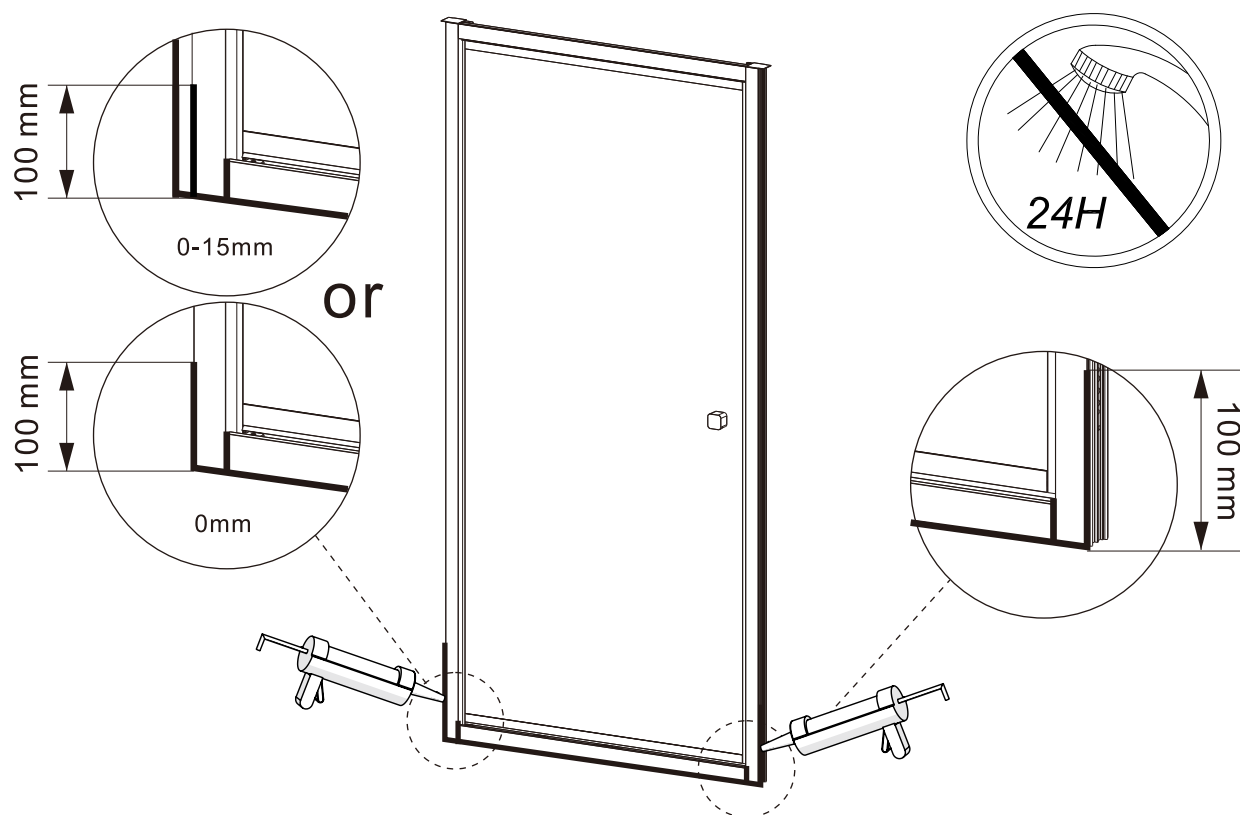


INSTALLATION

Two options for installation of Infold door and Side panel.

Option 1

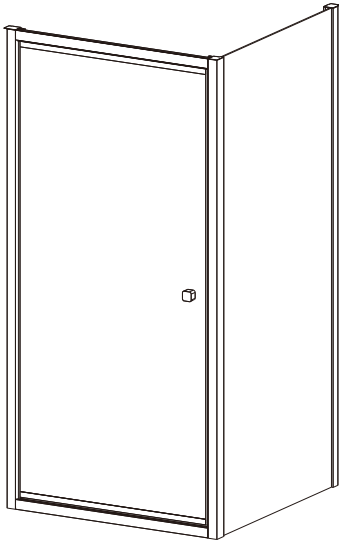


LH

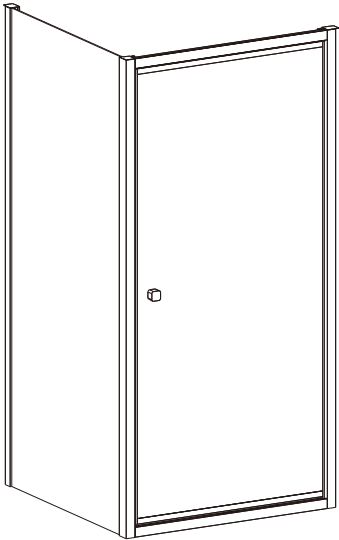


RH



Option 2

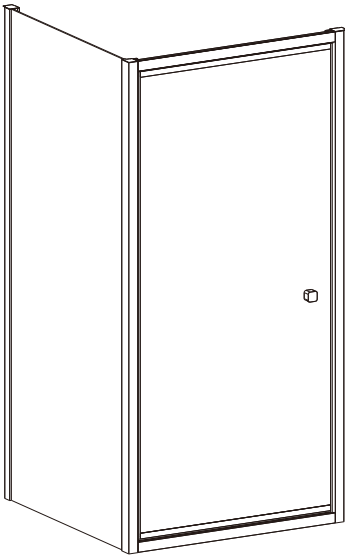

LH

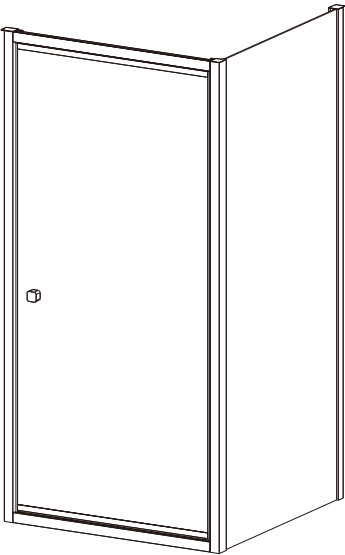



RH

INSTALLATION






Option 1

Product	X(mm)
Infold Door 700	650-680
Infold Door 760	710-740
Infold Door 800	750-780
Infold Door 900	850-880
Infold Door 1000	950-980

Product	Y(mm)
Side Panel 700	653-668
Side Panel 760	713-728
Side Panel 800	753-768
Side Panel 900	853-868

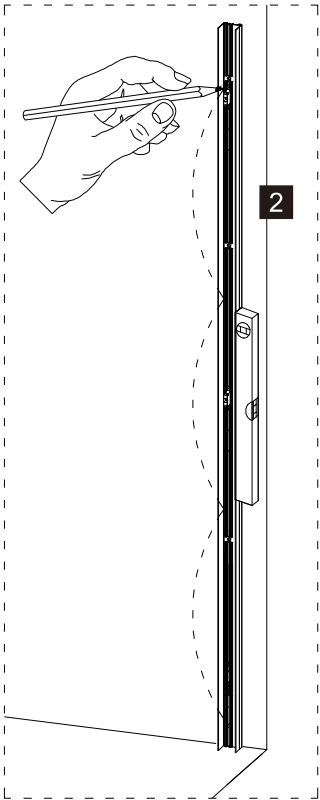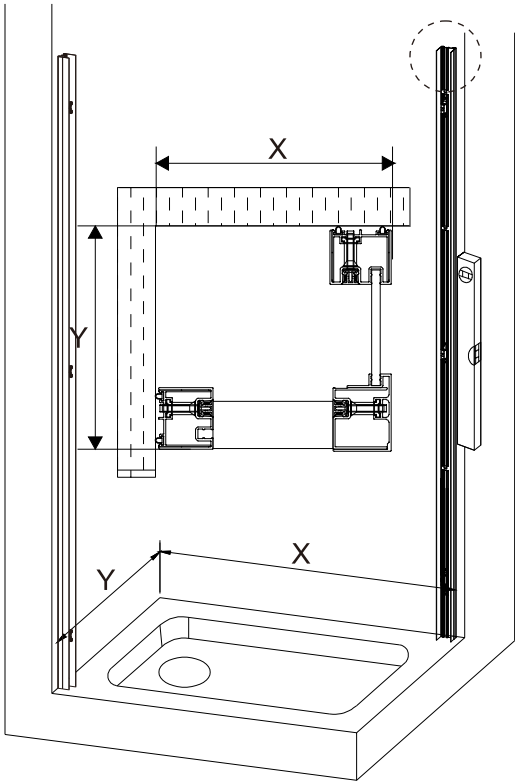


Option 1

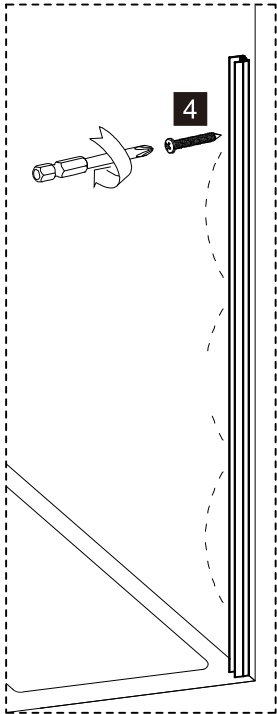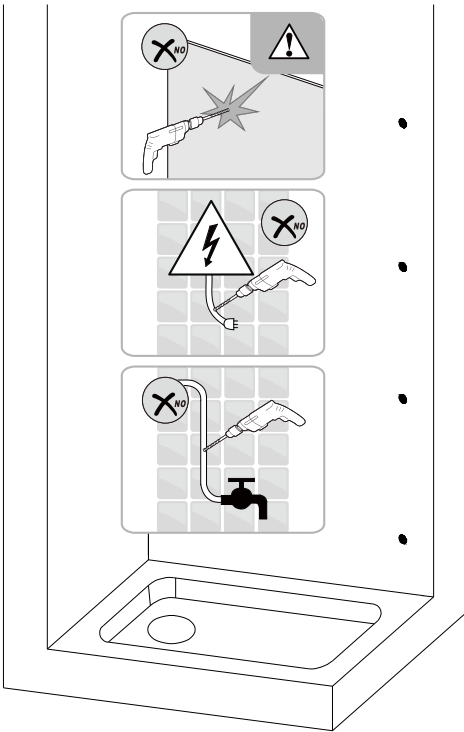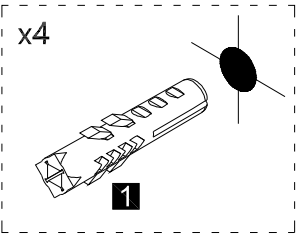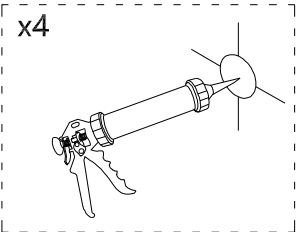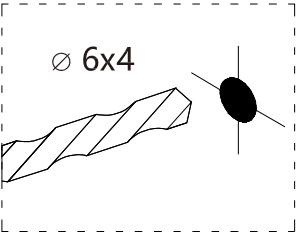


INSTALLATION

Option 1

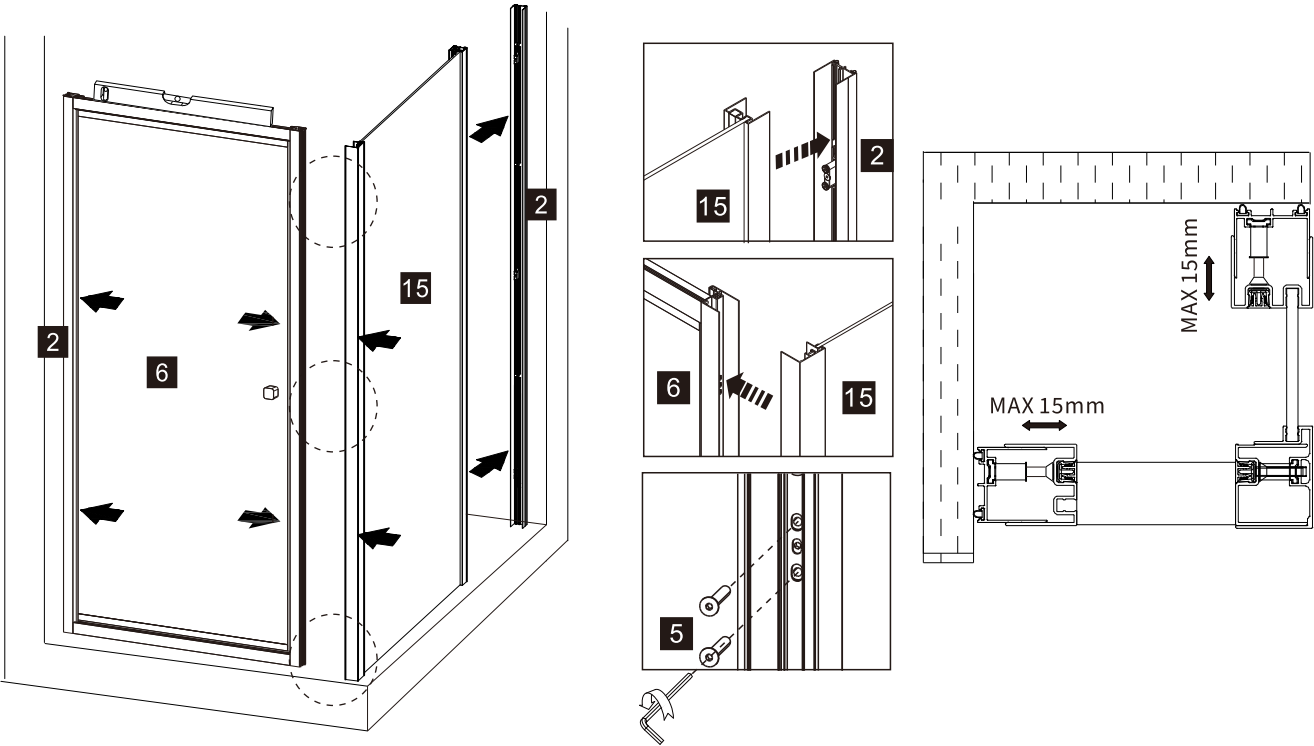


Option 1

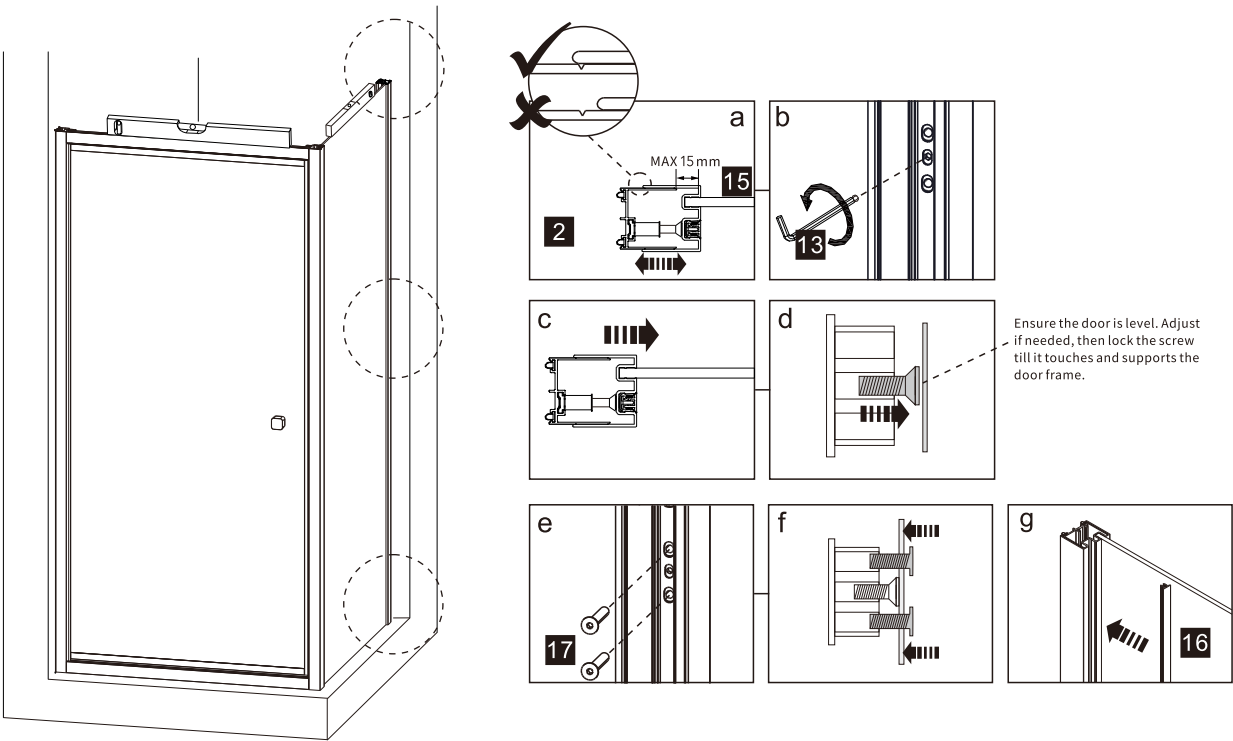


INSTALLATION

Option 1

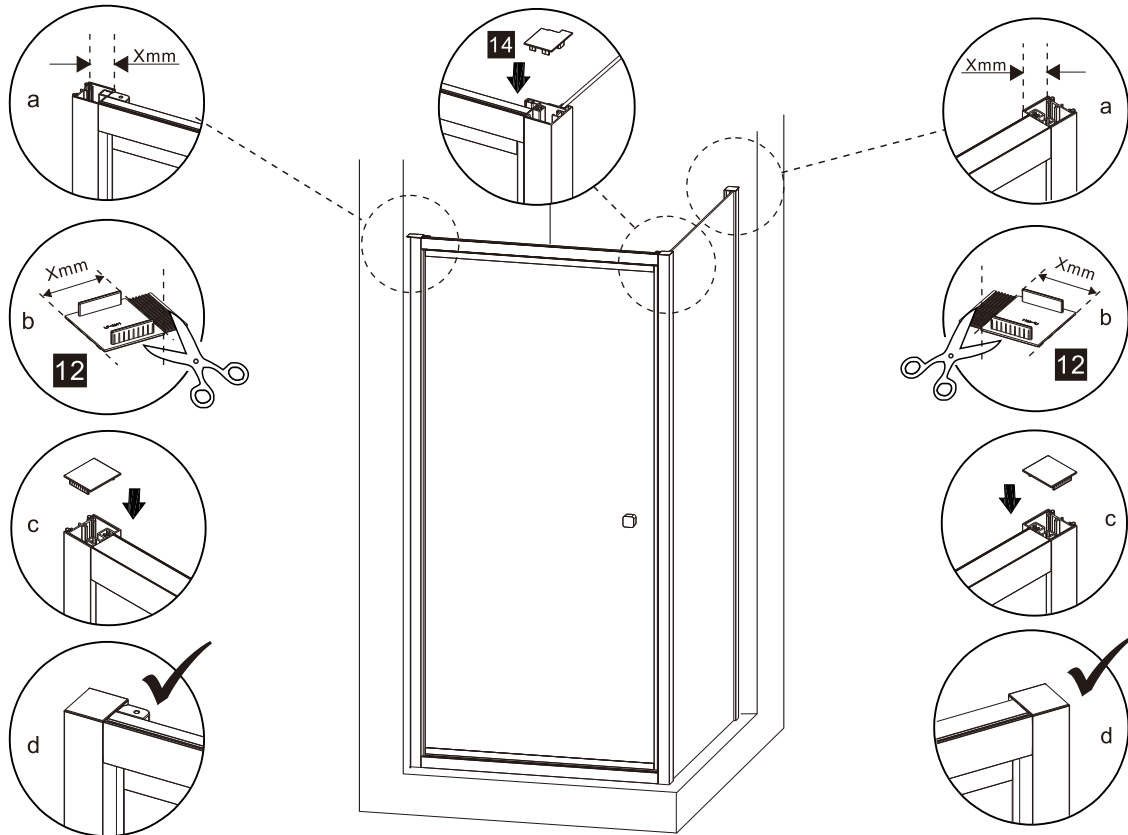


Option 1

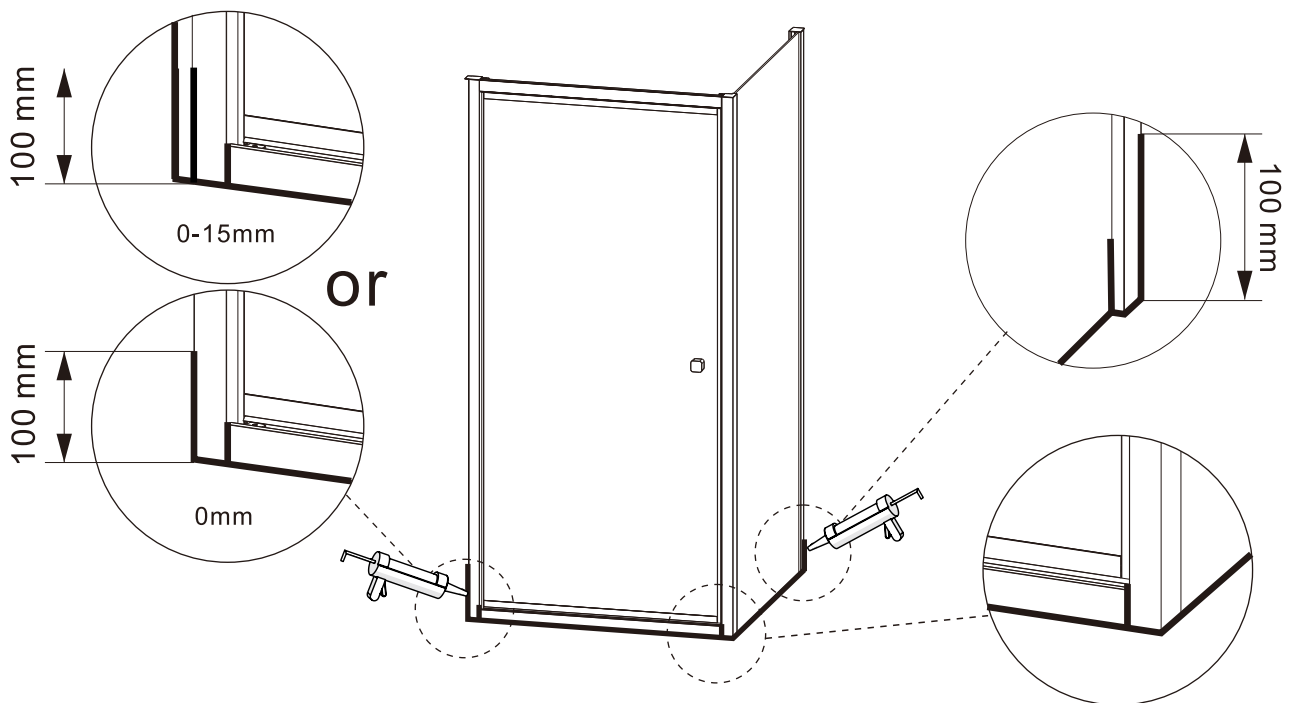



INSTALLATION

Option 2





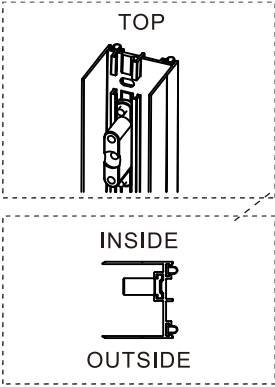


Product	X(mm)
Infold Door 700	650-680
Infold Door 760	710-740
Infold Door 800	750-780
Infold Door 900	850-880
Infold Door 1000	950-980









Product	Y(mm)
Side Panel 700	653-668
Side Panel 760	713-728
Side Panel 800	753-768
Side Panel 900	853-868

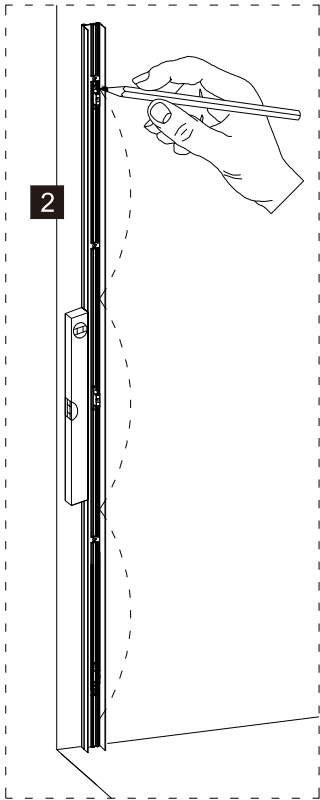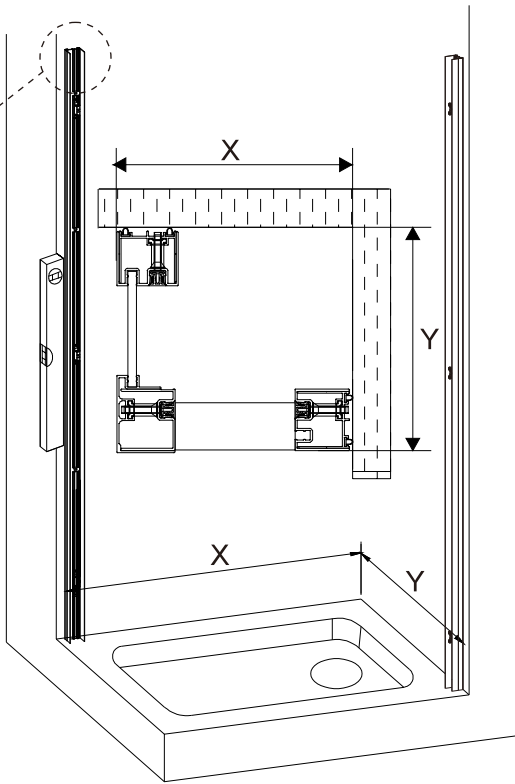




Option 2

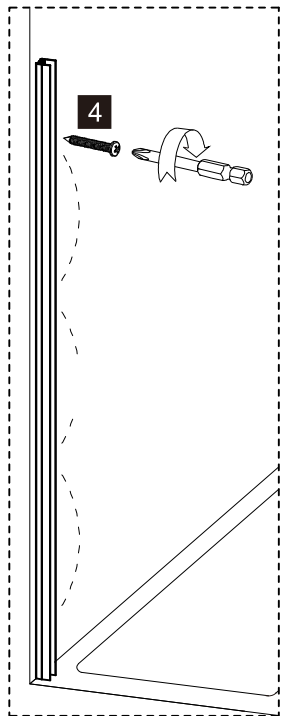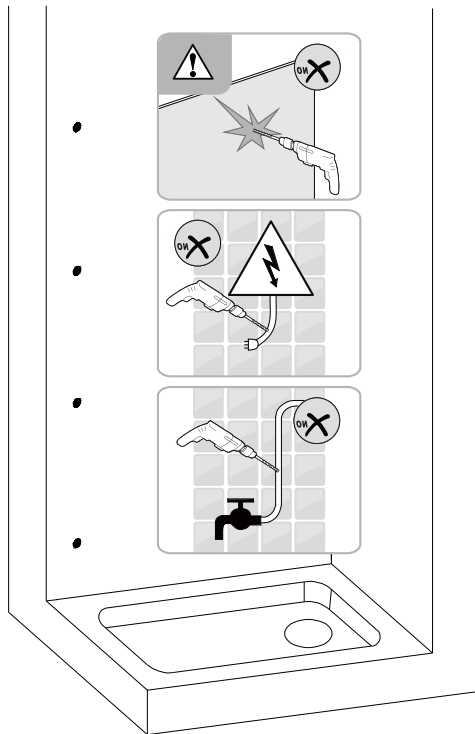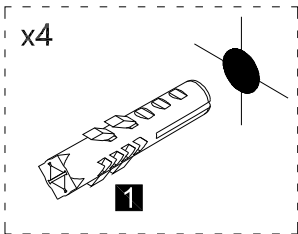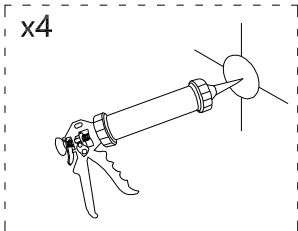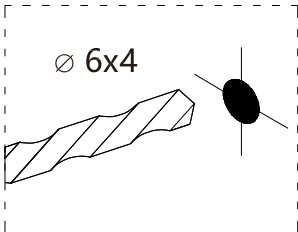

Option 2

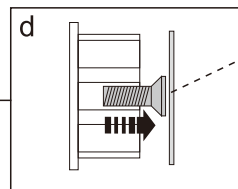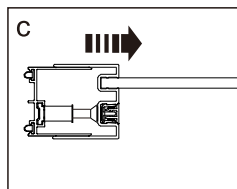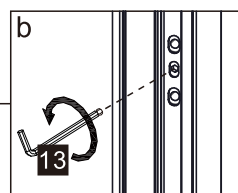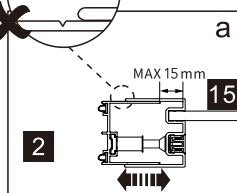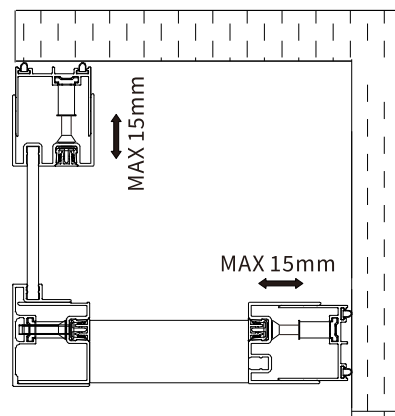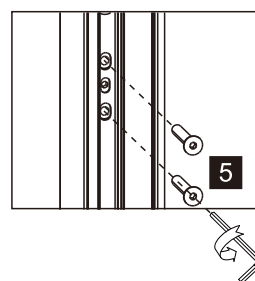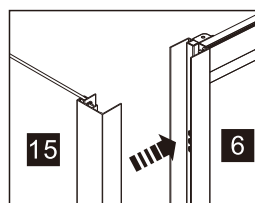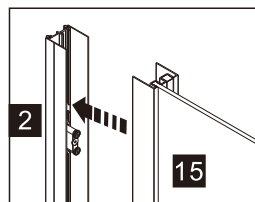


Ensure the door is level. Adjust if needed, then lock the screw till it touches and supports the door frame.

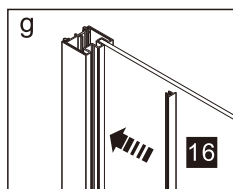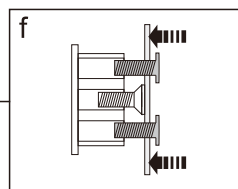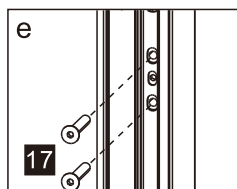

INSTALLATION

Option 2

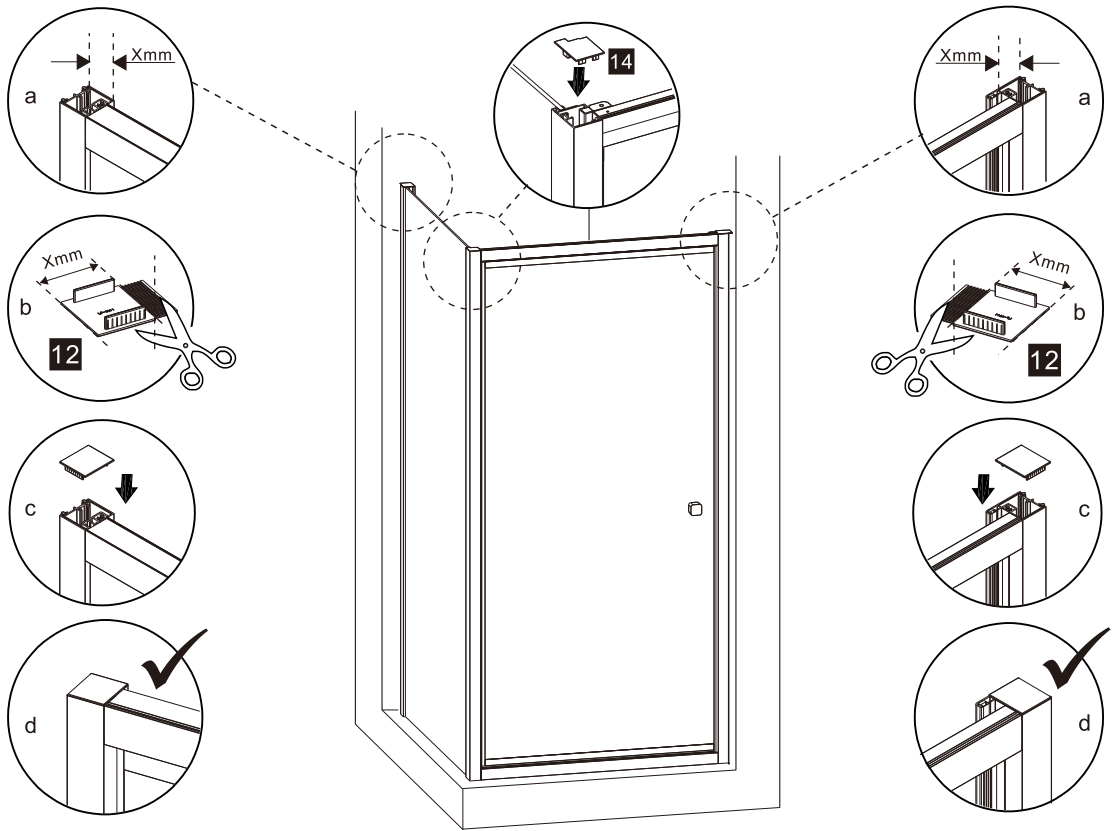

Option 2

