


Pivot Door & Side Panel

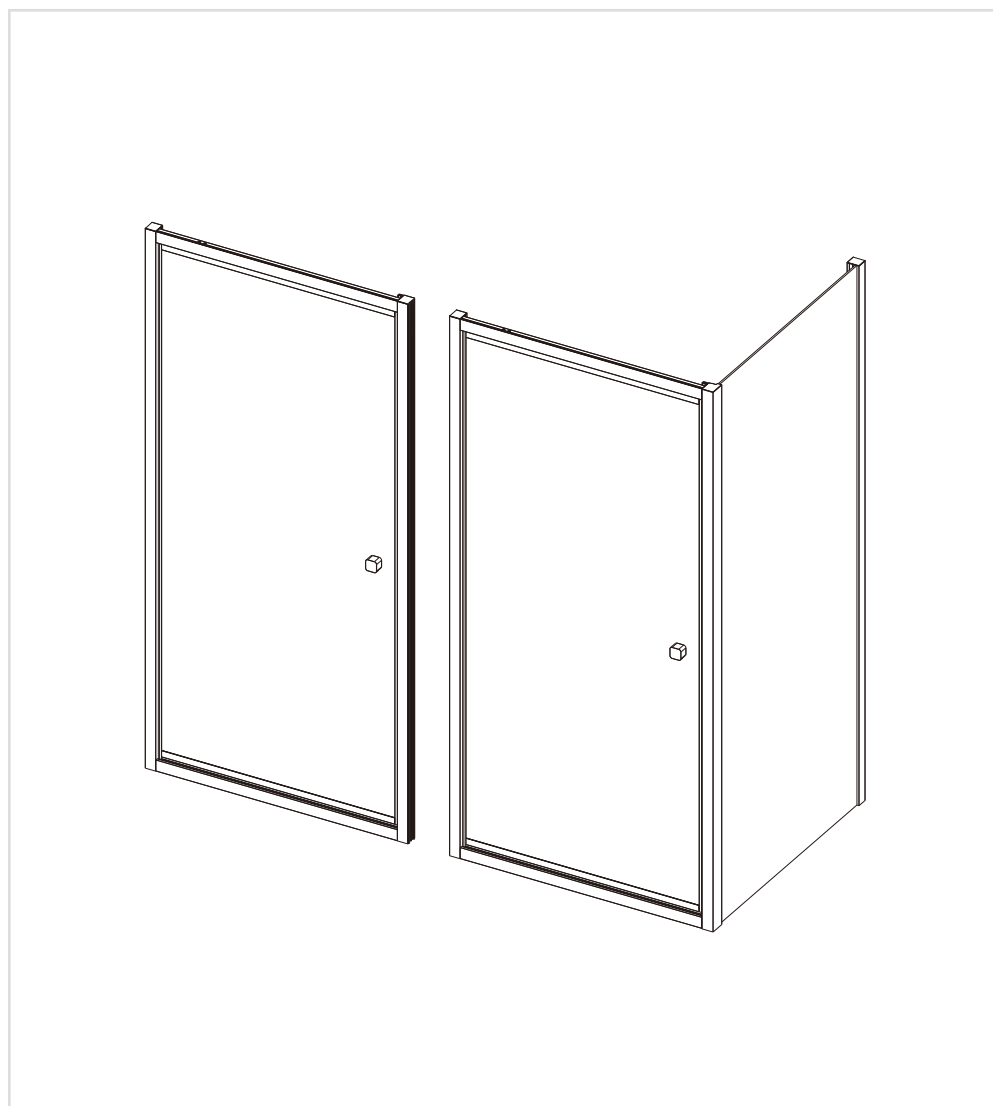

PRODUCT CODES:

CAPDSC0800_V2	CASPSC0700_V2
CAPDSC0900_V2	CASPSC0760_V2
CAPDBC0800_V2	CASPSC0800_V2
CAPDBC0900_V2	CASPSC0900_V2
CAPDFC0800_V2	CASPBC0700_V2
CAPDFC0900_V2	CASPBC0760_V2
CAPDVC0800	CASPBC0800_V2
CAPDVC0900	CASPBC0900_V2
CAPDBZC0800	CASFBC0700
CAPDBZC0900	CASFBC0760_V2
CAPDTC0800	CASFBC0800_V2
CAPDTC0900	CASFBC0900_V2
HXPDSC0800	CASPVC0700
HXPDSC0900	CASPVC0760
HXPDBC0800	CASPVC0800
HXPDBC0900	CASPVC0900
HXPDFC0800	CASPBZC0700
HXPDFC0900	CASPBZC0760
	CASPBZC0800
	CASPBZC0900
	CASPTC0700
	CASPTC0760
	CASPTC0800
	CASPTC0900
	HXSPSC0700
	HXSPSC0760
	HXSPSC0800
	HXSPSC0900
	HXSPBC0700
	HXSPBC0760
	HXSPBC0800
	HXSPBC0900
	HXSFCB0700
	HXSFCB0760
	HXSFCB0800
	HXSFCB0900

1. Pre-Installation Checklist

☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Shower tray **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

⚠ Safety Notes:

- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

2. Unpacking & Components

Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

Missing/Damaged Parts?

Contact Bathroom Brands immediately: ☎0345 873 8840.

3. Step-by-Step Installation

A. Frame Assembly

1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×8 total).
- Cover ends with profile caps if any.

B. Door Installation

3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

C. Final Checks

5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

4. Care & Maintenance


- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.

Ensure seals are flush to prevent leaks.


ORIENTATION


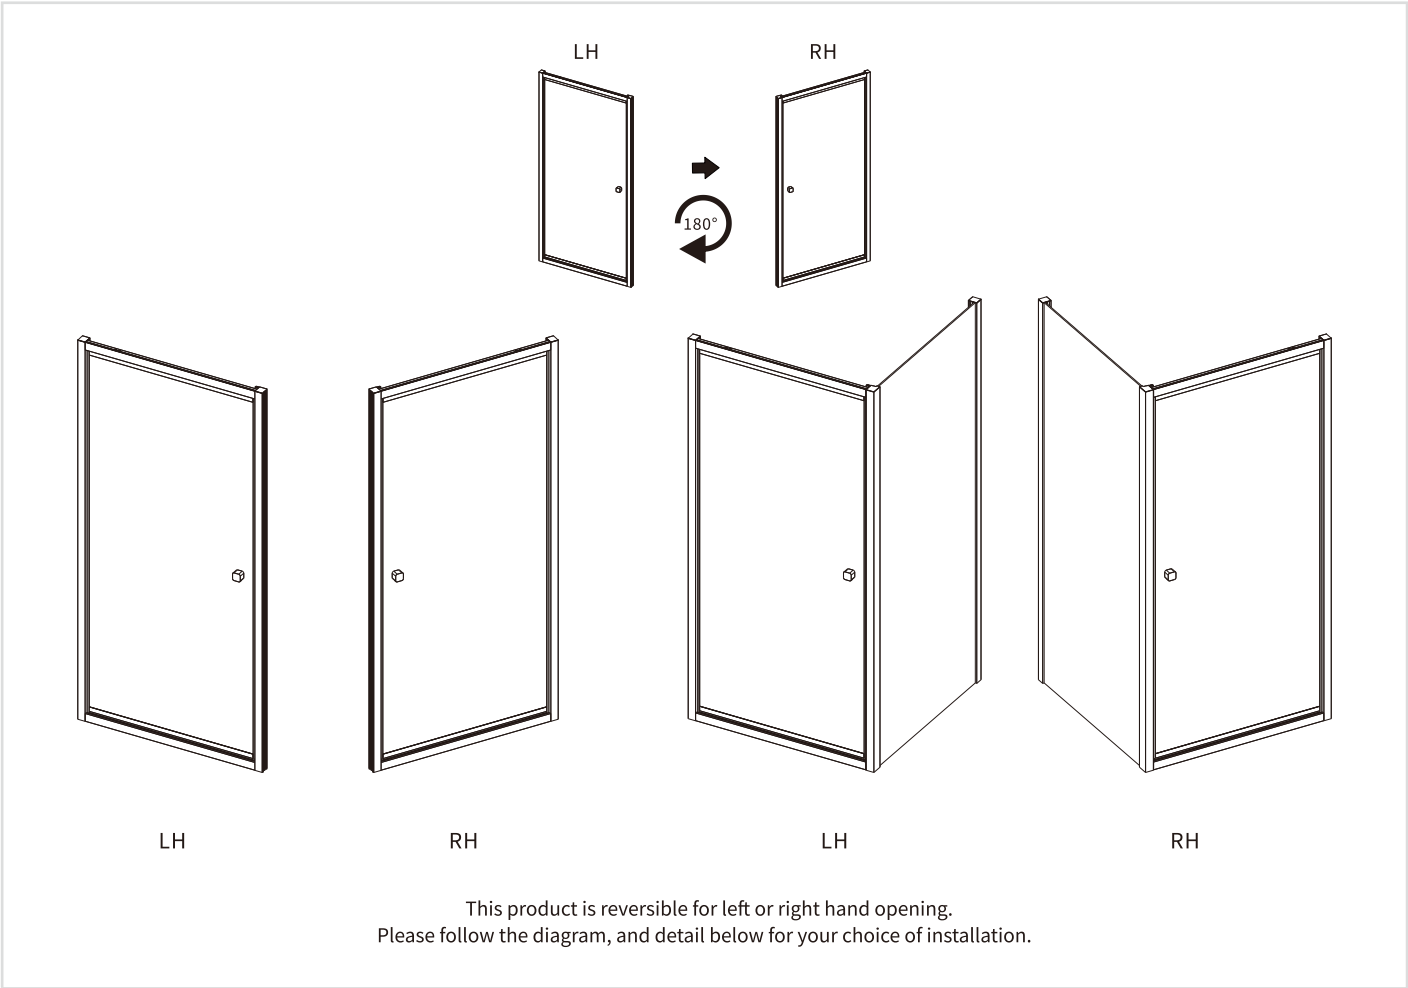


Tools Required (not supplied):

Spirit Level		Torque Screw Driver	
Pencil		Snips	
Drill		6mm Drill Bit	
Silicone		Measuring Tape	
Knife			

COMPONENTS

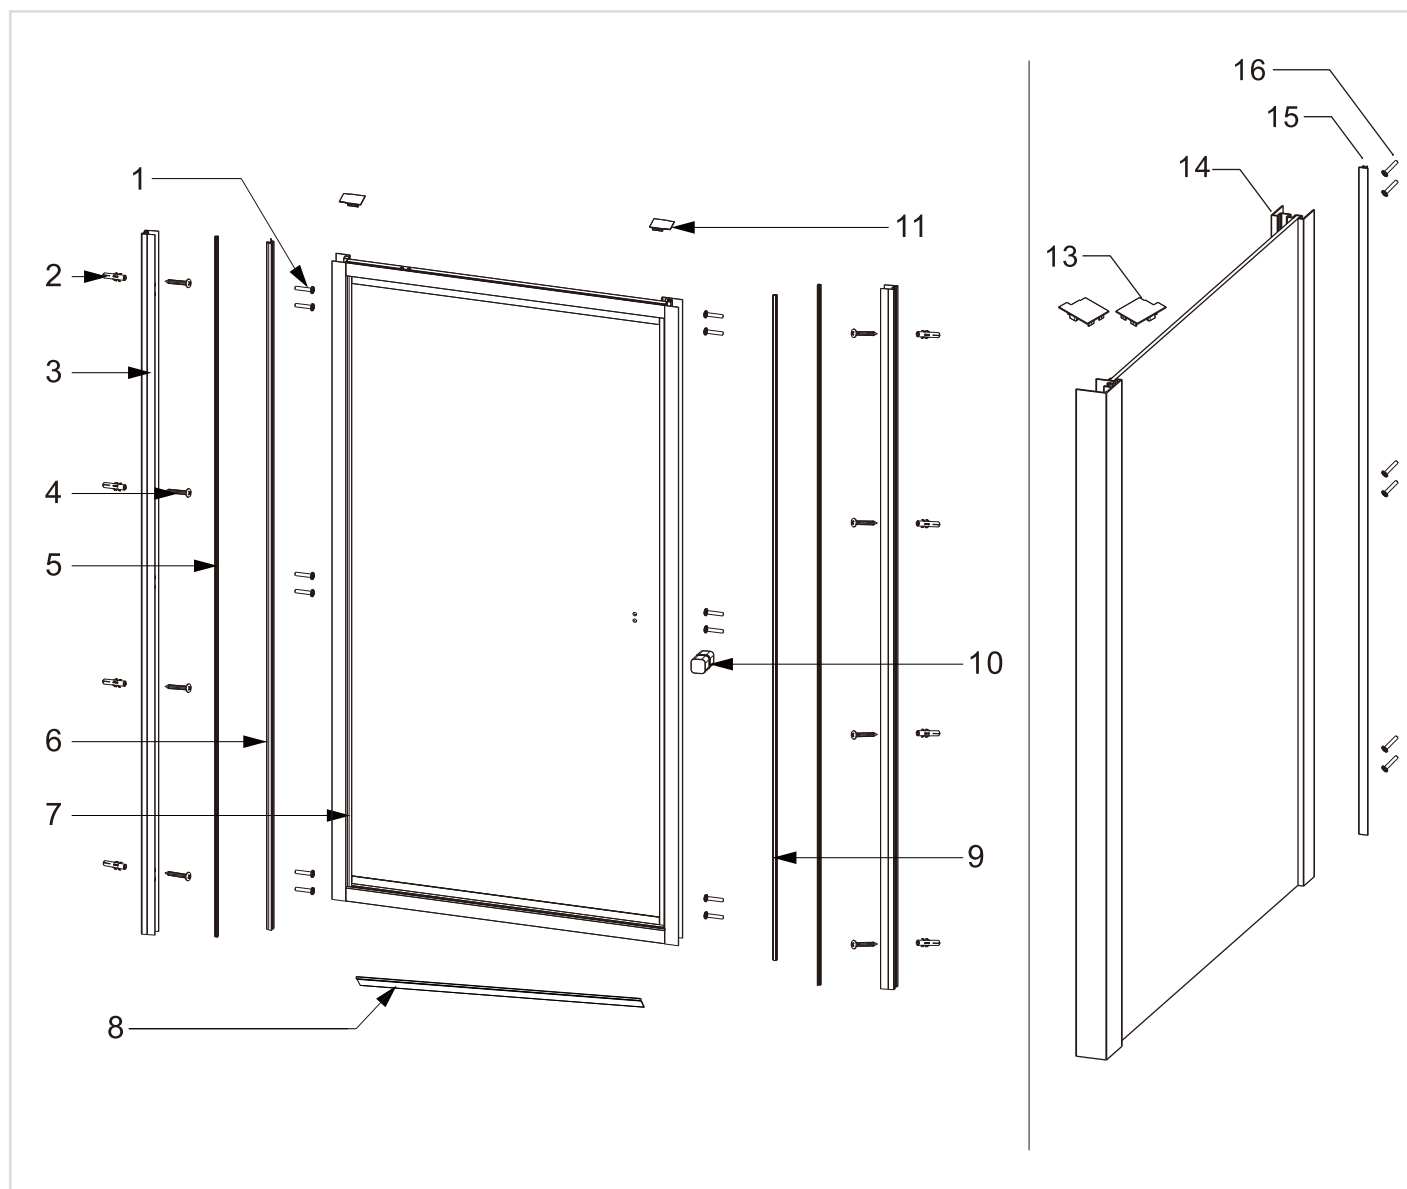

1  Screw M5*25 x12	2  Wall Plug x8	3  Wall Profile x2	13  Corner profile cap RH LH x1
4  Screw ST4*50 x8	5  Wall Profile Cover Strip L=1950mm x2	6  Moving panel seal x1	14  Side Panel x1
7  Moving door x1	8  Bottom seal x1	9  Moving panel magnetic seal x1	15  Wall Profile Cover Strip L=1950mm x1
10  Handle x1	11  Wall Profile Cap x2	12  Allen Key 3mm	16  Screw M5*25 x6

INSTALLATION

1

L

INSIDE

R

OUTSIDE

X

Product	X(mm)
Pivot Door 800	750-780
Pivot Door 900	850-880

3

100%

10mm

10mm

2

LH

6x4

x4

x4

2

RH

6x4


x4

x4


2

INSTALLATION

3

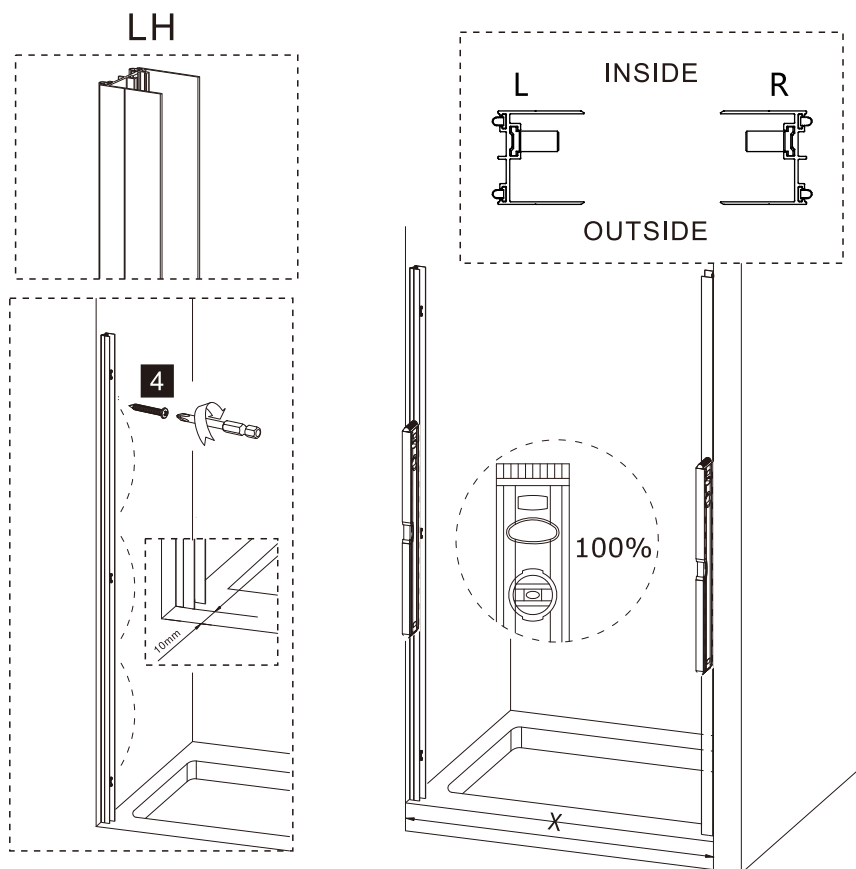


4

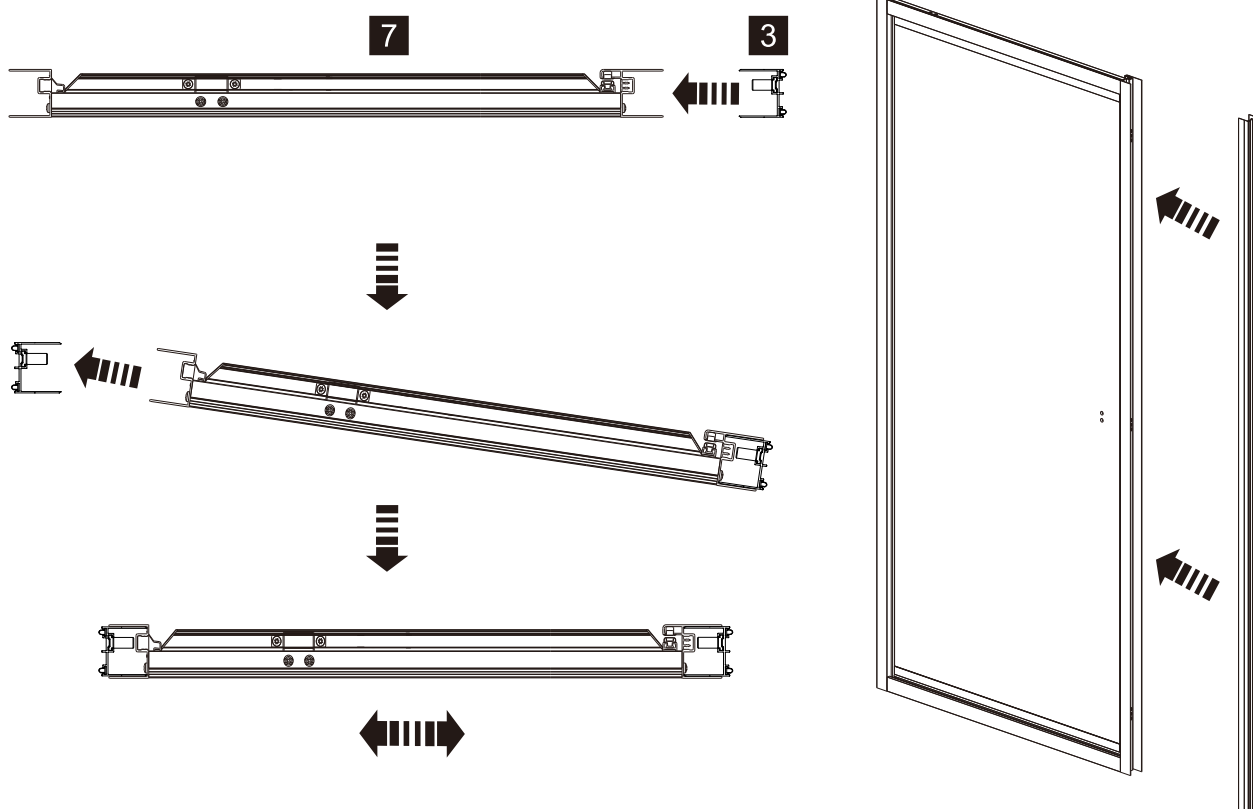


INSTALLATION

5

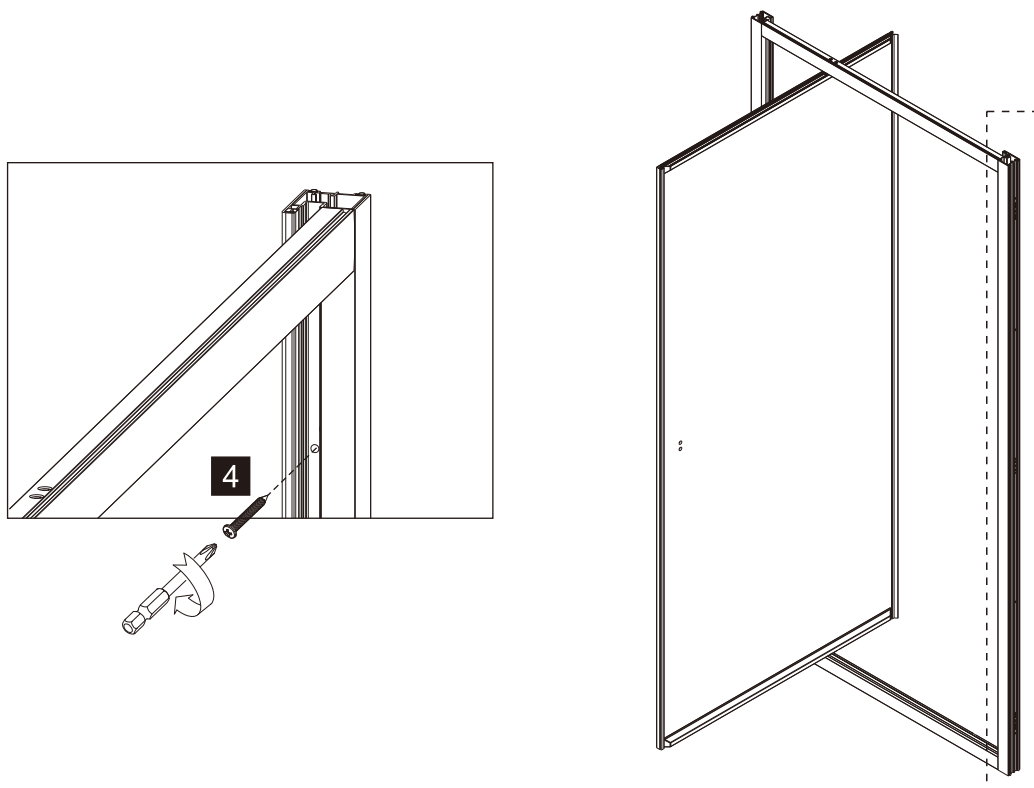


6

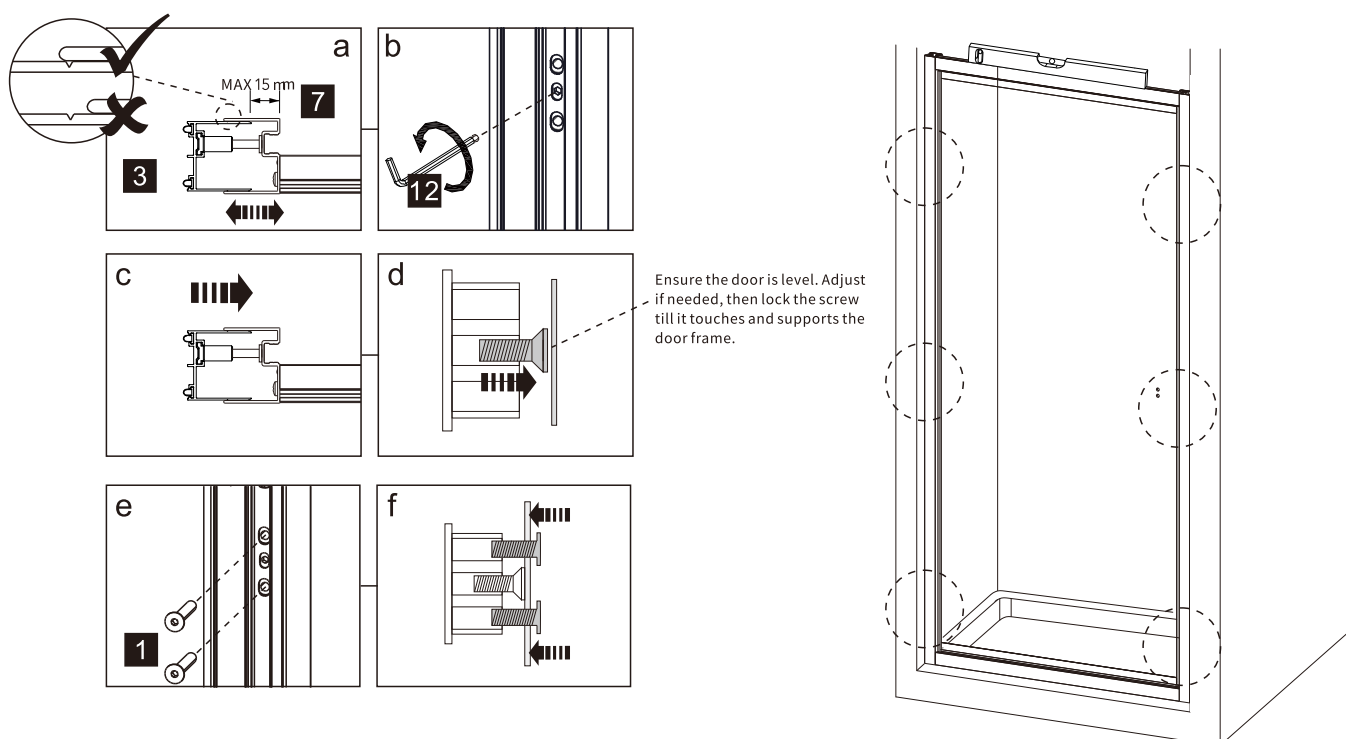


INSTALLATION

7

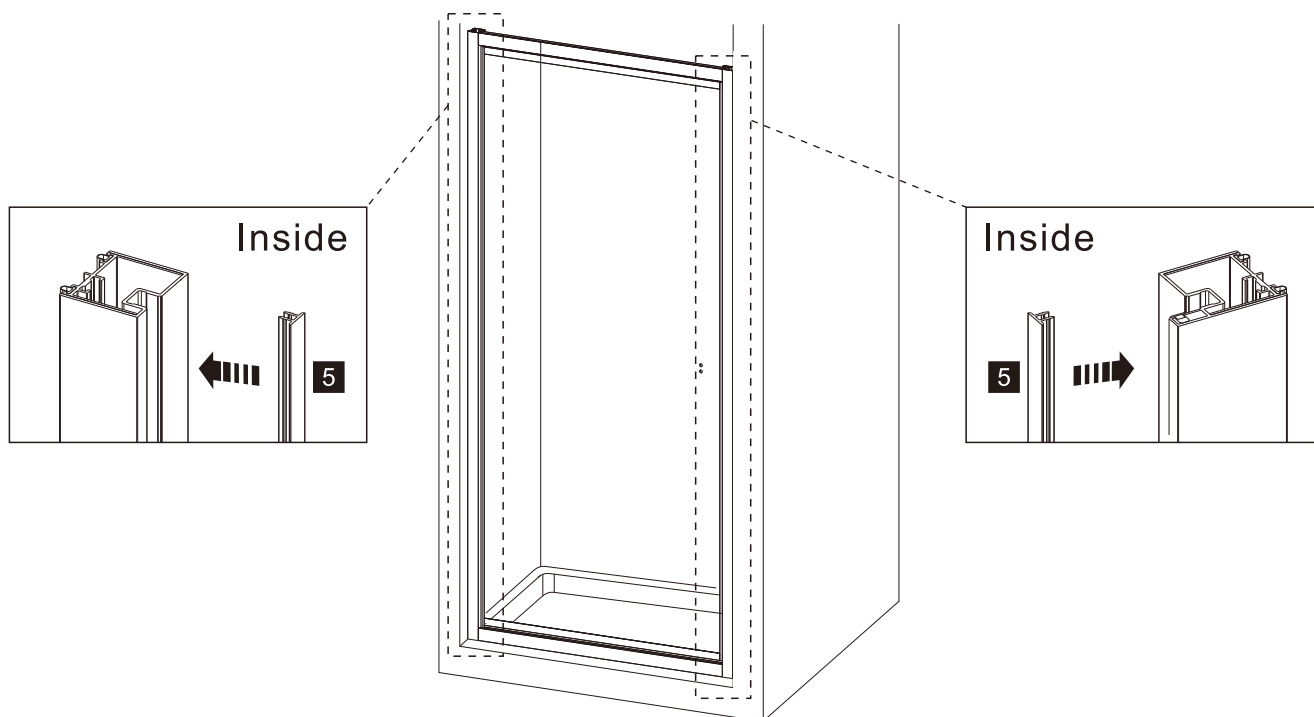


8

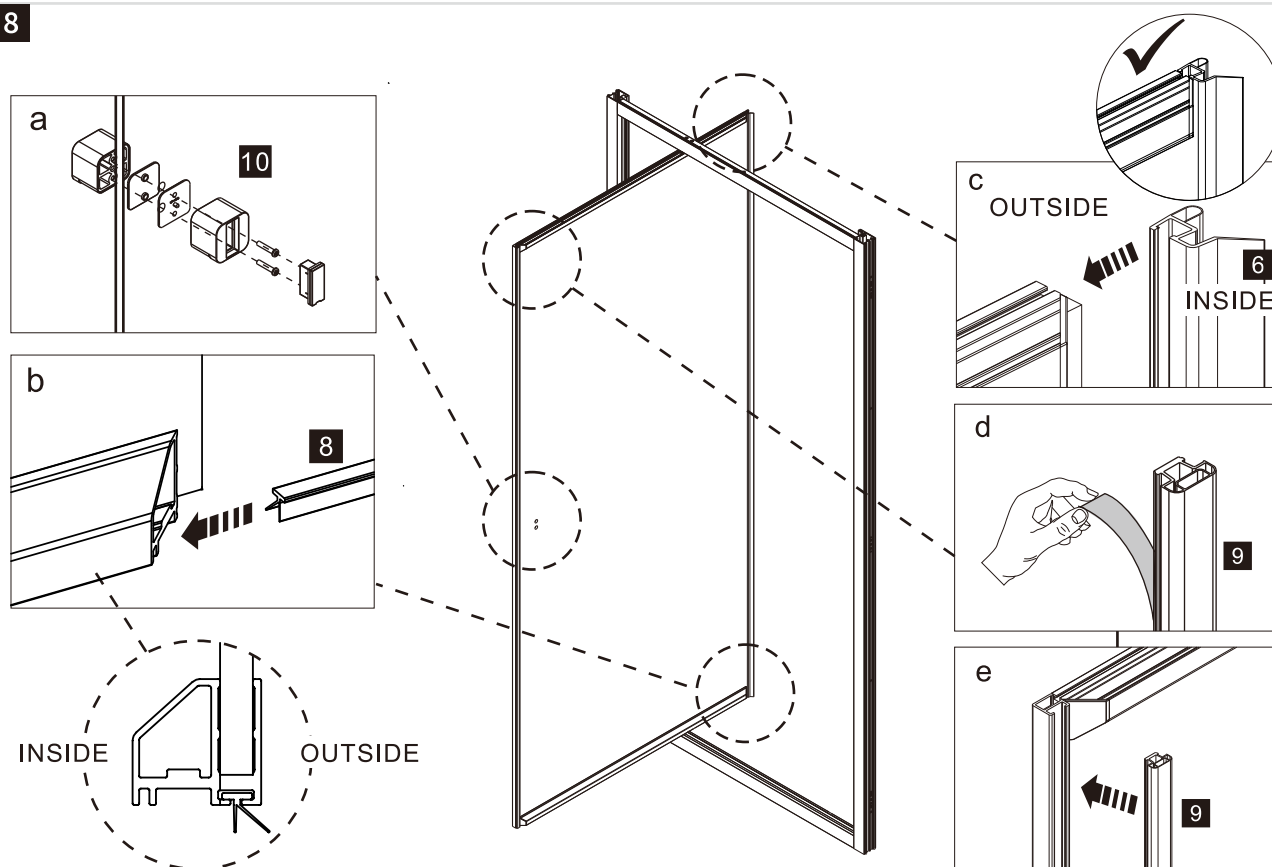


INSTALLATION

9

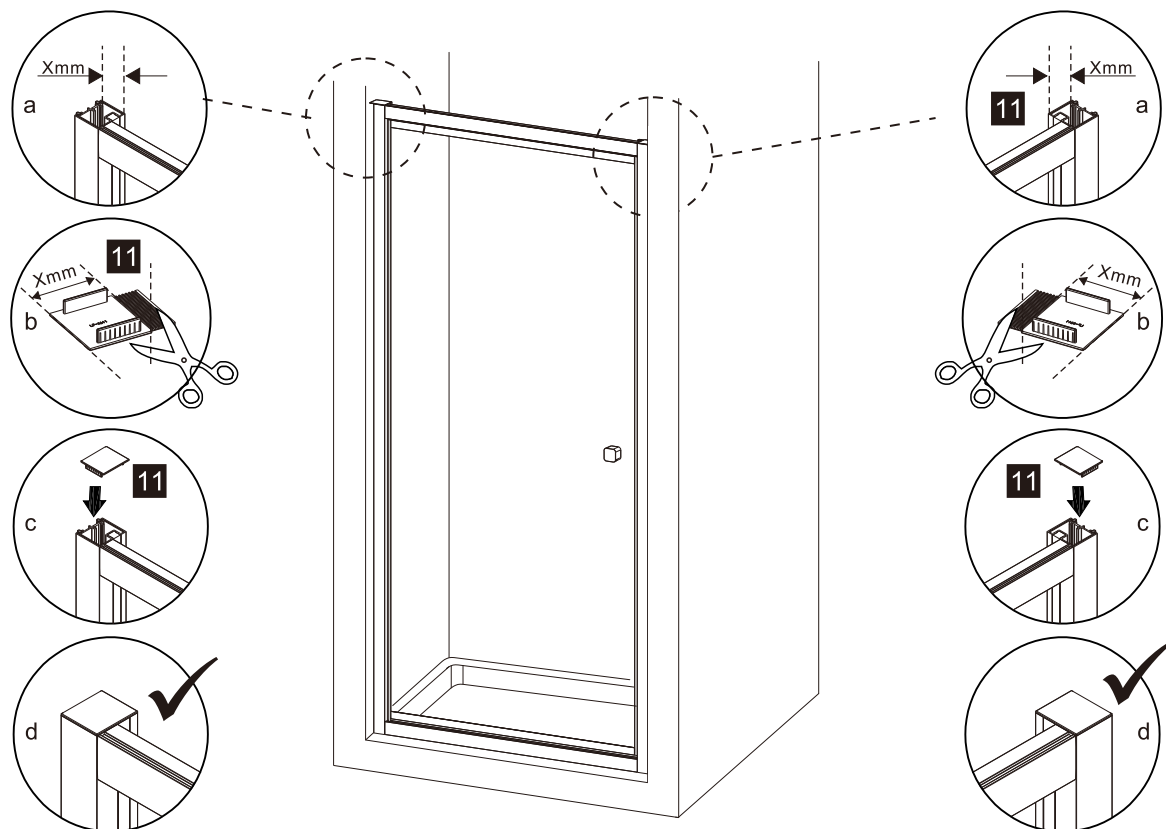


10

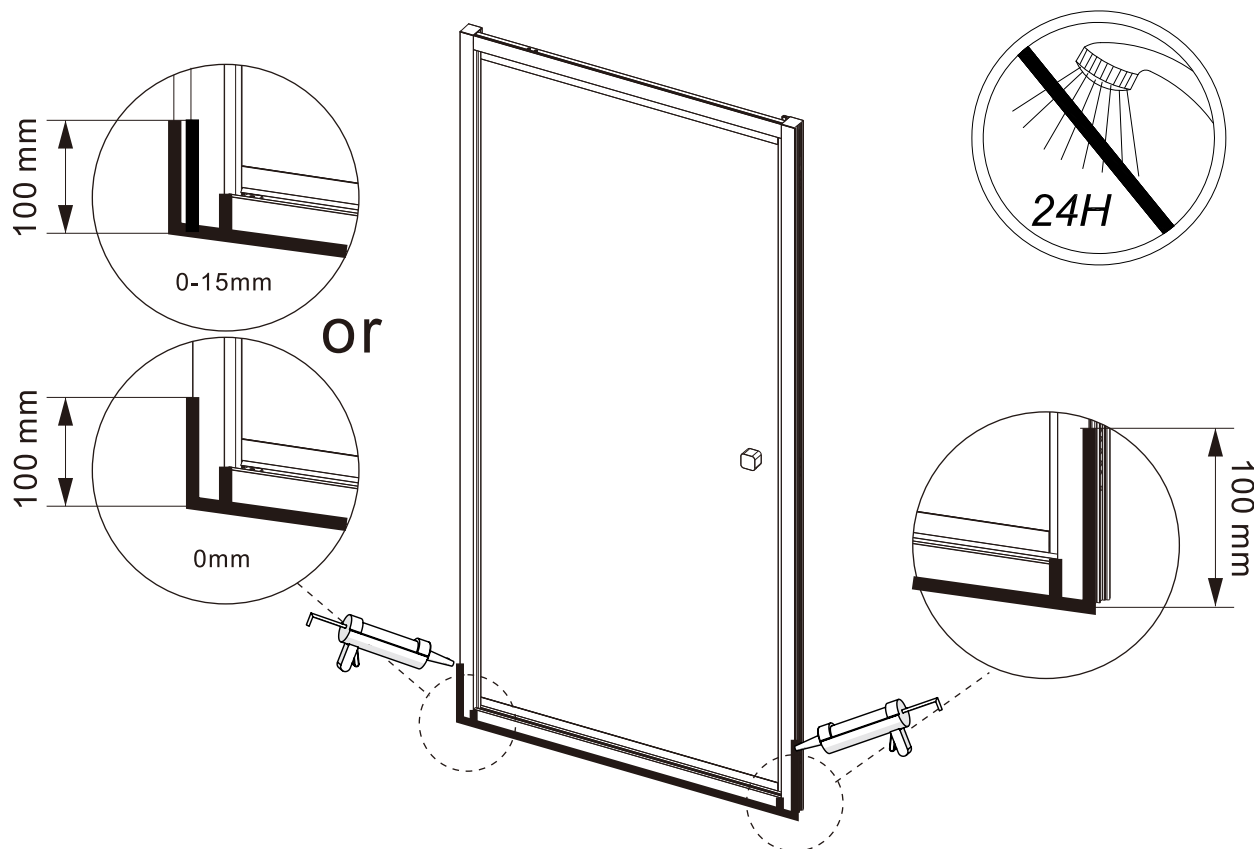



INSTALLATION

11



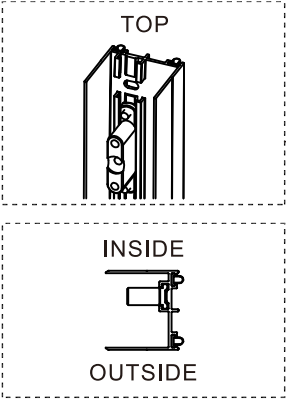


Product	X(mm)
Pivot Door 800	750-780
Pivot Door 900	850-880

Product	Y(mm)
Side Panel 700	653-668
Side Panel 760	713-728
Side Panel 800	753-768
Side Panel 900	853-868

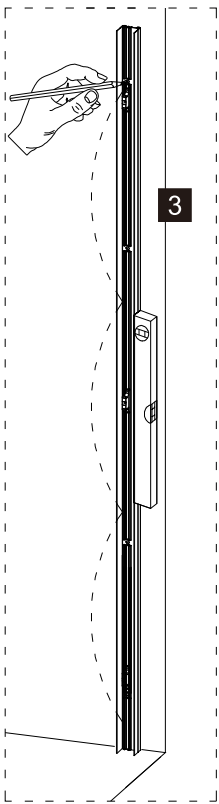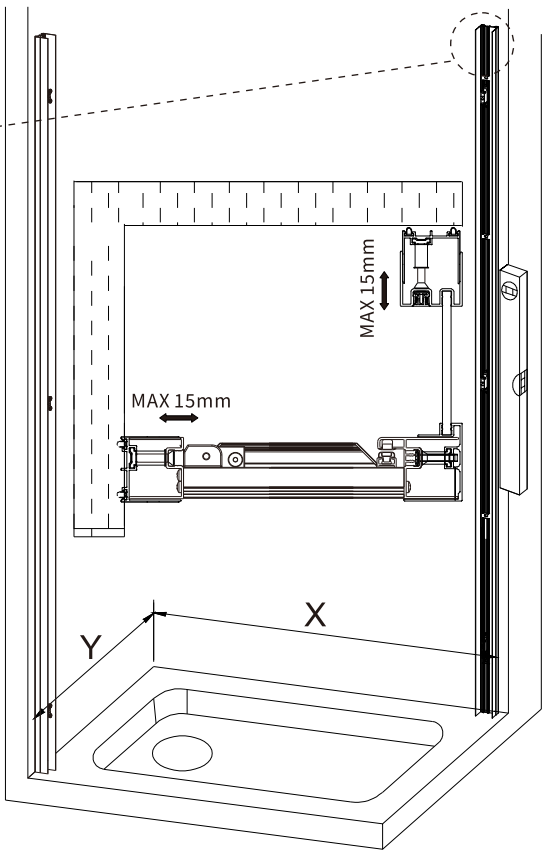


12

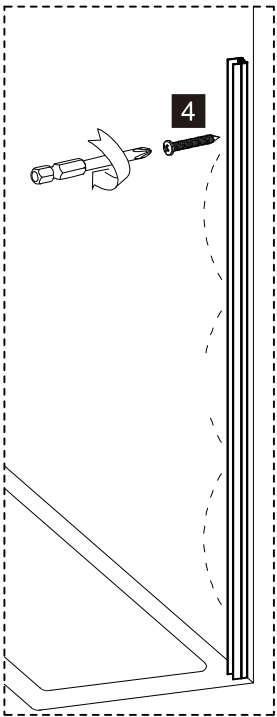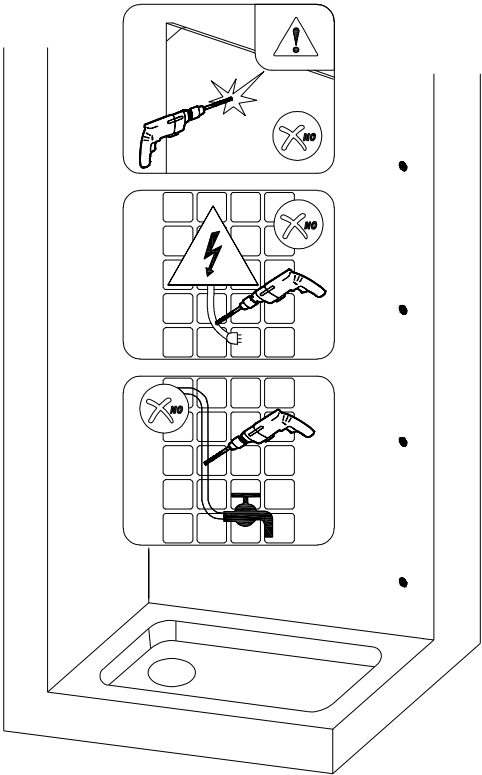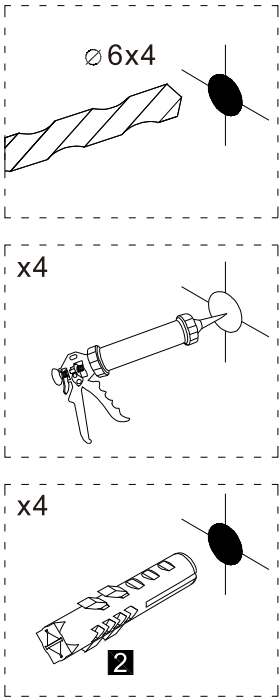


INSTALLATION

13

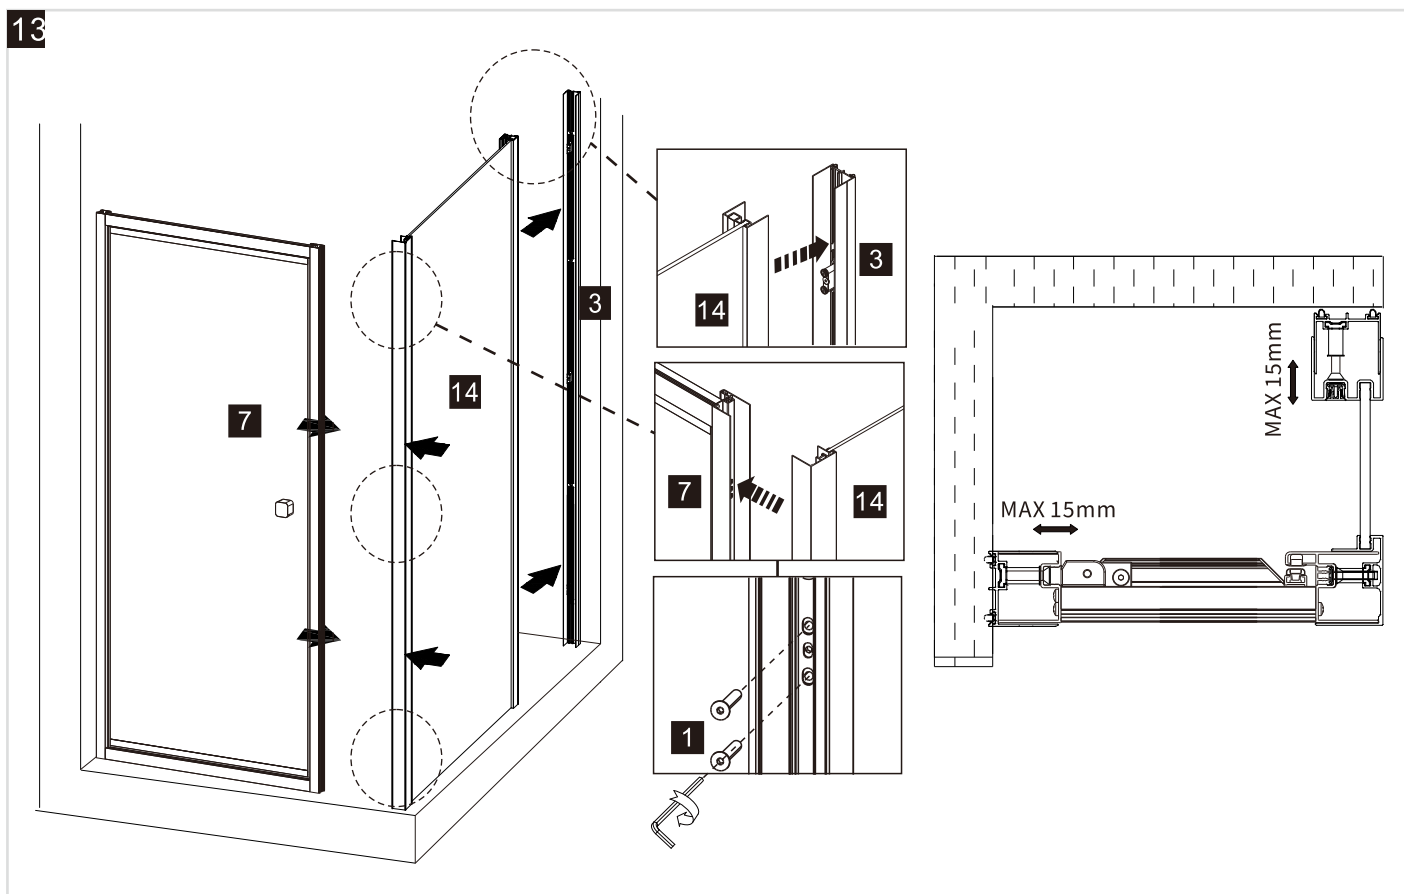


14

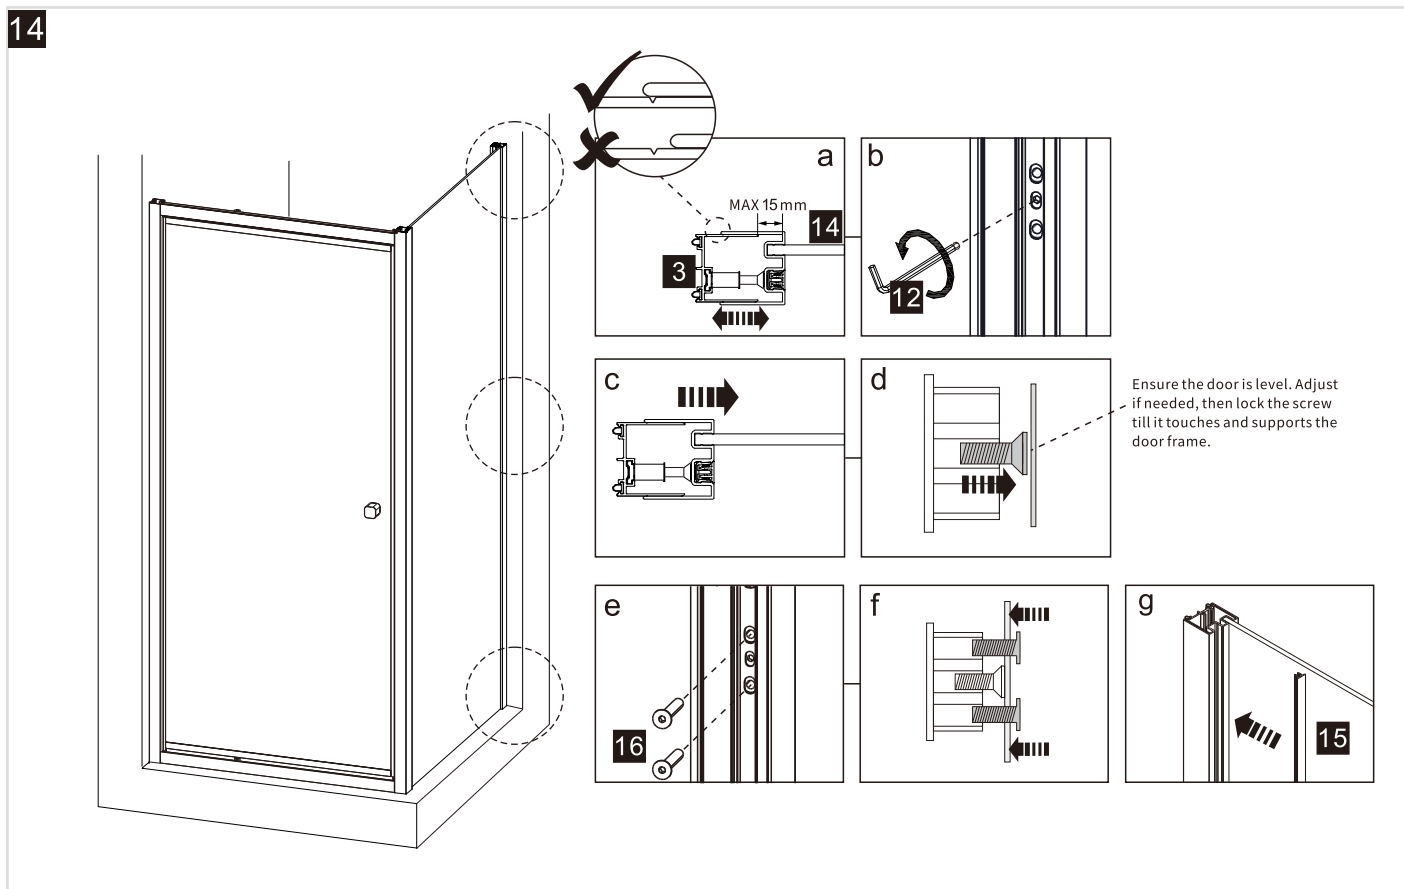

INSTALLATION

15

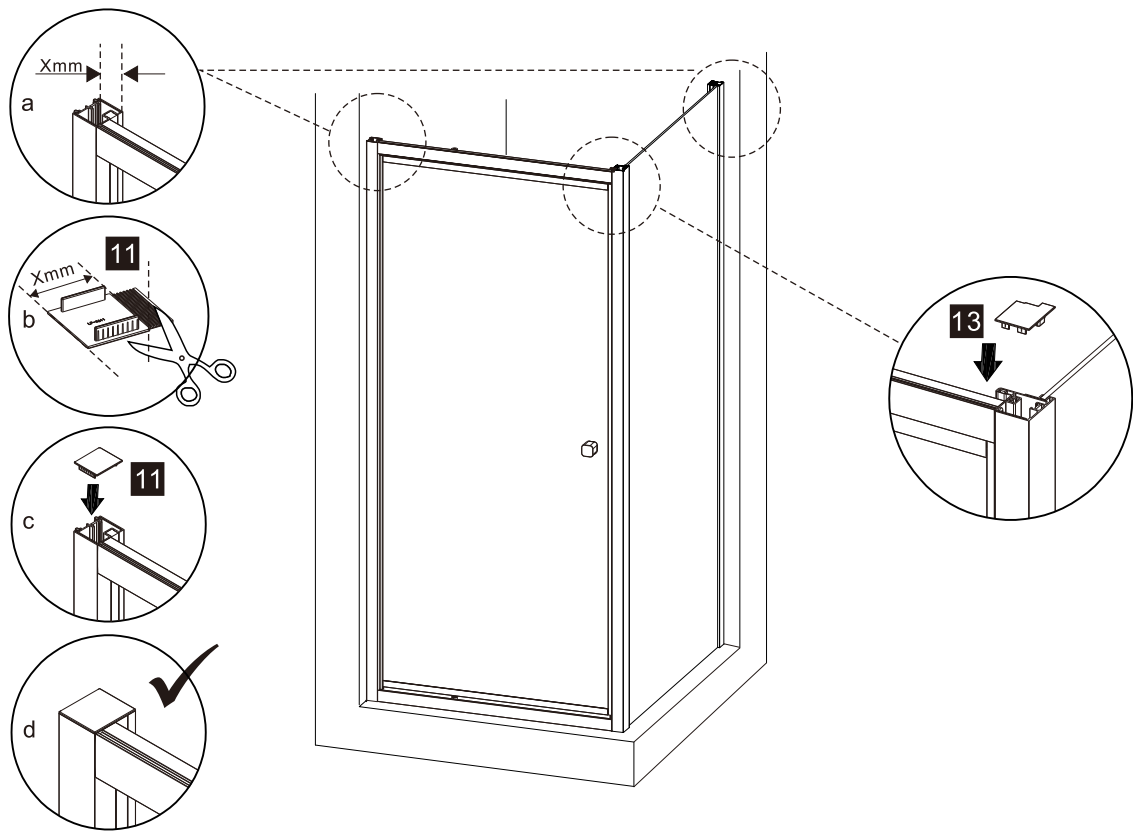

16

