

4

First shut off your heating system then, with your mains stop cock closed, open the Lowest hot and cold taps in the house and allow to run until the cold storage tank and pipes are empty (the hot water storage cylinder airways remains full). Where combination boilers are fitted it is only necessary to turn off the boiler and shut off the incoming mains. Fitting isolating valves to the inlet feeds is recommended for ease of maintenance.



Remember to turn off the mains water supply before connecting to any existing pipe work. Flush the piping with plenty of water prior to installation.

SPOUT

- Screw up the two flex tails (1) to the spout body, taking care to tighten well.
- Screw the threaded screws (3) into the body mixer, insert the o'ring (2) under the base of the mixer.
- Then, insert the mixer in the hole from above the basin, making the flex tails pass through first.
- Working below the basin, insert the specifically shaped rubber gasket (4) and the metallic insert (5) in the threaded screws (3).
- Tighten the nut (6) on the threaded fitting (3) taking care to correctly position the mixer onto the basin.

HANDLE


- Working under the basin, screw the fixing nut (7) into tap body (8), insert the flange (9) and gasket (10), then place the handle body under the hole of basin.
- Working under the basin, insert the gasket (11) under the handle basin (12) and screw it onto the tap body. Screw the valve cover (13) and fix the handle (14) with an allen key.
- Connect the flex tails at the tap body (15) and at the filters (not supplied), then connect to the water system.

5

crosswater^x

WO130DNC

The chrome plate we use on our taps is very durable, nevertheless care should be taken when cleaning them. They should be cleaned only with warm soapy water followed by rinsing with clean water and drying with a soft cloth. All finishes are vulnerable to acid attack and some strong substances such as household cleaners, disinfectants, denture cleaners, hair dyes, wine making and photographic chemicals can cause the surface to go black or peel.

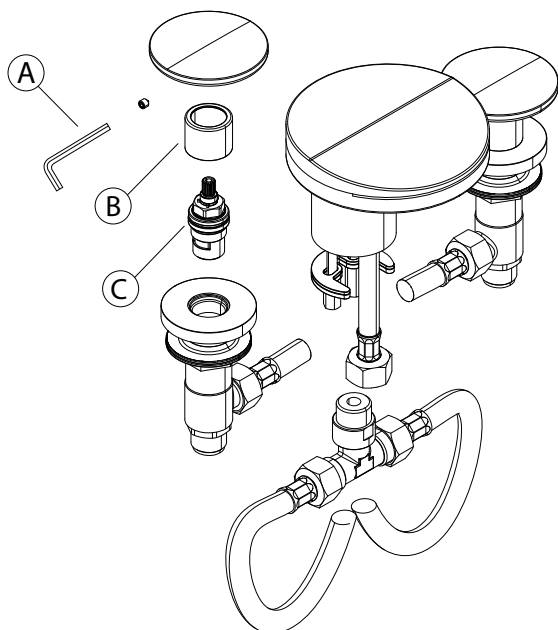


CLEANING THE CARTRIDGE

The concealed valve should give trouble free service, but in the event of any problems, servicing is straight forward. First shut off the water supply to the tap. With an allen key (A) loosen the grub screw in handle, but do not remove it. Remove the handle and unscrew the valve cover (B) and carefully using a correct size spanner unscrew the valve (C). Wash the valve with clean running water and make sure that any trapped debris have been removed. Dry and lightly grease the seals (only use silicone grease) and replace the valve, retaining nut, valve cover followed by the handle.

6

7

crosswater^x

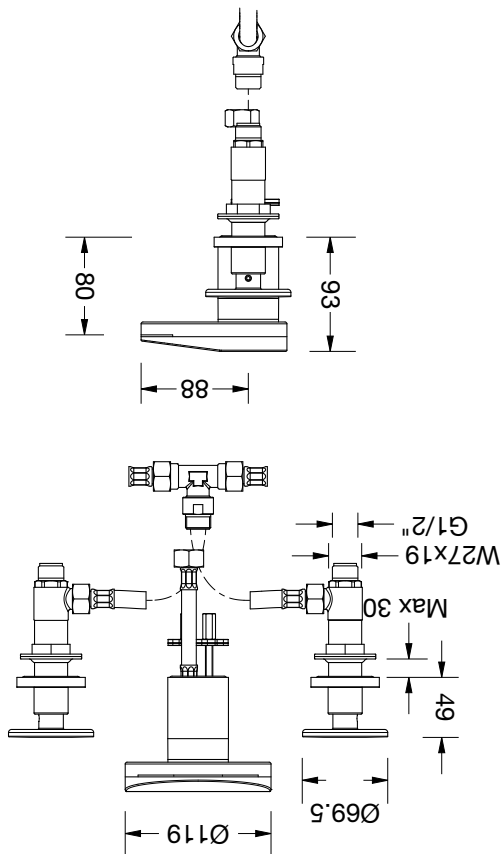

WO130DNC

DIMENSIONS

This product should only be fitted by a qualified plumber to NQV (National Vocational Qualification) or SNVQ (Scottish National Vocational Qualification) Level 3. Should the Installation be completed by a non-qualified person then the guarantee may be considered invalid.

For a claim made under our warranty written certification of your installers credentials can be required. For further information or to find a qualified installer in your area please visit the Institute of Plumbers website - www.iphe.org.uk.

THE QUALIFICATIONS

At present, to be a plumber you need to follow the National Vocational Qualification (NVQ) route (Scottish National Vocational Qualification-SNVQ-in Scotland). These qualifications are made up of theory and practical work in the classroom/purpose built training facility and work based experience with a working plumber. Colleges should help students find a work placement, although many students organize it themselves.

The S7NVQ qualification works in levels. All recently qualified plumbers should hold S7NVQ level 2 as basic with Level 3 as the preferred level. Level 2 will give you the foundation you need for a career in plumbing and teach you domestic plumbing to a satisfactory level. Level 3 is more comprehensive and deals with domestic, commercial and industrial plumbing along with aspects such as gas - if you want to one day set up your own business, this is the level to reach. The Institute of Plumbing and Heating Engineering, and the industry as a whole recommend that all plumbers reach a minimum of Level 3.

Reaching Level 3 has other advantages. The Institute runs a Master Plumber Certificate, which only those attaining Level 3 or equivalent can reach as long as they have the relevant experience as well. Those with S/NVQ Level 3 can (once in membership with the Institute for five years as a member MIPHE) gain Engineering Technician EngTech status with the Engineering Council (UK).

For any further information please contact Crosswater on: **0845 873 8840**

Or visit our web-site at www.crosswater.co.uk

The manufacturer reserves the right to make technical modifications without prior notice



- Clean Carefully the water Pipes Before Installing The Tap.
- Installation Performed By Qualified Personnel Only!

WARNING

turn the boiler off and non return valves are not required.
combination boilers are fitted it is only necessary to shut off the incoming mains and hot and cold pipes as close as possible to the tap. These are not supplied. Where supplied from a tank and cold from the mains, non return valves are fitted on both. These taps are double flow. Water bylaw require that where the hot water is

Preparation and bylaw requirements

applicable.
All product are manufactured using materials tested and approved under the Water Bylaws Scheme and comply with requirements of British Standard 5412:1996 where

Approvals

claimable under the warranty.
installation process, incorrect maintenance or misuse and as a result not be
- on receipt of this product the chrome finish must be checked for blemishes.
product may not correctly work or not work at all.
- if the above mentioned conditions (see points 1,2,3,4) are not observed, the

1. Recommended working pressure:.....1 Bar
2. Maximum test pressure:.....5 Bar
3. Maximum hot water temperature:.....80° C
4. We recommend installing filters to this product.
5. Warning:

Standard specifications

thoroughly after installation to avoid damaging the ceramic disc.
valves on both hot and cold feeds. It is very important that all pipe work is flushed
then the tap will not function correctly. It will also be necessary to fit non-return
combination boiler for example). If the taps are not supplied at balanced pressures
at balanced pressures, both from the tank or both from the mains (via a
cold water are separated) and should therefore be supplied with hot and cold water
contained in their bylaws. All of the taps in this range are double flow (the hot and
The installation must comply with regulations of the Local Water Authority as

General Installation Requirements**reference.**

Please read these instructions carefully and keep in a safe place for future

INTRODUCTION

WASHBASIN MIXER

WO130DNC

