

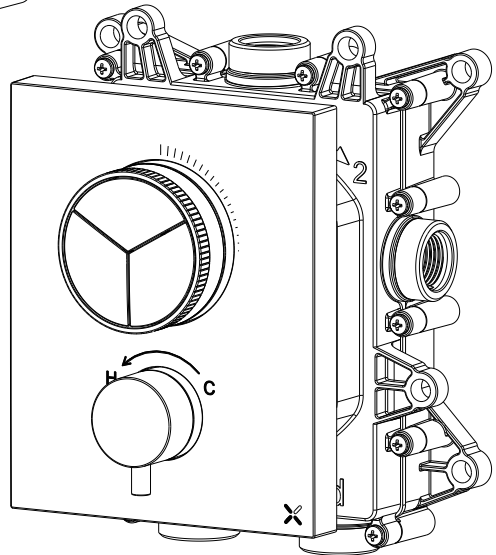
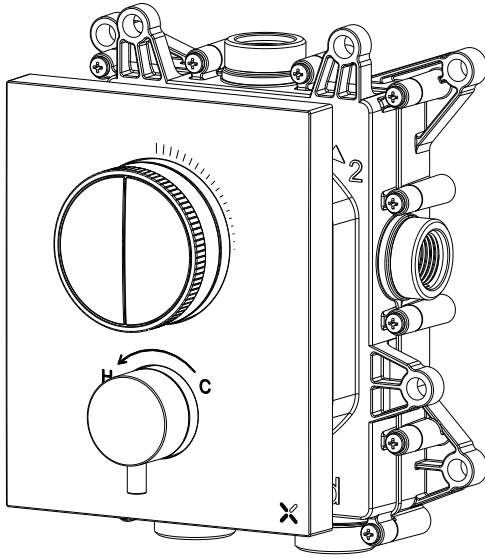
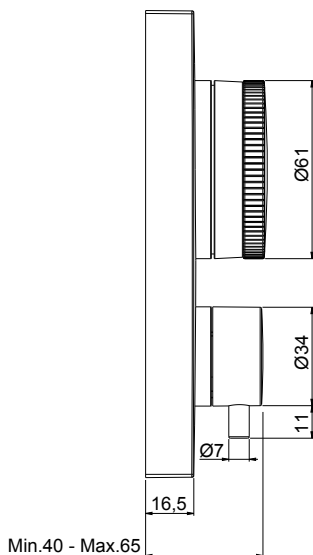
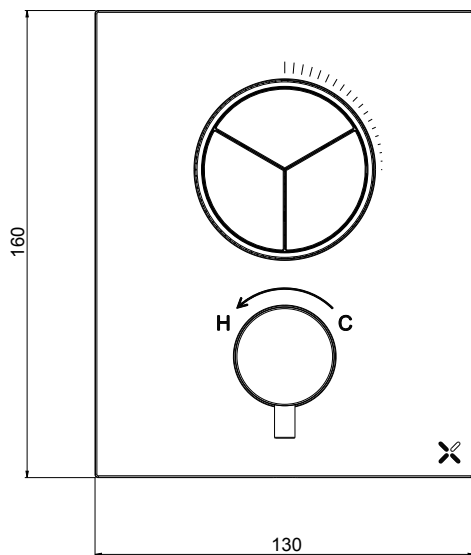


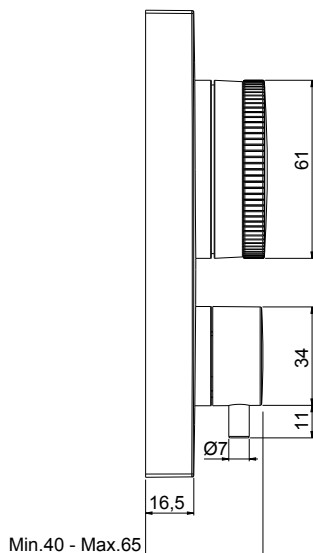

Completion Concealed Box

Mounting Instructions

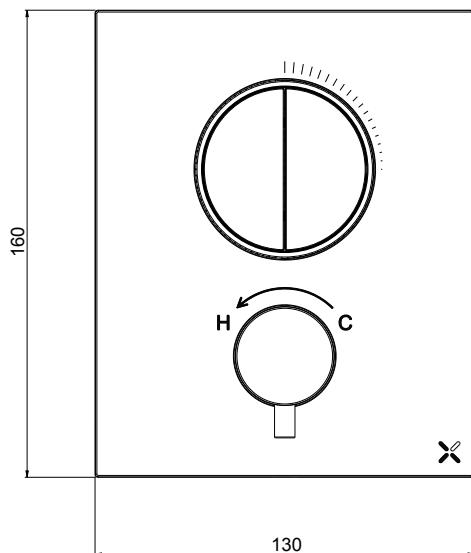

Pressure range min/max 0,5/5 bar
(in case of water pressure higher than 5 bar we recommend installing pressure reducers).

Recommended pressure 3 bar.

Operation:

Either with gas or electric accumulation boilers.

Centralized systems.

The product should only be installed by a suitably qualified plumber/installer.

Safety lock at: 41°

Min. Working temperature: 3°C

Min. recommended: 15°C



Max. Working temperature: 70°C




Max. recommended: 65°C



Recommended thermal differential 50°C

Thermal disinfection is allowed. Safety system with flow stop in case of lack of one of the two waters.






Warning: contact the plumber for the choice of the best water heating device.

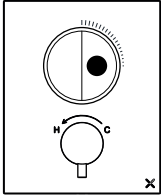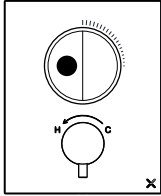Press.	FLOW RATE (L/min)			
bar	Push button 2 ways			
	 Exit 1		 Exit 2	
	min.	max.	min.	max.
	1,5	7,5	1,5	7,5
	2,3	11,3	2,3	11,2
	3,5	16,5	3,5	16
	4,5	20,5	4,5	20
4	5,5	23,7	5,2	22,8
5	5,7	26,5	5,7	25,5

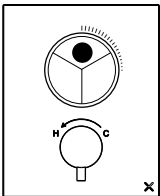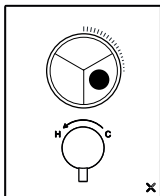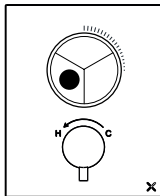Press.	FLOW RATE (L/min)					
bar	Push button 3 ways					
						
	Exit 1		Exit 2		Exit 3	
	min.	max.	min.	max.	min.	max.
	0,5	1,8 8,1	1,8	7,7	1,8	7,7
	1	2,7 11,8	2,6	11,5	2,6	11,5
	2	3,9 16,8	3,9	16,7	3,9	16,7
	3	4,8 20,7	4,8	20,5	4,8	20,5
	4	5,5 24	5,5	23,7	5,5	23,7
	5	6,2 26,7	6,2	26,6	6,2	26,6










THERMOSTATIC 2-3 WAYS

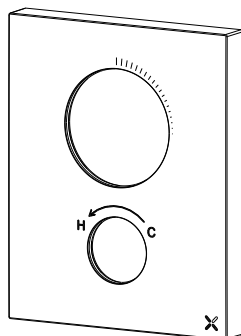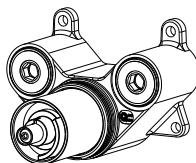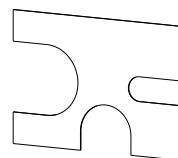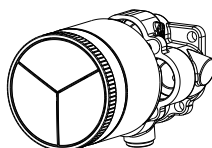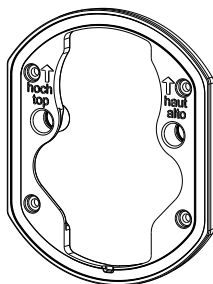



Mounting instructions



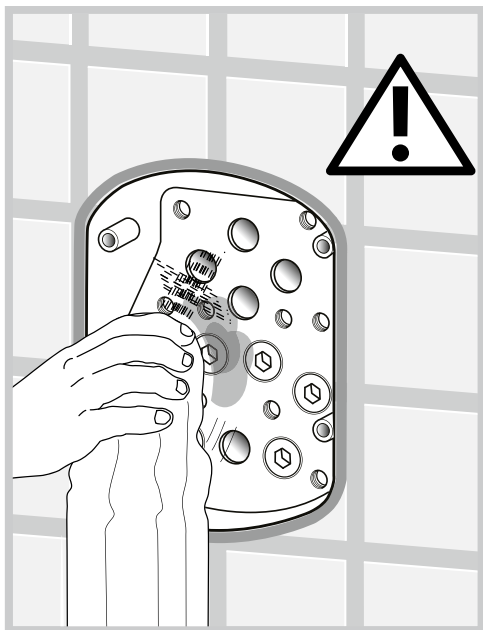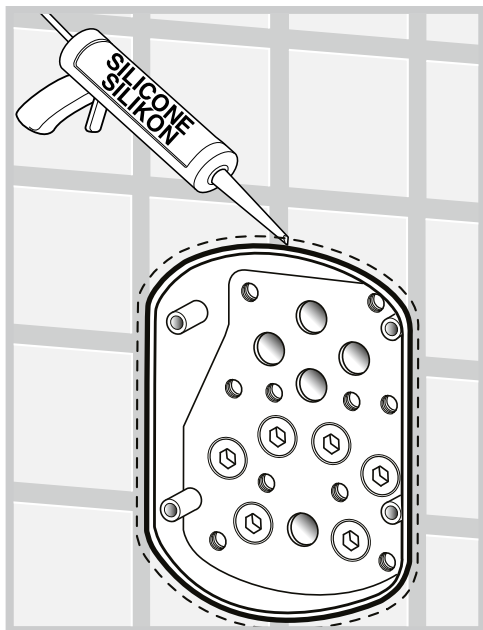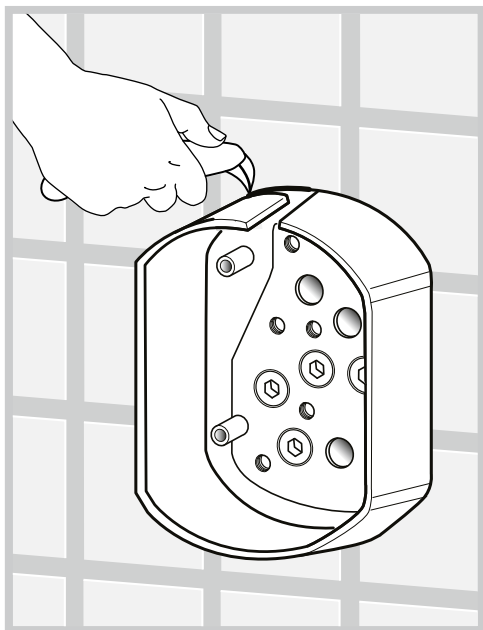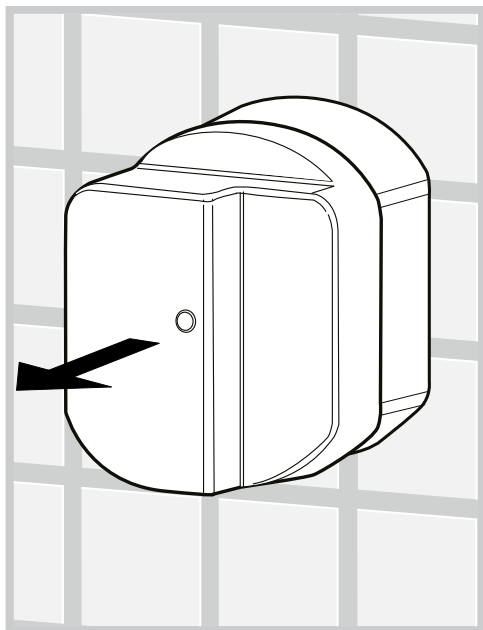


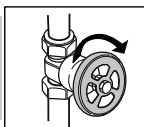


CLOSED




1


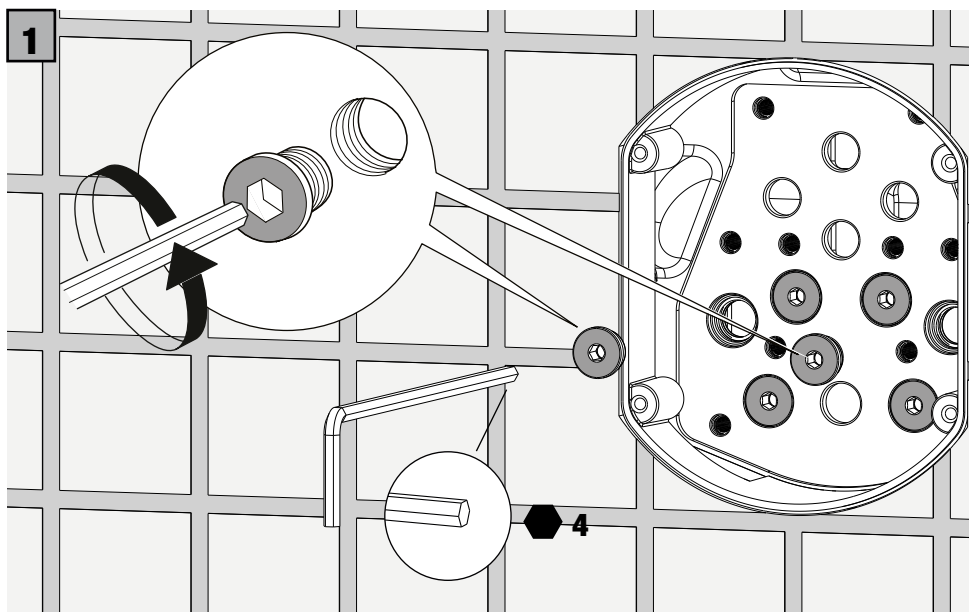


2

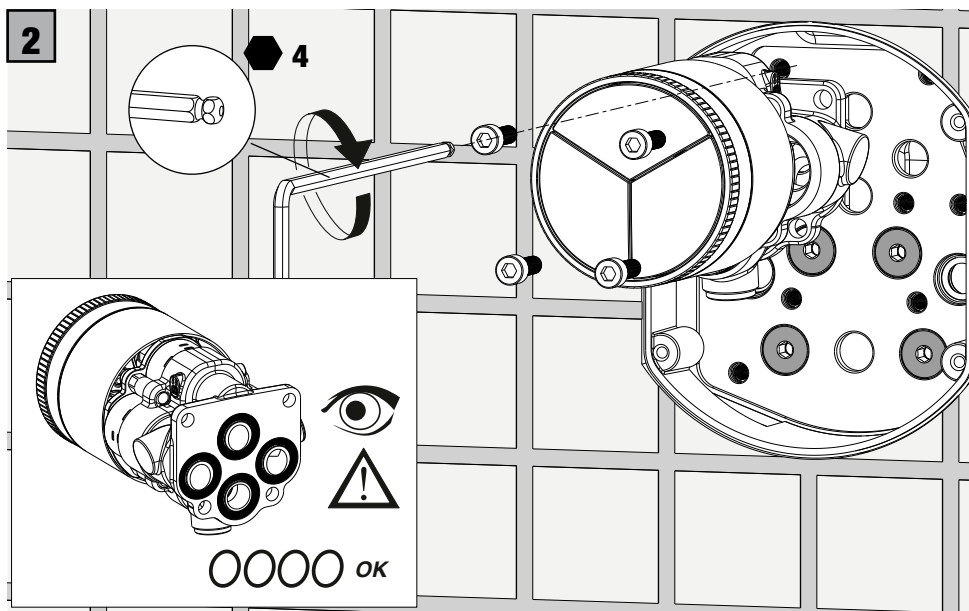


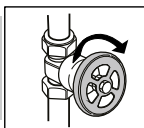



CLOSED








3

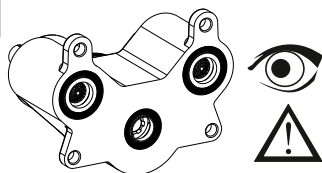


000 OK

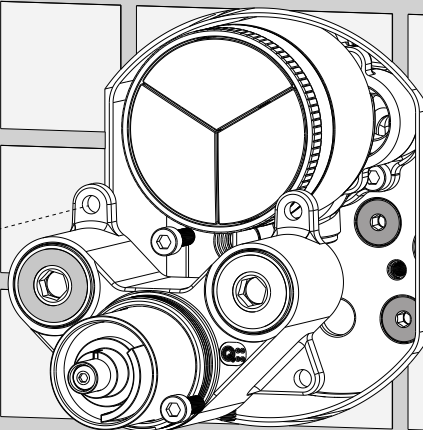
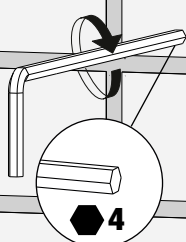


4

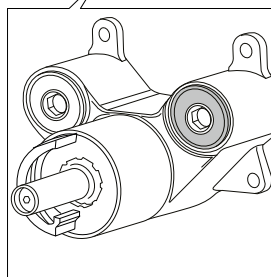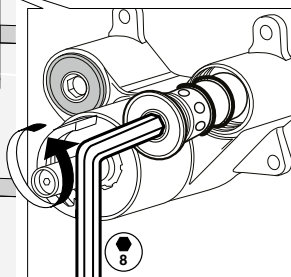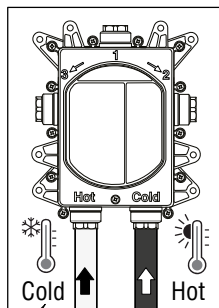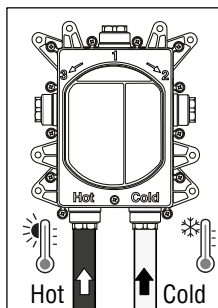
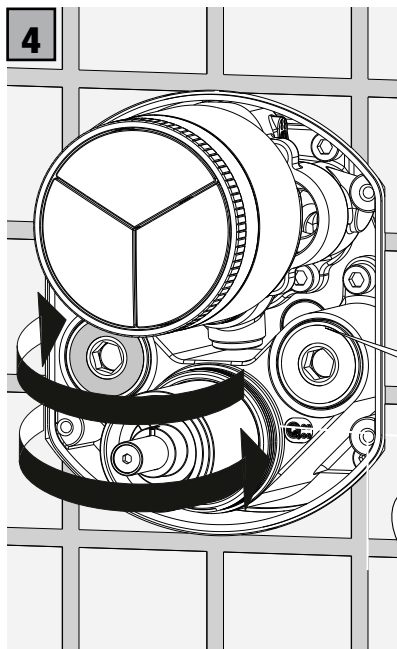


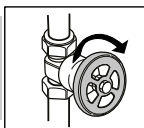



CLOSED



5

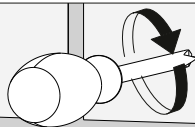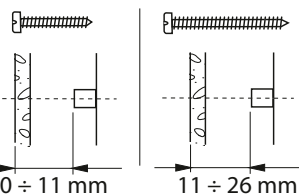hoch
tophaut
alto

6

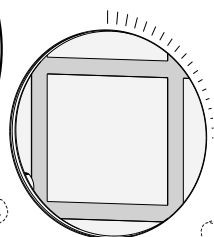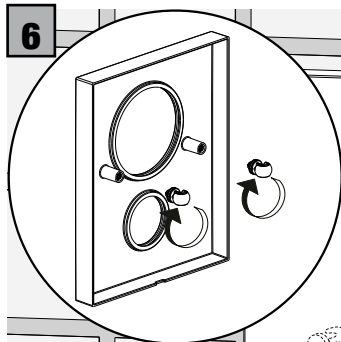


SOAP




Run liquid soap over the O-rings to facilitate plate's insertion



H

C



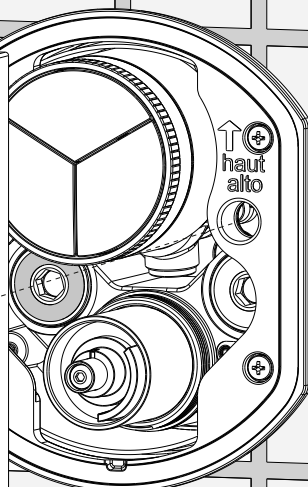
haut
alto

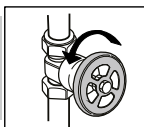


OPEN




7

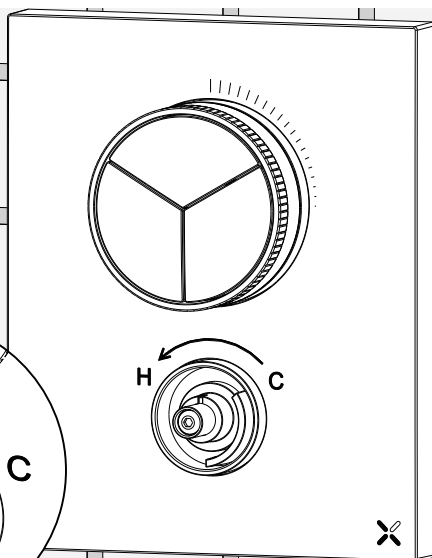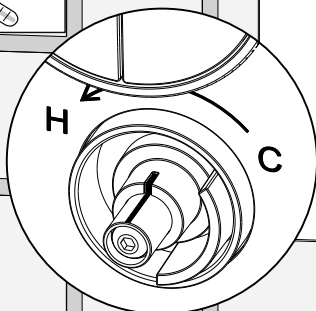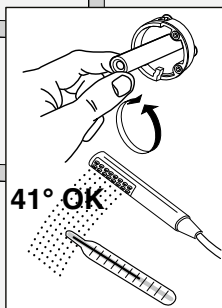


8


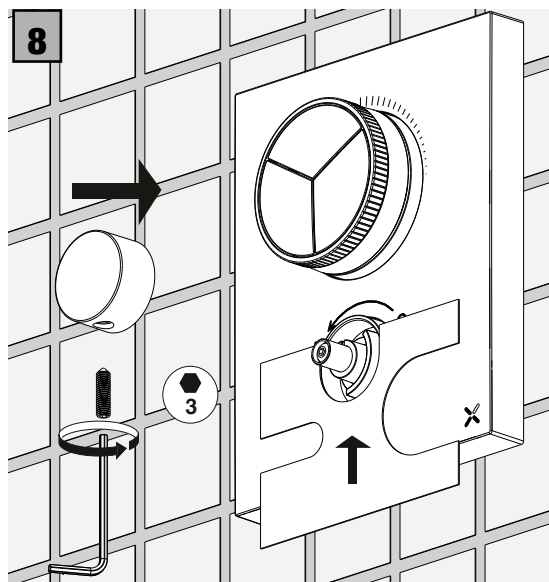


9

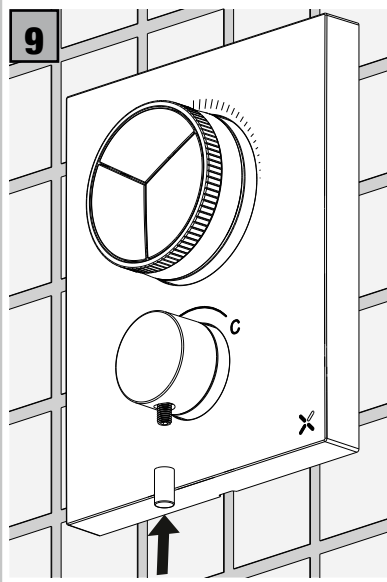


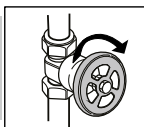





CLOSED




1


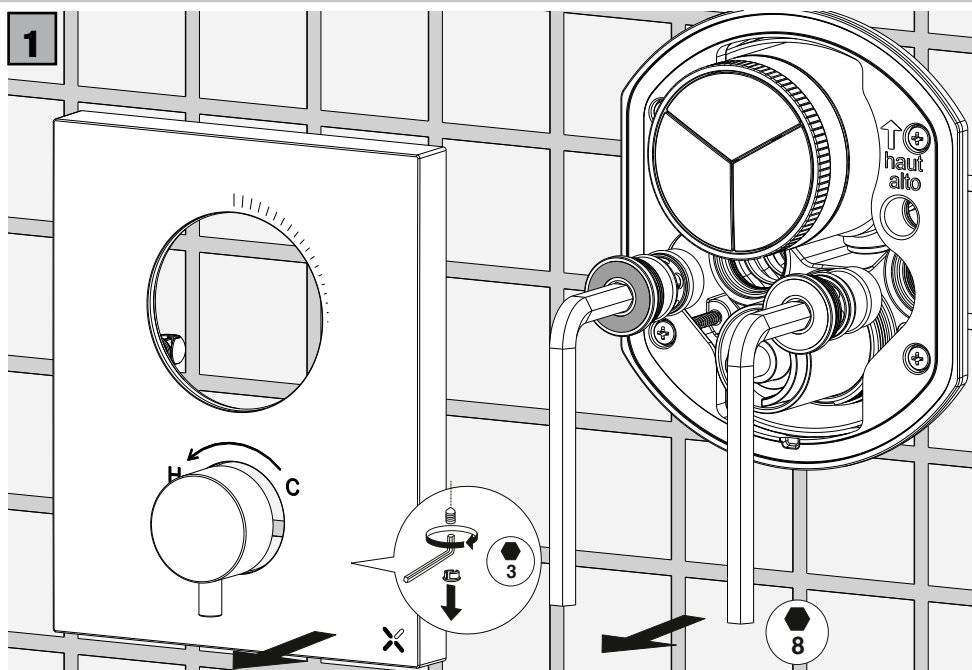


2

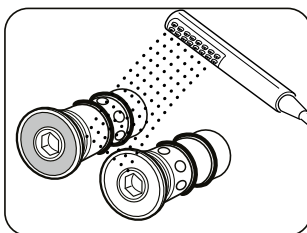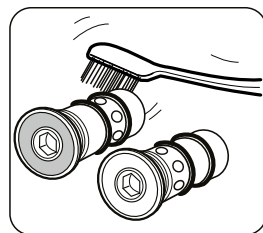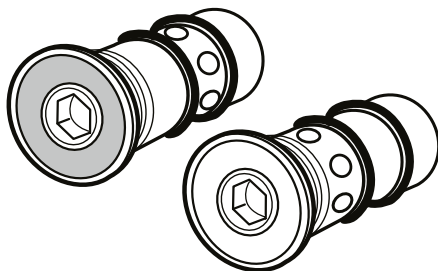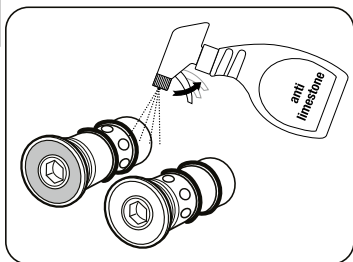


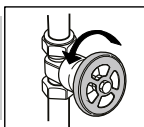




OPEN

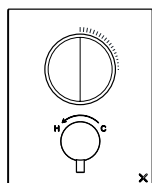**THERMOSTATIC 2 WAYS**


stop

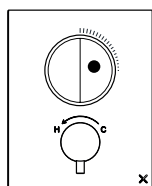



1 way

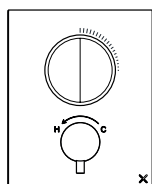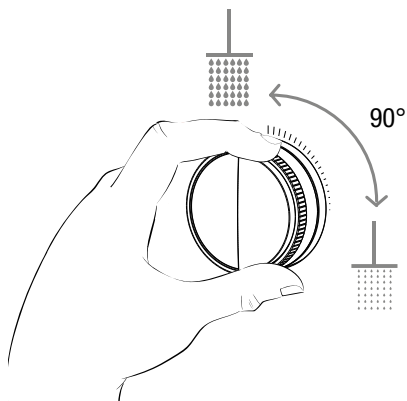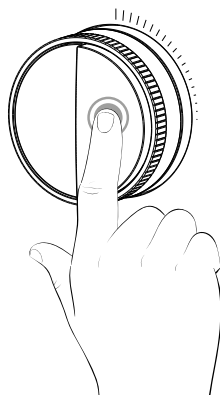


stop

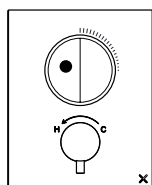


2 way

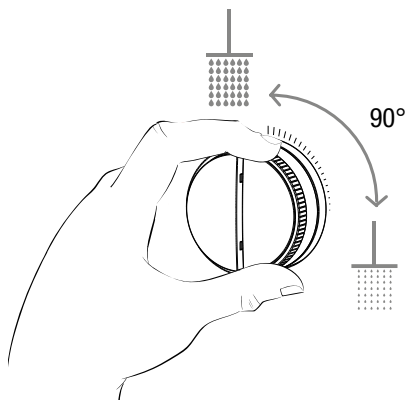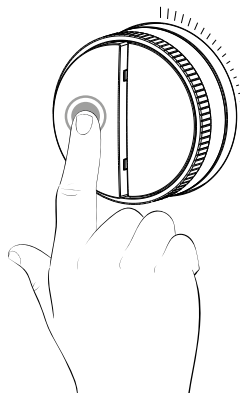


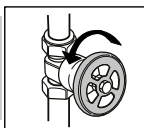

OPEN






THERMOSTATIC 3 WAYS

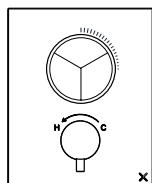


stop

"click"

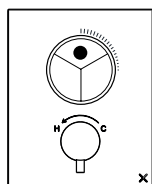
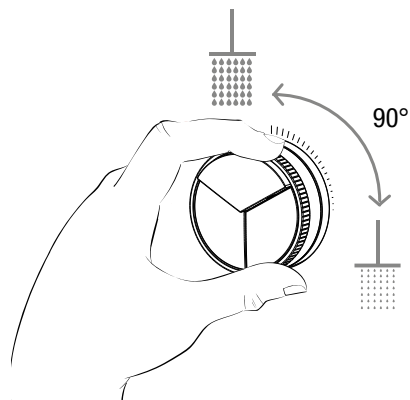
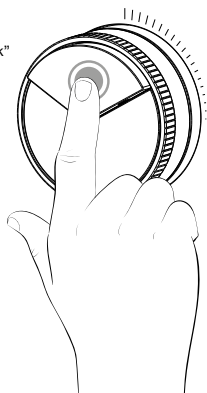


1 way

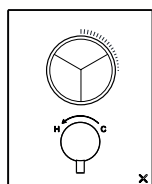


stop

"click"

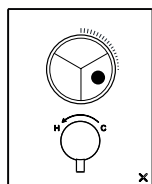
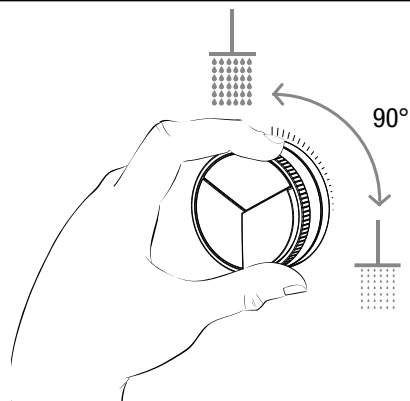
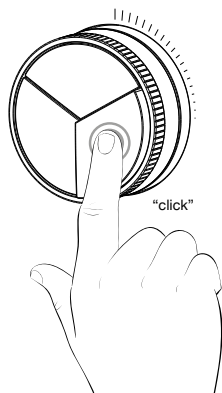


2 way

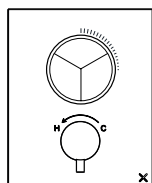

stop

"click"

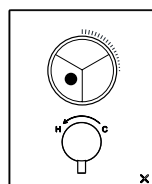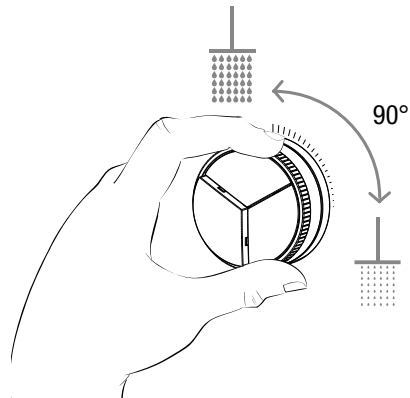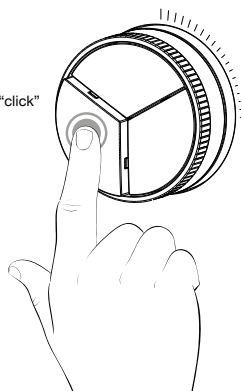

3 way

EN I CLEANING

Clean surfaces using only water or neutral detergents and dry with a soft cloth.

Never use abrasive or corrosive detergents or products containing hydrochloric acid, phosphoric acid, ammonia or bleach.

Do not use sponges or abrasive cloths.

It is recommended to clean the surfaces periodically, in order to not create situations of excessive dirt which is difficult to eliminate.

ATTENTION: the use of not-recommended products may irreparably deteriorate surfaces.

